Grenton

User Manual

Grenton 2

Document version: 1.0.12

Date: 2023-08-25

Table of Contents

Important information

I. System structure

II. Foundation - Grenton Logical Interface

- 1. Introduction
- 2. Features
 - 2.1. Built-in features
 - 2.2. User features
- 3. Methods
- 4. Events
- 5. Features and methods addresses

III. Project preparation

- 1. Electrical system preparation
- 2. System architecture selection
- 3. Modules power supply

IV. Components installation

- 1. Modules installation in the switching action
- 2. Flush-mounted wire modules installation
- 3. Z-Wave flush-mounted modules installation

V. Object Manager

- 1. OM installation
 - A. Windows
 - B. macOS
 - C. Linux
- 2. OM structure
 - 2.1. Object filtering
 - 2.2. Renaming an object
- 3. Project files
 - 3.1. Saved projects catalogue
 - 3.2. Project backup
- 4. Basic elements
 - 4.1. Objects configurator
 - 4.2. Script builder
 - 4.3. Connections diagram
 - 4.4. Visual Builder

4.5. myGrenton

4.6. Bin

VI. Basic system configuration

1. Connecting OM to CLU

2. IP adressess

3. Creating new project

- 4. CLU Discovery function
 - 4.1. Adding modules to the project
 - 4.2. Replacing / Reassigning modules during Discovery process
- 5. CLU status
 - 5.1. Module diodes
 - 5.2. CLU module icon in OM
- 6. Connecting Z-Wave modules
 - 6.1. Adding Z-Wave modules
 - 6.2. Removal of Z-Wave modules
 - 6.3. No communication with the Z-Wave module a mechanism for counting communication failures and blocking device communication in the Z-Wave network
 - 6.4. Z-Wave network configuration tips
 - 6.5. Clearing information about nodes
- 7. Sending the configuration to the CLU
- 8. Initial values of features
- 9. Creating basic connections
- 10. Performing an update

10.1. The process of updating the interface database

- 10.2. The process of updating the firmware on the CLU
- 10.3. The process of updating the firmware of the 2.0 series modules
- 10.4. CLU / modules status in the firmware update window
- 10.5 Forcing the module update
- 11. Diagnostic view
 - 11.1 Configuration of the diagnostic view
- 12. Other operations on the system

VII. Advanced configuration functions

- 1. Containers
- 2. Scripts
 - 2.1. Script creation in the graphic mode
 - 2.2. Script creation in the editor
 - 2.3. Script parameters
 - 2.4. Scripts invocation
 - 2.4. Find / Replace function
 - 2.5. Copying scripts
- 3. Date and time

VIII. Visual Builder - Smartphone control

- 1. System control on the level of smartphone
- 2. Interface structure
- 3. Application for smartphone GRENTON HOME MANAGER
- 4. New interface creation
 - 4.1. Graphic skin selection
 - 4.2. Interface pages creation
 - 4.3. Components
 - 4.4. Panels
 - 4.5. Containers
 - 4.6. Adding components and connecting to the system objects
 - 4.7. Sending interface to mobile device
- 5. Automatic interface creation GUI generator
 - 5.1. Creating an interface with available resolution
 - 5.2. Creating an interface with its own resolution

- 5.3. Changing the orientation of the interface with its own resolution
- 6. Video intercom configuration
 - 6.1. Connection and configuration of a video intercom
 - 6.2. Creation and configuration of the application interface
 - 6.3. Making a call from the intercom
- 7. IP cameras image operation
- 8. Remote access of the mobile application to the system
 - 8.1. System configuration
 - 8.2. Port routing setting on the local network router
 - 8.3. Configuration of the Home Manager mobile application
 - 8.4. Starting remote access

IX. CLU Objects

- 1. Timers
- 2. Calendar
- 3. Schedule
- 4. PID controller
- 5. Thermostat
- 6. Push
- 7. Presence Sensor
- 8. Sunrise and Sunset Calendar
- 9. Event Scheduler

X. Media measurement

- 1. Virtual media measurement
 - 1.1. Launching media measurement on the Object Manager page
 - 1.2. Using media measurement on the Home Manager application side
- 2. Real media measurement
 - 2.1. Real media measurement settings in Object Manager

XI. CLU service functions

- 1. Restoring factory settings CLU Hard Reset
- 2. System diagnostics Save the diagnostic package

XII. SMART PANEL

- 1. Smart Panel equipment
- 2. Connection of the Smart Panel to the CLU
- 3. Information to help you create a configuration
- 4. Configuration of the Smart Panel module in the version v3
 - 4.1. Configuration parameters
 - 4.2 Creating button and display configurations
 - 4.3 Creating a gesture sensor configuration
 - 4.4 Configuration of the proximity sensor
 - 4.5 Creating a multi-panel configuration of the touch panel
- 5. Configuration of the Smart Panel v4
 - 5.1. Configuration parameters
 - 5.2. Creating a gesture sensor configuration
 - 5.3. Configuration of the proximity sensor
 - 5.4. Panel object new functionality
 - 5.5. Panel object page management mechanism
 - 5.6. Backward compatibility
 - 5.7. Creating a configuration using the Buttons page object
 - 5.8. Creating a configuration using the FreeDraw site object
 - 5.9. Creating a configuration using the Thermostats page object
 - 5.10. Connecting objects to larger buttons
- 6. Configuration of the Smart Panel v6
 - 6.1. Configuration parameters
 - 6.2. New functionality
 - 6.3. Changing the UI and the mechanism of operation of Thermostats pages

XIII. GATE ALARM Module

- 1. General information
- 2. Module configuration
- 3. Integration with the Satel alarm control panel
 - 3.1. General information
 - 3.2. Configuration for the Satel system
 - 3.3. Virtual Objects
- 4. Integration with the Jablotron control panel
 - 4.1. General information
 - 4.2. Configuration for the Jablotron system
 - 4.3. Virtual objects
- 5. Virtual object Timer
- 6. Restoring factory settings Hard Reset
- 7. Configuration parameters

XIV. GATE MODBUS Module

- 1. General information
- 2. Module configuration
 - 2.1. Time setting via NTP server
 - 2.2. Modbus virtual object configuration
 - 2.3. ModbusValue virtual object configuration
- 3. Parameters of registers
 - 3.1. Virtual object Modbus
 - 3.2. Virtual object ModbusValue
- 4. Restoring factory settings Hard Reset
- 5. Configuration parameters

XV. GATE HTTP Module

- 1. General information
- 2. Module configuration
- 2.1. Virtual objects
 - 2.1.1. HTTP Request
 - 2.1.2. Downloading certain values from the received response (XML, JSON)
 - 2.2.1. HttpListener
 - 2.2.2. Preparation of the response sent to the server
 - 2.2.3. Reading key values from the querystringparams parameter
 - 2.3.1. Timer
 - 2.4.1. Sonos
 - 2.5.1. MusicCast
 - 2.6.1. CoolMasterNet
 - 2.7.1. CoolMaster
- 3. The ability to connect to the Gate using TELNET
- 4. Comprehensive integration with external systems using the GATE Http device
 - 4.1. System
 - 4.2. Output control
 - 4.3. Status download
 - 4.4. Event order
 - 4.5. Event synchronization
 - 4.6. Feedback confirmation
 - 4.7. Timeout
 - 4.8. A lot of objects
 - 4.9. Status for the complex system
 - 4.10. Push Notifications
- 5. Restoring factory settings Hard Reset
- 6. Configuration parameters

XVI. DALI Controller Module

- 1. General information
- 2. Module configuration

XVII. Z-Wave modules

1. Fibaro UBS 1.1. General information 1.2. Objects 2. NEO Coolcam Motion Sensor (PIR) 2.1. General information 2.2. Objects 3. NEO Coolcam Door / Window Sensor 3.1. General information 3.2. Objects 4. INFIBITY Motion Sensor (PIR) [NEO Coolcam] 4.1. General information 4.2. Objects 5. INFIBITY Door/Window Sensor [NEO Coolcam] 5.1. General information 5.2. Objects 6. INFIBITY Water Sensor [NEO Coolcam] 6.1. General information 6.2. Objects 7. Heiman Smart Smoke Sensor 7.1. General information 7.2. Objects 8. INFIBITY Siren Alarm [NEO Coolcam] 8.1. General information 8.2. Objects 9. Danfoss Living Connect 9.1. General information 9.2. Objects 10. POPP Z-Weather 10.1. General information 10.2. Objects 11. FAKRO AMZ Solar 11.1. General information 11.2. Objects 12. FAKRO ARF 12.1. General information 12.2. Objects 13. FAKRO FTP_V 13.1. General information 13.2. Objects 14. FAKRO ZWMR 24 14.1. General information 14.2. Objects 15. FAKRO ZWS 230 15.1. General information 15.2. Objects 16. Fibaro RGBW 16.1. General information 16.2. Objects 17. Remotec ZXT-120 17.1. General information 17.2. Description of device configuration 17.3. Objects 18. Remotec ZXT-310 18.1. General information 18.2. Device configuration

18.3. Objects

19. Aeotec Nano Switch 19.1. General information

19.2. Objects

20. Aeotec Dual Nano Switch 20.1. General information 20.2. Objects

21. Aeotec Nano Dimmer

21.1. General information

21.2. Objects

22. Aeotec Nano Shutter 22.1. General information 22.2. Objects

- 23. Aeotec Nano Shutter (V2) 23.1. General information 23.2. Objects
- 24. Aeotec Smart Switch 7 24.1. General information

24.2. Objects

25. Aeotec Multisensor 6

25.1. General information

25.2. Objects

XVIII. myGrenton mobile application

1. Installation and first launch of the myGrenton application

1.1. Installation

1.2. First start-up, demonstration interface

2. Creating the interface

2.1. Adding a page to the interface

- 2.2. Deleting a page from the interface
- 2.3. Copying the interface
- 3. Widgets
 - 3.1. Header (HEADER)
 - 3.2. Value (VALUE)
 - 3.3. Value v2 (VALUE_V2)
 - 3.4. Value Double (VALUE_DOUBLE)
 - 3.5. On/Off (ON_OFF)
 - 3.6. On/Off Double (ON_OFF_DOUBLE)
 - 3.7. Scene (SCENE)
 - 3.8. Scene Double (SCENE_DOUBLE)
 - 3.9. Dimmer (DIMMER)
 - 3.10. Dimmer v2 (DIMMER_V2)

3.11. LED Lighting (LED)

3.12. Thermostat (THERMOSTAT)

3.13. Roller Shutter (ROLLER_SHUTTER)

3.14. Roller Shutter v2 (ROLLER_SHUTTER_V2)

- 3.15. Roller Shutter v3 (ROLLER_SHUTTER_V3)
- 3.16. Camera (CAMERA)
- 3.17. Text (TEXT)

3.18. Scheduler (SCHEDULER)

3.19. Event Scheduler (EVENT_SCHEDULER)

3.20. Multisensor (MULTISENSOR)

3.21. TV Remote Control (TV_REMOTE_CONTROL)

3.22. Audio Remote Control (AUDIO_REMOTE_CONTROL)

3.22. Contact Sensor (CONTACT_SENSOR)

3.23. Contact Sensor Double (CONTACT_SENSOR_DOUBLE)

3.24. Slider (SLIDER)

3.25. Air conditioning (COOL_MASTER)

3.26. Personalization of the widget

3.27. Widget removal

3.28. Copying widgets

3.29. Run the SCENE widget using Shortcuts.

4. Personalization of the interface

4.1. Change the name of the interface

4.2. Change the interface icon

4.3. Change the color of the interface

4.4. Blocking access through the cloud

5. Sending the interface to the device

5.1. Sending myGrenton interface to your phone using a QR code or manually

5.2. Sharing myGrenton interface via the cloud

6. Application and interface settings

6.1. Application settings

6.2. Interface Settings

XIX. Grenton 2.0 Logic Distribution

1. Configuration of the Distributed Logic mode

1.1. Operation of Distributed Logic between DIN and output objects

1.2. Operation of Distributed Logic between BUTTON and output objects

1.3. Operation of Distributed Logic between PANEL_PAGE with PANEL_BUTTON and output objects

2. Default Mode

2.1. Default Mode for input modules and output modules

2.2. Default Mode for modules with their own inputs / outputs

3. Restoring communication between the CLU and the module

Important information

Note!

This documentation covers the functionalities and operating principles for Grenton 2.0 series modules. The functional description for the Object Manager as well as the Home Manager is preserved. The myGrenton application is completely compatible with Grenton 2.0 systems - in the case of 1.0 systems, access to specific functions may be limited or completely unavailable.

I. System structure

GRENTON Smart Building System was designed to operate small, medium, and large objects. System created on its basis can be easily modified, expanded, and integrated with other systems.

The system consists of: CLU modules, IOM modules, Object Manager, sensors, and applications for smartphone

- CLU (Common Logic Unit) modules. Their function is to process logic and store configurations. CLU is a basis of every system. CLU modules communicate with each other using system bus, working on the basis of standard Ethernet 100 Mbps. CLU module ensures also communication with IOM modules using field bus.
- IOM modules fulfil function of inputs/outputs. They are connected to CLU through TFBus field bus
 or in a wireless way, using Z-wave standard. IOM modules may include various types of
 inputs/outputs, such as relays, switches, light sensors, temperature sensors etc., and their
 combinations.
- Object Manager Software that enables configuration of system, logical functions, etc.
- Control applications they allow activation of designed in OM graphic user interfaces, that enable system functions control using smartphones, tablets, PCs, TV sets, etc.

System configuration is stored as a project file and set using Object Manager (OM) software. Set configuration is then sent to the CLU modules which store it in their memory. IOM modules do not store configuration, they are controlled directly from CLU which they are connected to.

In the case of losing project OM file, downloading data from CLU is recommended. However, downloading data from CLU is assosiated with losses of: graphic view of scripts, containers, mobile interfaces and objects types (source/load).



II. Foundation - Grenton Logical Interface

1. Introduction

GRENTON system works on the basis of event driven model. Household members and their environment cause generation of events in the system, to which system reactions are connected, e. g. turning on the lamp in response to pressing a switch.

Objects are a basis of the logical interface. In GRENTON system, each object behaves and is treated as a physical object, e. g. a ball. Each object has its own features, we can perform certain actions on it, and it can cause events. In reference to the ball: it is red (so it has its own features), we can kick it (thus controlling it), and it can knock over a

bottle while rolling (thus causing an event).

In the system each input and output has its own compilation of features, methods, and events, which is called its logical interface.

A solution unique for the GRENTON system is availability of each feature or method in any place of the system, on each CLU, regardless of where (on which CLU, input, or output) it is placed physically. Thus, it is possible to invoke methods from output connected to CLU A as a result of event that occurred within CLU B.

Moreover, every output has events specific for itself, which enables e.g. switching on one light as a consequence of switching on another. You can find full list of methods and features of each input / output in the catalogue card of the module.



2. Features

2.1. Built-in features

Built-in features is a group of parameters / information describing specific object (input, output, etc.). Some of these features can be set during system operation and are used to determine working method of an object (work mode of a button), while others can only be read, since e.g. they show physical parameters (temperature feature for thermometer).

2.2. User features

In CLU you can define features that will be used as variables in storing parameters during system operations, e.g. counters, markers (flags). User features can be used exactly as built-in features, except all user features can be saved and read.

The user feature name cannot contain spaces, special characters and cannot start with a number. The maximum name length is 100 characters.

Persistence

Note!

The described functionality is available for Object Manager version 1.8.0 or higher and CLU version 5.11.1 or higher.

Features for which persistence (restore) is checked save the value in memory after each change to them in the system. In case of a CLU restart, the features do not lose the value they had before the restart.

0							×
CLU p	roperties						
Name:	CLU221000540			Serial number:	221000540		
IP:	192.168.0.179			FW:	511		
1	Control 🏹 Events 🧃	F Embedded features 🙀 U	ser features				
\oplus	Add \ominus Delete	C Refresh					Erase memory
	Feature name	Current value	Initia	al value	Туј	pe	Persistency
	UserFeature1	Grenton Change	Grento	on String	STRING	-	\checkmark
	UserFeature2	Grenton String	Grento	on String	STRING	•	
	UserFeature3	1234	123	45678	NUMBER	۶ 👻	\checkmark
	UserFeature4	12345678	123	45678 NUMBER		२ 👻	
	UserFeature5	false	t	rue	BOOLEA	N -	\checkmark
	UserFeature6 false		false		BOOLEA	N -	
							Memory usage: 1%
							OK Cancel

Registering a feature in the system as persistent is done by selecting the checkbox in the Persistence column and then sending the configuration to the CLU. In order to deregister a feature, you must deselect it and send the configuration to the CLU.

Note!

The allowed length of a STRING type user feature with selected persistence is 1000 characters.

In the lower right part of the user features window, the amount of used memory is shown in %. The amount of memory used depends on the type, number of characters stored in the feature name and the value itself.

After exceeding the memory limit, further added features are no longer persistent. The same applies to the situation when the memory overrun occurs for features that are already registered in the system as persistent, but their value (e.g. after a change) exceeds the limit.

When the memory is exceeded, a system log is generated in the console informing about exceeding the limit. To use logging, refer to chapter (VI.11.).

The Erase memory button is used to clear the memory of features that were not unregistered before deleting from the configuration. The memory is also cleared after the Hard Reset CLU procedure.

3. Methods

Methods are commands which can be given to a specific object. Each object has its own characteristic methods. For relay output, it can be methods <u>SwitchOn</u> and <u>SwitchOff</u>. Additionally, the methods can include required or optional parameters, which specify details of method invocation e. g. switch-on time.

4. Events

Events are elements of logical interface, invoked in reaction to the changes occurring in relation to an object (e.g. pressing a button, temperature change, etc.). We can connect one or more methods to each event, which will be invoked when an event occurs, e.g. when the button is pressed, the lights will be switched on. By connecting events of one object (mainly inputs, but sometimes also outputs) with methods of other object, we create logical configuration of the system.

Each type of object (type of input/output) has its own list of events, which are invoked in a precisely specified way, depending on the actions performed by the user. For instance, binary input has the following list of events:

- OnChange
- OnSwitchOn
- OnSwitchOff
- OnShortPress
- OnLongPress
- OnClick
- OnHold

which are invoked according to the following scheme:







5. Features and methods addresses

Each feature and method has an address in the system, thanks to which they can be invoked in scripts and during creating connections with events. Address consists of 3 parts, joined by " \rightarrow " mark:

- CLU or container identification.
- Object name (input, output, CLU).
- Name of feature/method and its parameters (if there are any).

For example:

CLU1->Lamp1->SwitchOn() - method causing switching on output Lamp1

Lights->Lamp1->value() - feature showing whether the lamp is switched on or off, for lamp placed in the "Lights" container.

III. Project preparation

1. Electrical system preparation

Note!

Electrical systems in residential and public utility buildings may be established only in accordance to mandatory provisions and electrical standards and only by authorized, qualified specialists

A. Electrical system topology

GRENTON System enables creation of both centralized and distributed systems. For newly designed buildings, we recommend connecting all its circuits to one electrical distribution board, which ensures more flexibility in systems design and more sustainable resources management.

Every device that will be connected to the system should have its own, separated electrical circuit, ending in the electrical distribution board. Select wires diameter in accordance to the mandatory standards. If there is no chance of connecting electrical distribution board and the controlled device directly, there are three possible solutions:

- Using CLU module together with IOM modules, CLU modules in the distribution board are connected to the device module using system bus - recommended solution when there are two or more buildings integrated into one system.
- 2. Using one or more IOM modules, the modules are connected using field bus recommended solution when there are only a few device modules.
- 3. Using IOM radio modules based on Z-WAVE recommended solution when there is no chance of using wiring installation (pre-existing buildings etc.).

B. Bus

There are 2 buses in the system:

1. System bus, used for connections between CLU-CLU and CLU-SMARTPHONES modules etc.

System bus - Ethernet. Modules can be connected to each other using serial connection. The maximum length of wire between two CLU modules is 90 m.

UTP wire is recommended (minimum 5e category).

System bus length could be increased by using network devices such as switch, router etc.

2. Field bus, used for connections between CLU-IOM modules.

Field bus – IOM modules can be connected to the field bus using bus (TF-Bus) wire and also connected to the bus using the BUS MODULE. Modules must be connected to each other using serial connection. Maximum length of the bus from one end to another is 300 m.

Note!

Separate power supply for the bus may be necessary.

Wire with constant surge impedance and minimum cross-section of 0.5 mm² is recommended, e.g. UTP wire (optionally, covered wire: FTP or E-BUS). With larger number of modules or more extended bus, potential drops should be considered when choosing diameter of the bus wire.

C. Useful tips

• Before implementing electrical system project, prepare smart house system project.

- If you don't know yet, which devices will be controlled by the system, make sure the wiring reaches all possible places.
- For light switches, any thin wire may be used, e.g. YTDY it will allow saving on wire.
- Remember to prepare the system for temperature sensors and weather station.
- Place power outlet on the terrace and connect it to a separate power supply you will be able to control the power in the outlet through the system.

2. System architecture selection

Various configurations may be used depending on type, size, and requirements of objects - the system is fully scalable. Depending on scale and needs, there are several available configurations:

A. Basic configuration - centralized system with one CLU

The diagram presents a system built on the basis of one CLU. In a system configured this way the maximum number of IOM modules equals 48 (or up to 400 objects). Remember to provide the bus with power adequate to its load.



B. Advanced configuration - tablet-controlled distributed system with many CLU

System capacity can be increased by adding next CLU modules. CLU units are connected to each other using system bus. The system may be additionally expanded with smartphones, tablets, etc.



C. Integrating several buildings into one system

System expansion is practically unlimited. Several objects can be connected to one system. Thanks to that, you can have central control using only one system.



3. Modules power supply

The CLU and IOM modules can be powered in two ways:

1. By connecting the power supply to the 24V DC system bus - in this case the CLU module will power the IOM modules connected to it via the local bus. A maximum current of 1000 mA can flow through the local bus (TFbus).



2. By connecting the 24 V DC power supply to the local bus. In this case, the CLU will be powered from the local bus.



For flush-mounted modules, it is possible to optionally use a 24 V DC flush-mounted power supply.



Note!

CLU can be simultaneously connected to the power supply from the system bus and local bus!

IV. Components installation

Majority of modules is provided in two versions: on the DIN rail to be assembled in the distribution centre, and flush-mounted. In addition, Z-Wave modules are available: Relay, Roller Shutter and Digital IN.

1. Modules installation in the switching action

Modules offered by GRENTON are provided in cases adjusted to assembly in the distribution centre on a DIN rail. To assembly a module, place it on the rail and block the latch on the underside of the module. Then, connect the modules to the system bus using special bus connectors, and attach connecting wires according to the assembly manual attached to the modules.

Note!

Modules in the OM are identified using a serial number. After installing a module, write down its serial number and physically connected inputs / outputs, it will facilitate identification of specific objects.

2. Flush-mounted wire modules installation

Modules designed for flush-mounted installation are adjusted for installation in junction boxes of 70mm diameter, as well as majority of boxes of 60mm diameter. In the case of boxes of 60mm diameter, check beforehand if the module fits in the specific type of a junction box.

In the case of planned installation of larger number of modules, use deepened junction boxes.

3. Z-Wave flush-mounted modules installation

Wireless modules are adjusted to assembly in junction boxes of minimum 60mm diameter. It is For flush-mounted modules it is recommended to use cans with a side pocket.

V. Object Manager

1. OM installation

Minimum system requirements for the computer and detailed Object Manager configuration software installation manual is attached to software installation files.

Current Object Manager version could be downloaded from: <u>https://www.grenton.com/wsparcie/materia</u> <u>ly-do-pobrania.html</u>

Note!

The folder in which the Object Manager will be installed can not contain special characters in the name ie. %, !, # etc.

A. Windows

- Download the file .exe.
- Run the file.
- Select the Object Manager installation path.
- Start unpacking by pressing Extract.
- After unpacking, run the om.exe file located in the */object-manager* directory.

B. macOS

Note!

The application name contains the version number, which allows multiple OM versions to exist on one computer. Before removing previous versions, it is recommended to migrate / copy project files stored in the application file by default.

To do this, in the Finder, select (Ctrl-Click) "Show Package Contents" and copy or move the folder containing the project files (om.app/Contents/MacOS/projects) to the new version of the OM application.

- Download the file.
- Run the file.
- Copy the Object Manager application to the Application folder as suggested.
- Start the Object Manager application in the standard way.

C. Linux

- Download file object-manager.tar.gz.
- Extract the downloaded file in the selected location.
- After unpacking, run the ./om file located in the /object-manager directory.

2. OM structure

Object Manager is operated through three available for the user menu panels:

MAIN MENU

File Edit Tools Window Help

Contains basic commands for handling the project.

ACTIONS MENU



Icons in the menu are used for programming and configuration of devices. Only icons that can be used at the moment are illuminated - it comes from the context which you are present in, e. g. if you selected CLU in the side tree, icons connected to CLU become active.

OBJECTS MENU



Consists of three parts: Object (CLU, inputs, outputs) list, the myGrenton tab (creating the myGrenton application interface) and Visual Builder (creating the Home Manager application interface).

All system configuration data is stored in the project file. In OM, any number of projects can be stored, each of them connected to different installation / building / apartment.

2.1. Object filtering

Note! The Filter objects functionality is available for Object Manager version 1.5.0 or higher.

For each grouping view (by CLU, by module, by type, by containers, only inputs, only outputs) it is possible to filter the displayed elements using the Filter objects option.

🕼 Home										
- (¢		1	N I	A					
Filter obje	ects									
V 🚯 Object Manager 🔥 🔺										
~ + <u>*</u> +	✓ 🔹 CLU220001146									
~	🚽 Skryp	ty								
	ф Ас	ld script								
~ + <u>*</u> +	CLU2200	01313								
~ 5	Skryp	ty //								
	ц т . Ас	10 SCRIPT								
ſ	m x2100	01429_DI								
r	m x2800	00200 DI								
, i	m x5100 ♠ x2100	100308 DI	MM2							
	M ×3100	00596_DI	DRGBW1							
~ • <u>*</u> •	CI U2210	000000	DRODWI							
		tv								
	👍 Ac	d script								
	🖌 x 1810	00432_Ar	alogIN1							
	🖌 x1810	00432_DI	N1							
e	🖌 x1810	00432_DI	N2							
e	🖌 x1810	00432_DI	N3							
e	🖌 x1810	00432_DI	N4							
r	🖌 x1810	00432_DI	N5							
e	🖌 x1810	00432_DI	N6							
e	🖌 x1810	00432_DI	N7							
r	🖌 x1810	00432_DI	N8							
P	🖌 x1810	00432_DI	N9							
P	🎍 x1910)00016_Ar	alogIN1							

After entering the name to be searched, all elements (objects) containing the entered phrase in the given view are displayed.



The given phrase is included in the filtering after switching to another group view (tab).

2.2. Renaming an object



The possibility of renaming an object using the context menu / F2 is available for Object Manager version 1.5.0 or higher.

Renaming a given object can be done in the following way:

• In the Object properties window, enter a new name in the Name field.

C Home													
***	\$	1	N	A									
Filter object	ts												
🗸 🚯 Obje	ct Manager			^									
	LU220001146				0								×
v 🗟	Skrypty				-								
	🕂 Add script				Object pro	perties							
🗸 🙀 C	LU220001313												
v 🖶	Skrypty												
	🕂 Add script								1				
^	x210001429_DI	MM1			Name: k28	0001467_LEDRGBW1			Device type:				~
r (* 1	x280001467_LEI	JRGBWT	-		ld: CLU	J220001313->LED2115	5		Serial number:	280001467			1
	x310000398_DI	JM2			Trees LED	PCPW							
	x420000501 LE	DRGBW1			iype. [LED	KOBW							
~ + ∎+ C	LU221000020							1	_				
	Skrypty				Contro	ol 🚺 User scheme	es 🏹 Events 💓 E	mbedded features	Statistics				
~	👍 Add script				Marthaud		Deservation and a			Value		C-11	_
×	x181000432_An	alogIN1			Wiethod		Parameter name			value		Call	- 1
*	x181000432_DI	V 1					Value		number [D-1]			
*	x181000432_DI	12			SetValue								
*	x181000432_DI	13			Jetvalue		Ramn	Default	: 				
*	x181000432_DI	V 4					Kamp	Time		ms [0-15000]			
	x181000432_DI	15							_				- 1
	x181000432_DI	10					Value		number	J-360]			
	x181000432_DI	N/			SetHue			Default					
-	×181000432_DI	10					Ramp	O Time		ms [0-15000]			
- L	x191000016 An	alogIN1								,			_
	x191000016 DC	UT1					Value		number [0-1]			
•	x191000016 DC	UT2			SetSaturati	on							
	x198121597_ON	IEW_SENS	OR1		SetSuturut		Ramp	Default					
.	x20100009_An	alogIN1						Olime		ms [0-15000]			
^	x20100009_DC	UTI					M-L			0.0001			_
^	x20100009_DC	UT2					value		number (1-200]		0	
^	x20100009_DC	UT3			SetRvalue			Default	•			(►)	~
^	x20100009_DC	UT4											
n la	x281000004_An	alogIN1									ОК	Cane	el
<u>^</u>	x281000004_LEI	JKGBW1										1	
	x281000479_An	alogIN1											

• selecting the object and calling the rename option from the context menu or by using the F2 keyboard shortcut.



3. Project files

3.1. Saved projects catalogue

After Object Manager installation, select a catalogue, in which the saved projects will be stored.

Default destination path for the catalogue: C :\.... \OM\projects

```
All files of created and saved projects are saved in the catalogue with *.omp extension. (e.g. projekt.omp).
```

3.2. Project backup

During work on a project there is an option to make a backup of the project which won't be modified despite making changes in the project. This way, it is possible to recover earlier version of the project if the user made unwanted configuration changes. Any number of backups can be made for each project.

Note!

It is recommended to make backups as often as possible, especially before making significant changes of system configuration.

```
File Edit Tools Window Help
                                            i 📴 🐺 😭 🕐 🗱 😫 🗐 🄇 🗐
                              Ctrl+N
    New project
                              Ctrl+O
    Open project
                                        Ctrl+R
    Last projects
                                       The
    Save project
                               Ctrl+S
                           Ctrl+Alt+S
    Save project as...
                          Ctrl+Shift+B
    Create project backup
    Available backups
    Exit
                              Ctrl+O
         m x201000273_00012
        x201000275_DOUT3
        x201000275_DOUT4
        1 x4262592003_BINARY_SENSOR1
        ▶ x4262592003_ZWAVE_BATTERY1
        x4262592003_ZWAVE_CONFIG1
        ₩ x4262592003_ZWAVE_WAKEUP1
        1 x461000377_AnalogIN1
        12 x461000377_AnalogIN2
        1 x461000377_AnalogIN3
         🖌 x461000377_AnalogIN4
         1000377_AnalogIN5
         M x461000377_AnalogIN6
         M x461000377_AnalogIN7
         x461000377_AnalogOUT1
         x461000377_AnalogOUT2
         x461000377_AnalogOUT3
         x461000377_AnalogOUT4
    myGrenton
   Ø Visual Builder
```

To make a project backup, click File->Make project backup in the main menu (backup can also be made by keyboard shortcut CTRL+Shift+B).

Saved backups are available in the list opened by clicking Available backups, or in the project opening window in a tab Backups.

Note!

After selecting a backup from the list it will be loaded, and any current changes in the project that haven't been saved will be lost.

4. Basic elements

4.1. Objects configurator

Each input, output, sensor, or other physical device connected to the system is visualised as an object in the OM. Objects do not show physical modules, but specific inputs and outputs. Each object has its initial values, built-in features, and events, displayed in the object configurator. After clicking on an object, this form opens.



The form above consists of the following sections:

1. Basic information

Name:	x201000275_DOUT1	Device type:	Lamp	~
ld:	CLU221001090->DOU1389	Serial number:	201000275	1
Type:	DOUT			

This section is located in the upper part of the form and contains basic information on each object, e. g. name, ld, module type, serial number and input/output number within the module. In this section the user can also define type of source or receiver, physically connected to the object.

2. Control Tab

Control	User schemes 🔖 Events 😭 Embedded f	eatures 🔛 Statistics	
Method	Parameter name	Value	Call
SetValue	Value	Off ↓	\triangleright
Switch	Time	Unlimited Time ms	
SwitchOn	Time	Unlimited Time ms	
SwitchOff	Time	Unlimited Time ms	
SetOverload	Overload	W [0-3000]	۲
			OK Cancel

Contains methods (with all parameters) relevant for the browsed object. Enables invocation of specific method from level of OM. For instance, for relay output you can invoke <u>Switchon</u> method with Time parameter (e.g. 30s), which will cause switching the output on for 30s. To invoke method at OM level, enter parameter values (if they are necessary) of the invoked method in the control tab and click "invoke" button.

3. Configuration chart

Configurations charts define object behavior and allow simplified logic configuration. To add a configuration scheme, select the available scheme from the list, and then add a link with the module by clicking 4 Add - look up VI.9.

Cont	rol 😈 User schemes 📡 Even	ts 😭 Embedded features	Statistics	
Scheme	Bistable button User configuration Two-way switch Bistable button Monostable button to switch bistal Button hold-ramp Dimmer Script (scene) Color change (LED RGB)	le relay	Relationships	s
				OK Cancel

4. Events - tab description

The tab contains list of events applicable for the specific object type and methods connected to them, which are invoked after event occurrence (if the user defined them). If configuration chart was selected, the tab is in the read only mode and shows only connections created as a part of the selected chart.

🔗 Control 👪 User scheme	es 🔀 Events 🎓 Embedded features 🏢 Statistics	
Attention: For this input selecte If you want to modify the conn For input will be created a new	ed scheme configuration Two-way lection press the Go to edition. configuration.	Go to edition
Event name	Assigned commands	Add command
OnValueChange		ú,
OnSwitchOn	CLU220001694->x300000280_DOUT1->Switch(0) Assign command 🗱	d .
OnSwitchOff	CLU220001694->x300000280_DOUT1->Switch(0) Assign command 🗱	÷
OnShortPress		÷
OnLongPress		÷
OnHold		÷
OnClick		÷
	OK	Cancel

You can go to event-method connections edition any time by clicking "Go do edition". In this case, "user chart" will be created, which will show up on the list in the configurations charts tab.

Control 당 User schemes	Events 😭 Embedded features 📰 Statistics			
Event name	Assigned commands			Add command
OnSwitchOn	CLU220001694->x300000280_DOUT1->Switch(0)	Assign command	*	<u>ب</u>
OnSwitchOff	CLU220001694->x300000280_DOUT1->Switch(0)	Assign command	*	÷
OnShortPress				4
OnLongPress				4
OnHold				÷
OnClick				4
			ОК	Cancel

After adding command to selected event, objects list opens. Then, after selecting proper object, list of methods that can be invoked on it appears. Adding a selected method results in creation of new dependence between objects.

5. Built-in features

This part presents values which the selected objects currently possesses, and initial values which was saved in it (initial values set in the case of system restart, e.g. after power supply break). Entering value in the "Initial values" field will result in setting it during CLU start.

Control 🔡 User scher	mes 🔖 Events 😭 Emb	edded features Statistics		
Feature name	Current value	Initial value	Unit	Range
Value	0	Off ↓	bool	0,1
StatisticState	0	Off 🗸	number	0,1
VoltageType	2	Signal 🗸		0,1,2
VoltageValue	230	230	V	[0-230]
Power	0		W	[0-3000]
Overload	3000	3000	W	[0-3000]
DistributedLogicGroup	0	0		[0-10000]
🗹 Auto refresh \\ 🔮				(S) Refresh
				OK Cancel

4.2. Script builder

It's a tool for script creation, which can work in two modes:

1. **Graphic (simplified) mode**, in which the chart can be created in an easy wat by dragging and connecting elements.



The graphic mode allows to create complicated scripts made of numerous conditions and methods. It is also possible to use variables and parameters. The only limitation is no possibility of creating loops, which require using text mode.

 Text (full) mode, in which the user can create the logic using advanced LUA language. Thanks to that, creation of very complex charts using all elements of LUA language (including loops, tables, etc.) is possible

```
Graphical mode Parameters Run script

I if (not (CLU->x300000271_DOUT2->Value==1)) then

CLU->Living_room_lamp->SwitchOn(60000)

selse

if (CLU->x300000271_DOUT2->Value==0) then

CLU->Living_room_lamp->SwitchOn(60000)

CLU->x300000271_DOUT2->SwitchOn(0)

CLU->x240000392_BUTTON1->ShowOK()

end
end
end
```

In comparison to the standard LUA, the language was expanded with possibility of direct linking to addresses of methods and features, which are treated same as other functions of LUA.

4.3. Connections diagram

A tool showing dependencies and connections between all objects in the system. Thanks to that tool, you can easily and quickly find a dependency that interests you, or check dependencies of a specific module without going through configurations.

Connections diagram may be run from the main menu: Tools -> Connections diagram, or using keyboard shortcut [ALT+Q].

Each object in the system is presented in the diagram by a circle with its address displayed next to it. The colour of a circle depends on the object type:

- CLU red colour;
- Input / output cherry colour;
- Events of inputs or outputs light blue colour;
- Events generated by timers dark blue colour;
- Built-in methods dark green colour;
- Script methods light green colour
- Built-in features yellow colour;
- Defined features orange colour;

Connections between objects are displayed as arrows which heads point to the invoked object.



Connections are displayed on three different levels:

- 1. CLU-CLU displays connections between two CLU, if any of objects of one CLU (input, output) is connected to another CLU.
- 2. Connections between objects displays connections between specific objects (inputs, outputs) without showing specific events, features, or methods.
- 3. Connections between events, methods, and features displays the most detailed view, showing what specific events cause etc.

Navigation also happens in two planes:

- 1. In the vertical plane allows switching between objects on the same level by clicking any object except central in the chart.
- 2. In the diagonal plane allows going up and down between levels by clicking on the central object and selecting an object from the appearing list (for going down) or by pressing "up" button in the upper part of the chart (for going up).



4.4. Visual Builder

Visual Builder is a tool used to create user interface for mobile devices. The interface can be created automatically on the basis of installation project, or can be designed and created by the user acc. to their personal preferences. The user has an option of using their own graphics. Interface is created through drag&drop of Visual Builder components. It enables creation of interface for all popular resolutions. The icon switching on the VB is placed at the end of expanded objects tree.



4.5. myGrenton

A tool for creating a user interface for mobile devices for the myGrenton application. Creating the interface is done by dragging & dropping elements from the object tree available in the project (modules connected to CLU) - the widget will have a predefined template.



4.6. Bin

It is modelled after solution known from operating systems. Deleted object, script, or application in the project is not irretrievably removed, but moved to the bin, thus giving the user a possibility of retrieving deleted data in the case of change in the concept.

The bin has a form of a tab placed in the objects tree, and appears whenever an object is deleted. Objects from the bin can be restored at any moment by right-click and selecting *Restore* from the context menu.

An object can be permanently removed from the recycle bin by selecting *Delete* from the context menu. Restoring a removed module to the project (removing a module means removing all objects of the removed module) is only possible by performing CLU Discovery. Restoring a single module object is only possible by clearing the configuration on the CLU.



VI. Basic system configuration

1. Connecting OM to CLU

To configure devices in the system, the computer has to be connected to the CLU modules. During operations performance, all CLU modules must be connected to each other using Ethernet cable.

There are two connection methods:

1. Direct connection to the computer

Connect network cable to the network card in the computer and to the network socket in the CLU module.

2. Connection through local network

It is possible to connect with GRENTON system using local network. In order to do that, both CLU module and the computer which will be used for establishing connection must be in the same subnetwork.

2. IP adressess

CLU modules, as all network devices, have their own IP address. Each of the modules installed in the system must have its own unique IP address, however, all CLU modules in the system must work in the same sub-network so they can communicate with each other. IP address of a specific CLU can be changed by the user at any time. The address can be changed through device configurator for the selected CLU and by entering the new address into the field containing the old address.

Note!

After connecting CLU (or several CLU) to computer's network card, it will receive a new IP address consistent with pool of addresses in which computer's network card is.

3. Creating new project

After opening Object Manager, a new window with two options appears: opening a saved project and creating a new project.
project		
. ,		
New project	Last opened projects	Backups
	Project name	Path
Dpen project	Home	D:\Programy\Object Manager\projects\Home.omp
-	Open se	lected project
Close	Open se	and project and project

1. Select new project creation, then name the created project.

0					_ □	
New project						
Project name (step 1/6))					
Project name:						_
Location of the project	D:\Program\\Obi	ect Manag	er\ projects			
Location of the project:	D:\Programy\Obj	ect Manag	er\projects			
		Pack	Marth	Finish	Carry	-
	<	DACK	Next >	Finish	Cance	:1

2. Object Manager software will display network configuration window. The settings for the available interface are loaded automatically. Other network interfaces can be selected from the list. It is possible to indicate the range from which the system will automatically assign available IP addresses to the modules found.

0	-		×
Ne w project			
Network configuration	ion (step 2/6)		
Network interface: Network mask: Gate: Begin of IP range: End of IP range:	wlan0 (192.168.100.3) V S 255.255.255.0 192.168.100.1 192.168.100.2 192.168.100.255		
Note: If y manual h	our network IP address is assigned an by the DHCP server, read to the inst low to properly set the range of IP in this case.	ruction	
	< Back Next > Finish	Canc	el

Note!

For Object Manager version below 1.2.1, the settings for the available network interface are not loaded automatically.

	255.25				
Network mask:	255.25	255.255.255.0			
Gate:	192.168	3.3.1			
		400 400 0 0			
Begin of IP	range:	192.168.3.2			
Begin of IP End of IP ra	range: nge:	192.168.3.255			

Note!

In the older version of Object Manager, there is the "Network WiFi configuration" step that should be skipped.

New Project - Network WiFi config	uration (step 3/7
If you have CLU with WiFi support module then a This step can be omitted.	select network and enter passwor
In WiFi network range	O Refresh
SSID Security Signal stre	
Network name	
Network name	

3. In the next step, you may choose between downloading existing system configuration to the newly created project, and complete configuration reset and starting a project from scratch. The first option is useful when necessity of recreating configuration after loss of project file occurs.

0	- 🗆 ×
New project	
CLU Discovery (step 3/6)	
Download the project from all found CLU	
O Clear the configuration on all found CLU	
< Back Next > Finis	h Cancel

4. In the fourth step, available modules search procedure named CLU Discovery should be launched.

0		- 🗆 🗡
New project		
CLU Discovery (step 4/6)		
OM will detect the installed modules and will downle cable directly to the CLU module and press the butto	ad their configuration. Connect the n "CLU Discovery".	computer with

5. In the next step, OM starts searching available CLU modules.

New project	
CLU Discovery (step 5/6)
Checking configuration	of modules visible in the system. Depending on the number of
connected modules, the	e operation can take from several seconds to several minutes.
connected modules, the	e operation can take from several seconds to several minutes.

To complete the creation of a new project - after searching for available CLU - in the window displayed, enter the *Secret Key* of the given CLU, which is located on the module's cover.

0	×
Secret key	
Enter encryption with the serial	on key for new CLU. You will find "Secret Key" on the label along number of the CLU
SN: 22100109	0

6. After entering the key for the found CLU, a window containing all CLUs found during the CLU Discovery procedure is displayed. For a given CLU module to be added to the project the check box in the *Choice* column must be selected.

Select t	covery he CLUs to be added o	r updated. For newly found (CLUs, you can change the IP a	ddress using a contextual		
action.				, and a second second		
Choice	Name	Serial number	IP address			
M	CLU_ZWAVE_2	221000805	192.168.88.119			

In this window, it is also possible to change the IP - option is called from the context menu (PPM) for a given CLU (selected in the line).

Going to the next window (*Next* button), a list of all selected (in the previous step) CLUs along with the modules that are connected to it (TF-Bus) / are paired (Z-Wave) is displayed.

Name	Serial number	hwType	hwVer	fwType	fwApiVer	Operation	Status
CLU_ZWAVE_2	221000805	19	1	3	509	Adding	0
ANALOG_DIN	461000557	25	1	2	1	Adding	<u></u> 01
DIGITAL_IN_DIN	181000432	20	1	2	1	Adding	Ö 01
IO_MODULE_DIN_8	330000320	30	1	2	1	Adding	Ö 01
ONE_WIRE	198114303	255	1	40	3	Adding	Ö 01
RELAY_DIN_4	201000009	21	1	2	1	Adding	<u> </u>
RELAY_FM	340000238	31	1	2	1	Adding	<u> </u>
ROLLER_SH_DIN	461000001	23	1	2	3	Adding	<u> </u>
ROLLER_SH_DIN_3	550001454	42	1	2	2	Adding	<u></u> 01
ROLLER_SH_FM	441000006	32	1	2	2	Adding	<u> </u>
ROLLER_SH_FM	441000121	32	1	2	2	Adding	Ö 01
SMART_PANEL_FM_4	250004177	3	1	3	6	Adding	0

The description of the information displayed in the above window can be found in <u>chapter VI.4.</u> <u>CLU Discovery function</u>.

Note!

For Object Manager version below 1.6.0, the windows referred to in point 6 are not displayed - OM will list the CLU modules found. In this window you can add all or only selected modules to the created project. You can also change the IP address that has been assigned automatically.

0			_ 🗆 🛛
New project End of Disco	ct very (step 6/6)		
CLU Discover	y finished. The following module	es were found:	
CLU	192.168.100.223	Assign IP Add	Assign to inactive CLU
			Add all CLU Close

4. CLU Discovery function

CLU Discovery function completely automatically finds CLU modules and connected to them IOM modules. It is launched obligatorily during opening a new project, but it can also be launched manually at any time from the actions menu.



Use CLU Discovery function when:

- You connect new CLU or IOM module to the system
- You change CLU or IOM module for a different one
- You switch IOM module from one CLU to another
- There is a need to recover a completely deleted IOM object

After properly conducted CLU Discovery run, all changes will be found and added to the project.

Before running CLU Discovery, make sure that:

- All modules are properly connected and powered
- CLU modules are connected to each other
- Computer on which OM is running is connected to the same network as CLU.

Note!

If the network consists of router, it is recommended to connect the computer directly to the CLU with a network cable when running CLU Discovery. In the majority of cases, CLU Discovery will run successfully also while connected through the router, however, in the case of a specific router configuration, CLU Discovery might not find CLU modules.

4.1. Adding modules to the project

The displayed window contains all CLUs found during the CLU Discovery procedure. For a given CLU module to be added to the project, the check box in the *Choice* column must be selected.

CLU Discovery Select the CLUs to be added or updated. For newly found CLUs, you can change the IP address using a contextual Choice Name Serial number IP address CLU_ZWAVE_2 21000805 192.168.88.119 CLU_ZWAVE_2 21000805 192.168.88.119 Image: CLU_ZWAVE_2 192.168.88.119 Image: CLU_ZWAVE_2 Image: CLU_ZWAVE_2 192.168.88.119 <th>0</th> <th></th> <th></th> <th></th> <th></th> <th></th> <th>\times</th>	0						\times
Select the CLUs to be added or updated. For newly found CLUs, you can change the IP address using a contextual action. Choice Name Serial number IP address ✓ CLU_ZWAVE_2 22100805 192.168.88.119 ✓ CLU_ZWAVE_2 22100805 192.168.88.119 ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ <th>CLU Dis</th> <th>covery</th> <th></th> <th></th> <th></th> <th></th> <th></th>	CLU Dis	covery					
Choice Name Serial number IP address ✓ CLU_ZWAVE_2 221000805 192.168.88.119 ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓	Select th action.	he CLUs to be added or	updated. For newly found C	LUs, you can change the IP address using	a contextual		
✓ CLU_ZWAVE_2 221000805 192.168.88.119 ✓ ✓ ✓ ✓ <	Choice	Name	Serial number	IP address			
Image:	×	CLU_ZWAVE_2	221000805	192.168.88.119			
Image: Sected							_
Image:							
<td< th=""><th></th><th></th><th></th><th></th><th></th><th></th><th></th></td<>							
<td< th=""><th></th><th></th><th></th><th></th><th></th><th></th><th>_</th></td<>							_
Image:							
Image:							
<td< th=""><th></th><th></th><th></th><th></th><th></th><th></th><th>_</th></td<>							_
Image: Sector Next > Finish Cancel							
A A							
A Back Next > Finish Cancel							_
Seck Next > Finish Cancel							
A Back Next > Finish Cancel							
< Back Next > Finish Cancel							_
< Back Next > Finish Cancel							
< Back Next > Finish Cancel							
< Back Next > Finish Cancel						 	
< Back Next > Finish Cancel							
				< Back Next >	Finish	Cance	1

In this window, it is also possible to change the IP address - the option is called from the context menu (PPM) for a given CLU (selected in the line). The option of changing the IP address / rewriting the configuration is available only for newly found CLU modules.

0									×
CLU Dis	covery								
Select t action.	he CLUs to be added or	r updated. For newly found (CLUs, you can change the	IP address	using a cont	extual			
Choice	Name	Serial number	IP address						
	CLU_ZWAVE_2	221000805	192.168.88.205	Chan	ge IP Address	;			
							,		
					N			6	
			< Back		Next >	Finis	sh	Cance	el

Going to the next window (using *Next* button) a list of all selected (marked in the previous step) CLU is displayed along with the modules that are connected to it (TF-Bus modules) or are paired (Z-Wave modules).

0									×
CLU Discovery									
Verify the status of CLU and mo	dules								
Name	Serial number	hwType	hwVer	fwType	fwApiVer	Operation		S	tatus
CLU_ZWAVE_2	221000805	19	1	3	509	Adding			ОК
ANALOG_DIN	461000557	25	1	2	1	Adding) ок
DIGITAL_IN_DIN	181000432	20	1	2	1	Adding) ок
IO_MODULE_DIN_8	330000320	30	1	2	1	Adding			ОК
ONE_WIRE	198114303	255	1	40	3	Adding			ОК
RELAY_DIN_4	201000009	21	1	2	1	Adding			ОК
RELAY_FM	340000238	31	1	2	1	Adding			ОК
ROLLER_SH_DIN	461000001	23	1	2	3	Adding) ок
ROLLER_SH_DIN_3	550001454	42	1	2	2	Adding			ОК
ROLLER_SH_FM	441000006	32	1	2	2	Adding			ОК
ROLLER_SH_FM	441000121	32	1	2	2	Adding			ОК
SMART_PANEL_FM_4	250004177	3	1	3	6	Adding			ОК
<									>
			< E	Back	Next >	Finish	1	Cance	el

The window displays the following information:

• Name - name of the device (CLU / module);

- **Serial number** the number of a given device assigned by the manufacturer (TF-Bus modules) or during the pairing process (Z-Wave modules);
- hwType, hwVer, fwType, fwApiVer configuration parameters of a given device;
- Operation information on what action will be performed for a given device (CLU / module):
 - Adding a new module is added to the project;
 - **Adding (Reassigning)** the configuration is rewritten between the inactive CLU and the active CLU (applies to the situation in which CLU Discovery was run on an existing project);
 - **Updating** objects of a given device will be updated in accordance with the update of a given module (when fwApiVer is changed). In the case of an update two values are displayed in the *fwApiVer* column: current value and value before the module update process (applies to the situation where CLU Discovery was run on an existing project);
 - **Removing** if a given module (TF-Bus / Z-Wave) is not found during CLU Discovery the objects of a given module in the project are grayed out (applies to a situation where CLU Discovery has been run on an existing project);
 - **None** no changes to the configuration of a given module (applies to a situation where CLU Discovery was run on an existing project).
- **Status** informing about the possibility of carrying out the actions listed in the *Operation* column:
 - **OK** correct execution of the given operation to the module;
 - **Missing XML interfaces** the given operation cannot be performed because the XML interface is missing for the given module.

If all modules have **Status: OK** - it is possible to add / apply changes for a given CLU - using the *Finish* button.

In a situation when a given device has the Status **Missing XML interfaces**, it is not possible to add / apply changes for the given CLU to which the given module is connected. In this case, update the interface database and then run CLU Discovery again.

discovery of Discovery Discovery finished. The following modules were found: .UGateHTTP 192.168.100.252 Assign IP Add Assign to inactive CL .U 192.168.100.223 Assign IP Add Assign to inactive CL					
Discovery finished. The following modules were found: .UGateHTTP 192.168.100.252 Assign IP Add Assign to inactive CL .U 192.168.100.223 Assign IP Add Assign to inactive CL	J discovery				
Discovery finished. The following modules were found: .UGateHTTP 192.168.100.252 Assign IP Add Assign to inactive CL .U 192.168.100.223 Assign IP Add Assign to inactive CL	d of Discovery				
UGateHTTP 192.168.100.252 Assign IP Add Assign to inactive CL U 192.168.100.223 Assign IP Add Assign to inactive CL	J Discovery finish	ed. The following modules	were found:		
U 192.168.100.223 Assign IP Add Assign to inactive CL	CLUGateHTTP	192.168.100.252	Assign IP	Add	Assign to inactive CLU
	CLU	192.168.100.223	Assign IP	Add	Assign to inactive CLU

Colour of the position means:

- Green newly found CLU, which can be added to the project
- **Red** CLU, which for various reasons can't be added to the project (version not operated by OM etc.)
- **No colour** CLU previously added to the project (only if CLU Discovery was used on preexisting project)

Modules may be added one by one by clicking *Add* button, or all at once by clicking *Add all CLU* button.

After doing the above, the indicated CLU will be added to the project.

4.2. Replacing / Reassigning modules during Discovery process

Note!

The ability to assign modules during CLU Discovery is available for Object Manager version 1.7.0 or higher.

In the case of physical module replacement, during the Discovery process it is possible to assign the configuration of an inactive (disconnected) module to a new one added to the installation. Assignment takes place within the entire module (its objects), without the need to assign individual objects of a given module.

0					×
CLU Discovery					
Assign newly found devices to i	nactive ones by clicking on t	the assignment column			
Name	Serial number	IP address	Assignment		
✓ CLU_ZWAVE_2	221000805	192.168.88.205	221004772		
ANALOG_DIN	461000557		<choose module=""></choose>		
DIGITAL_IN_DIN	181000432		<choose module=""></choose>		
IO_MODULE_DIN_8	330000320		<choose module=""></choose>		
ONE_WIRE	198114303		<choose module=""></choose>		
RELAY_DIN_4	201000009		<choose module=""></choose>		
RELAY_FM	340000238				
ROLLER_SH_DIN	461000001		<choose module=""></choose>		
ROLLER_SH_DIN_3	550001454				
ROLLER_SH_FM	441000006				
ROLLER_SH_FM	441000121				
SMART_PANEL_FM_4	250004177		<choose module=""></choose>		
		< Pack	Next S Einich	Carro	-
		< DACK	ivext > Finish	Cance	21

The window appears only when there are possible assignments between modules of the same type. The view presents the newly found CLU and / or modules and their possible assignments. Devices are presented in the hierarchical form CLU-> Modules. Modules that do not match the assignment they are greyed out. For matching modules the *Assignment* column for a given module displays a list of inactive modules whose configuration can be assigned.

CLU_ZWAVE_2 22100805 192.168.88.205 221004772 ANALOG_DIN 461000557 <choose module=""> DIGITAL_IN_DIN 181000432 <choose module=""> IO_MODULE_DIN_8 33000320 <choose module=""> ONE_WIRE 198114303 <choose module=""> RELAY_DIN_4 20100009 <choose module=""> RELAY_FM 340000238 ROLLER_SH_DIN_3 550001454 ROLLER_SH_FM 44100006 451002996 ROLLER_SH_FM 441000121 45100002 SMART_PANEL_FM_4 250004177 451003266 IO</choose></choose></choose></choose></choose>	LU_ZWAVE_2 22100805 192.168.88.205 22104772 ANALOG_DIN 461000557 <choose module=""> DIGITAL_IN_DIN 18100432 <choose module=""> IO_MODULE_DIN_8 33000320 <choose module=""> ONE_WIRE 198114303 <choose module=""> RELAY_DIN_4 20100009 <choose module=""> RELAY_FM 340000238 ROLLER_SH_DIN_3 550001454 ROLLER_SH_DIN_3 550001454 ROLLER_SH_FM 44100006 451002996 ROLLER_SH_FM 441000121 45100002 451003266 SMART_PANEL_FM_4 250004177 451003266 Internet Internet Internet Internet Internet Internet Internet Internet Internet Internet Internet Internet Internet</choose></choose></choose></choose></choose>	Name	Serial number	IP address	Assignment		
ANALOG_DIN 461000557 <choose module=""> DIGITAL_IN_DIN 181000432 <choose module=""> IO_MODULE_DIN_8 33000320 <choose module=""> ONE_WIRE 198114303 <choose module=""> RELAY_DIN_4 20100009 <choose module=""> RELAY_FM 34000238 ROLLER_SH_DIN 46100001 451002996 ✓ ROLLER_SH_DIN_3 550001454 <choose module=""> ROLLER_SH_FM 44100006 45100002 45100002 ROLLER_SH_FM 441000121 451000296 ✓ SMART_PANEL_FM_4 250004177 451003266 Image: Comparison of the state of the state</choose></choose></choose></choose></choose></choose>	ANALOG_DIN 461000557 <choose module=""> DIGITAL_IN_DIN 181000432 <choose module=""> IO_MODULE_DIN_8 330000320 <choose module=""> ONE_WIRE 198114303 <choose module=""> RELAY_DIN_4 20100009 <choose module=""> RELAY_FM 340000238 ROLLER_SH_DIN 461000001 451002996 ROLLER_SH_DIN_3 550001454 ROLLER_SH_FM 44100006 451000001 451000002 ROLLER_SH_FM 441000121 451000296 SMART_PANEL_FM_4 250004177 451003266 Interval Interval Interval Interval Interval Interval Interval Interval Interval Interval Interval Interval Interval Interval Interval Interval Interval Interval Interval Interval Interval Interval Interval Interval Interval Interval Interval Interval Interval Interval Interval</choose></choose></choose></choose></choose>	CLU_ZWAVE_2	221000805	192.168.88.205	221004772		-
DIGITAL_IN_DIN 181000432 <choose module=""> IO_MODULE_DIN_8 33000320 <choose module=""> ONE_WIRE 198114303 <choose module=""> RELAY_DIN_4 20100009 <choose module=""> RELAY_FM 34000238 ROLLER_SH_DIN 46100001 451002996 ✓ ROLLER_SH_DIN_3 550001454 <choose module=""> 451000001 ROLLER_SH_FM 44100006 451000001 451002996 ROLLER_SH_FM 441000121 451002996 ✓ SMART_PANEL_FM_4 250004177 451003266 ✓ Image: Comparison of the state of the s</choose></choose></choose></choose></choose>	DIGITAL_IN_DIN 18100432 <choose module=""> I0_MODULE_DIN_8 33000320 <choose module=""> ONE_WIRE 198114303 <choose module=""> RELAY_DIN_4 20100009 <choose module=""> RELAY_FM 34000238 ROLLER_SH_DIN 46100001 451002996 ROLLER_SH_DIN_3 55001454 <choose module=""> ROLLER_SH_FM 44100006 451000001 451000002 ROLLER_SH_FM 441000121 451000002 451002996 SMART_PANEL_FM_4 250004177 451003266 Intersection Intersection Intersection Intersection Intersection</choose></choose></choose></choose></choose>	ANALOG_DIN	461000557		<choose module=""></choose>		
IO_MODULE_DIN_8 330000320 <choose module=""> ONE_WIRE 198114303 <choose module=""> RELAY_DIN_4 20100009 <choose module=""> RELAY_FM 340000238 ROLLER_SH_DIN 46100001 451002996 ✓ ROLLER_SH_DIN_3 550001454 <choose module=""> ROLLER_SH_FM 44100006 451000002 ROLLER_SH_FM 441000121 451002996 SMART_PANEL_FM_4 250004177 451003266</choose></choose></choose></choose>	IO_MODULE_DIN_8 33000320 <choose module=""> ONE_WIRE 198114303 <choose module=""> RELAY_DIN_4 20100009 <choose module=""> RELAY_FM 34000238 ROLLER_SH_DIN 46100001 451002996 ROLLER_SH_DIN_3 55001454 <choose module=""> ROLLER_SH_FM 44100006 451000001 ROLLER_SH_FM 441000121 451000002 ROLLER_SH_FM 441000121 451002996 SMART_PANEL_FM_4 250004177 451003266 IOULER_SH_FM 44100121 451003266 IOULER_SH_FM_4 250004177 IOULER_SH_FM_4 IOULER_SH_FM_4 IOULER_SH_FM_4 IOULER_SH_FM_4 IOULER_SH_FM_4 IOULER_SH_FM_4</choose></choose></choose></choose>	DIGITAL_IN_DIN	181000432		<choose module=""></choose>		
ONE_WIRE 198114303 <choose module=""> RELAY_DIN_4 20100009 <choose module=""> RELAY_FM 34000238 ROLLER_SH_DIN 46100001 451002996 ROLLER_SH_DIN_3 550001454 <choose module=""> ROLLER_SH_FM 44100006 451000001 ROLLER_SH_FM 441000121 451002996 SMART_PANEL_FM_4 250004177 451003266</choose></choose></choose>	ONE_WIRE 198114303 <choose module=""> RELAY_DIN_4 20100009 <choose module=""> RELAY_FM 34000238 ROLLER_SH_DIN 46100001 451002996 ROLLER_SH_DIN_3 55001454 <choose module=""> ROLLER_SH_FM 44100006 451000001 45100002 ROLLER_SH_FM 441000121 45100002 451002996 SMART_PANEL_FM_4 250004177 451003266 Image: SMART_PANEL_FM_4 250004177 Image: SMART_PANEL_FM_4 <</choose></choose></choose>	IO_MODULE_DIN_8	330000320		<choose module=""></choose>		
RELAY_DIN_4 20100009 <choose module=""> RELAY_FM 340000238 451002996 ROLLER_SH_DIN 46100001 451002996 ROLLER_SH_DIN_3 550001454 <choose module=""> ROLLER_SH_FM 44100006 451000001 ROLLER_SH_FM 441000121 451002996 SMART_PANEL_FM_4 250004177 451003266</choose></choose>	RELAY_DIN_4 20100009 <choose module=""> RELAY_FM 34000238 ROLLER_SH_DIN 46100001 451002996 ROLLER_SH_DIN_3 55001454 <choose module=""> ROLLER_SH_FM 44100006 451000001 ROLLER_SH_FM 441000121 451000002 ROLLER_SH_FM_4 250004177 451002996 SMART_PANEL_FM_4 250004177 451003266 Image: Comparison of the second sec</choose></choose>	ONE_WIRE	198114303		<choose module=""></choose>		
RELAY_FM 340000238 ROLLER_SH_DIN 461000001 451002996 ROLLER_SH_DIN_3 550001454 <choose module=""> 451000001 ROLLER_SH_FM 44100006 451000002 451000002 ROLLER_SH_FM 441000121 451002996 451002996 SMART_PANEL_FM_4 250004177 451003266 451003266</choose>	RELAY_FM 340000238 ROLLER_SH_DIN 46100001 451002996 ROLLER_SH_DIN_3 55001454 ROLLER_SH_FM 44100006 451000001 ROLLER_SH_FM 441000121 451002096 SMART_PANEL_FM_4 250004177 451002996 Image: Signal state	RELAY_DIN_4	201000009		<choose module=""></choose>		
ROLLER_SH_DIN 461000001 451002996 ROLLER_SH_DIN_3 550001454 <choose module=""> 451000001 ROLLER_SH_FIM 44100006 451000002 451000002 ROLLER_SH_FIM 441000121 451002996 451002296 SMART_PANEL_FM_4 250004177 451003266 451003266</choose>	ROLLER_SH_DIN 46100001 451002996 ROLLER_SH_DIN_3 550001454 <choose module=""> 451000001 ROLLER_SH_FM 44100006 451000002 451000002 ROLLER_SH_FM 441000121 451002996 451002996 SMART_PANEL_FM_4 250004177 451003266 - </choose>	RELAY_FM	340000238				
ROLLER_SH_DIN_3 550001454 <choose module=""> ROLLER_SH_FM 44100006 451000001 ROLLER_SH_FM 441000121 451002996 SMART_PANEL_FM_4 250004177 451003266</choose>	ROLLER_SH_DIN_3 550001454	ROLLER_SH_DIN	461000001		451002996	~	
ROLLER_SH_FM 44100006 451000001 ROLLER_SH_FM 441000121 451002996 SMART_PANEL_FM_4 250004177 451003266	ROLLER_SH_FM 441000006 451000001 ROLLER_SH_FM 441000121 451002996 SMART_PANEL_FM_4 250004177 451003266 Image: Share of the state of t	ROLLER_SH_DIN_3	550001454		<choose module=""></choose>		
ROLLER_SH_FM 441000121 45100002 SMART_PANEL_FM_4 250004177 451003266	ROLLER_SH_FM 441000121 451000002 SMART_PANEL_FM_4 250004177 451003266 Image: Small of the state of the	ROLLER_SH_FM	441000006		45100001		
SMART_PANEL_FM_4 250004177 45100290	SMART_PANEL_FM_4 250004177 451002290 451003266 451003266 451003266 451003266	ROLLER_SH_FM	441000121		451000002		
	Image: select	SMART_PANEL_FM_4	250004177		451003266		

In the case of assigning the CLU configuration, after selecting the inactive module, a message is displayed that the IP address has been changed to the inactive CLU address - the change will be performed if the given address is available.

	Carial annual an	ID addassa	A		_
	Serial number	102 160 00 110	Assignment 221004772		
	221000805	192.108.88.119	221004772	×	
DIGITAL IN DIN	401000557				
	220000220				
	100114202			_	
RELAVIDIN 4 OCH	anging assignment		×	<	
THE DITE T				-	
RELAY EM					
RELAY_FM	Should the IP address of th	ne newly found CLU be changed	to the IP address of the		
RELAY_FM ROLLER_SH_DIN ROLLER SH DIN	Should the IP address of th assigned CLU?	ne newly found CLU be changed	to the IP address of the		
RELAY_FM ROLLER_SH_DIN ROLLER_SH_DIN_ ROLLER_SH_FM	Should the IP address of th assigned CLU?	ne newly found CLU be changed	to the IP address of the	E	
RELAY_FM ROLLER_SH_DIN ROLLER_SH_DIN ROLLER_SH_FM ROLLER_SH_FM	Should the IP address of th assigned CLU?	ne newly found CLU be changed	to the IP address of the		
RELAY_FM ROLLER_SH_DIN ROLLER_SH_DIN ROLLER_SH_FM ROLLER_SH_FM SMART_PANEL_F	Should the IP address of th assigned CLU?	ne newly found CLU be changed Ye	to the IP address of the		
RELAY_FM ROLLER_SH_DIN ROLLER_SH_DIN_ ROLLER_SH_FM ROLLER_SH_FM SMART_PANEL_FI	Should the IP address of th assigned CLU?	ne newly found CLU be changed Ye	to the IP address of the s No		
RELAY_FM ROLLER_SH_DIN ROLLER_SH_DIN_ ROLLER_SH_FM ROLLER_SH_FM SMART_PANEL_FI	Should the IP address of th assigned CLU?	ne newly found CLU be changed	to the IP address of the s No		
RELAY_FM ROLLER_SH_DIN ROLLER_SH_DIN ROLLER_SH_FM ROLLER_SH_FM SMART_PANEL_FI	Should the IP address of th assigned CLU?	ne newly found CLU be changed	to the IP address of the s No		
RELAY_FM ROLLER_SH_DIN ROLLER_SH_DIN ROLLER_SH_FM ROLLER_SH_FM SMART_PANEL_FI	Should the IP address of th assigned CLU?	ne newly found CLU be changed	to the IP address of the s No		
RELAY_FM ROLLER_SH_DIN ROLLER_SH_DIN ROLLER_SH_FM ROLLER_SH_FM SMART_PANEL_FI	Should the IP address of th assigned CLU?	ne newly found CLU be changed	to the IP address of the s No		
RELAY_FM ROLLER_SH_DIN ROLLER_SH_DIN ROLLER_SH_FM ROLLER_SH_FM SMART_PANEL_FI	Should the IP address of th assigned CLU?	ne newly found CLU be changed	to the IP address of the s No		
RELAY_FM ROLLER_SH_DIN ROLLER_SH_DIN ROLLER_SH_FM ROLLER_SH_FM SMART_PANEL_F	Should the IP address of th assigned CLU?	ne newly found CLU be changed	to the IP address of the s No		
RELAY_FM ROLLER_SH_DIN ROLLER_SH_DIN ROLLER_SH_FM ROLLER_SH_FM SMART_PANEL_F	Should the IP address of th assigned CLU?	ne newly found CLU be changed	to the IP address of the s No		

In case of busy / no access to the address an adequate message is displayed and the IP address remains the same as given during the Discovery process.

ssign newly found devices to	inactive ones by clicking on t	he assignment column		
ame	Serial number	IP address	Assignment	
CLU_ZWAVE_2	221000805	192.168.88.205	<choose clu=""></choose>	
ANALOG_DIN	461000557			
DIGITAL_IN_DIN	181000432			
IO_MODULE_DIN_8	330000320			
ONE_WIRE 🕜 Char	nging assignment		×	
RELAY_FM ROLLER_SH_DIN	The IP address (192.168.1. in the Discovery process of	191) could not be set because it or is busy.	is outside the range defined	
RELAY_FM ROLLER_SH_DIN ROLLER_SH_DIN ROLLER_SH_FM ROLLER_SH_FM SMART RANEL	The IP address (192.168.1. in the Discovery process of	191) could not be set because it or is busy.	is outside the range defined	
RELAY_FM ROLLER_SH_DIN ROLLER_SH_DIN ROLLER_SH_FM ROLLER_SH_FM SMART_PANEL_	The IP address (192.168.1. in the Discovery process of	191) could not be set because it or is busy.	is outside the range defined OK	
RELAY_FM ROLLER_SH_DIN ROLLER_SH_DIN ROLLER_SH_FM ROLLER_SH_FM SMART_PANEL	The IP address (192.168.1. in the Discovery process of	191) could not be set because it or is busy.	OK	
RELAY_FM ROLLER_SH_DIN ROLLER_SH_DIN ROLLER_SH_FM ROLLER_SH_FM SMART_PANEL_	The IP address (192.168.1. in the Discovery process of	191) could not be set because it or is busy.	OK	
RELAY_FM ROLLER_SH_DIN ROLLER_SH_DIN ROLLER_SH_FM ROLLER_SH_FM SMART_PANEL_	The IP address (192.168.1. in the Discovery process of	191) could not be set because it or is busy.	OK	

Note!

If the assignment for a CLU is removed, the assignment made between the modules of a given CLU is removed, and it is possible to restore the previous IP address given during Discovery (if it was changed during the assignment) - the following message is displayed:

Name	Serial number	IP address	Assignment	
CLU_ZWAVE_2	221000805	192.168.88.205	<choose clu=""></choose>	¥
ANALOG_DIN	461000557		461000028	
DIGITAL_IN_DIN	181000432		<choose module=""></choose>	
IO_MODULE_DIN_8	330000320		<choose module=""></choose>	
RELAY_DIN_4 RELAY_FM ROLLER_SH_DIN ROLLER_SH_DIN ROLLER_SH_FM ROLLER_SH_FM SMART_PANEL_FI	Existing module assignment the CLU assignment. Do yo	nts in the context of this CLU will u want to continue? f the newly found CLU to the ori Yes	I be lost when you change	

After assigning in the next step (Discovery summary), the assigned modules have the status *Adding* (*Reassigning*).

lame	Serial number	hwType	hwVer	fwType	fwApiVer	Operation	Status	1
CLU_ZWAVE_2	221000805	19	1	3	509	Adding (Reassigning)	🔵 ок	
ANALOG_DIN	461000557	25	1	2	1	Adding	🔵 ок	
DIGITAL_IN_DIN	181000432	20	1	2	1	Adding	🔵 ок	
IO_MODULE_DIN_8	330000320	30	1	2	1	Adding (Reassigning)	🔵 ок	
ONE_WIRE	198114303	255	1	40	3	Adding	🔵 ок	
RELAY_DIN_4	201000009	21	1	2	1	Adding	🔵 ок	
RELAY_FM	340000238	31	1	2	1	Adding	🔵 ок	
ROLLER_SH_DIN	461000001	23	1	2	3	Adding (Reassigning)	🔵 ок	
ROLLER_SH_DIN_3	550001454	42	1	2	2	Adding	🔵 ок	
ROLLER_SH_FM	441000006	32	1	2	2	Adding	🔵 ок	
ROLLER_SH_FM	441000121	32	1	2	2	Adding	🔵 ок	
SMART_PANEL_FM_4	250004177	3	1	3	6	Adding (Reassigning)	🔵 ок	
ANALOG_DIN	461000028	25	1	2	1	Removing	🔵 ок	
DIGITAL_IN_DIN	181000661	20	1	2	1	Removing	🔵 ок	
DIMMER_MOSFET_DIN	320001389	26	1	2	1	Removing	🔵 ок	
DIMMER_MOSFET_DIN	320001684	26	1	2	1	Removing	🔵 ок	
DIMMER_MOSFET_DIN	320001701	26	1	2	1	Removing	🔵 ок	
IO_MODULE_DIN_8	330000136	30	1	2	1	Removing	🔵 ок	
LED_RGBW_DIN	281000026	24	1	2	1	Removing	🔵 ок	
LED_RGBW_DIN	281000497	24	1	2	1	Removing	🔵 ок	
LED_RGBW_DIN	281000916	24	1	2	1	Removing	🔵 ок	
ONF WIRF	45808639	255	1	40	3	Removing	Ок	1

 \times

By clicking the *Finish* button, the configuration is sent to the CLU.

5. CLU status

0

5.1. Module diodes

Based on the LEDs of the CLU module - the user is informed about the current status of power supply, configuration and current device mode.

Status	Description
00	No power supply
• •	Green LED flashes every 500ms - system OK
•	Configuration error, system not configured or no communication with the IOM module
• •	The green LED flashes every 200ms - CLU in the mode of adding Z-Wave modules
0 ()	The red diode flashes every 200ms - CLU in the mode of removing Z-Wave modules
	The green LED is on for 1 second, then both LEDs blink three times (every 200ms) - confirmation of adding the Z-Wave module
	Both LEDs blink three times (every 200ms), then the red one goes out and the green one blinks every 500ms - confirmation of removing the Z-Wave module
• •	Both LEDs blink every 700ms - CLU in logging mode

5.2. CLU module icon in OM

Through the appearance of CLU module icon in the objects menu of the opened project, the user is informed about the current status of both configuration and connection between OM and CLU. For each CLU in the project, there are four work modes: normal, disconnected, configuration error, and emergency mode.

Normal mode

CLU in the normal mode does not contain configuration errors, and the connection between OM and CLU is active. Name of the module is displayed in black, and the icon marking this status looks like this:

🔹 CLU

If the name of a specific CLU is preceded by \star symbol, it means that there was a change in configuration which has not been sent to this CLU yet.

Disconnected

If there is no connection between CLU module and OM (no physical connection or error in LAN configuration), the name of CLU will be displayed in red, and the icon marking this status will look like this:

🕷 CLU

If the CLU is in disconnected mode, the user has an option of making and saving changes in the project, but the new configuration won't be sent to CLU - that is only possible in normal mode.

Configuration error

If during work on the project there are changes made which contain configuration errors (e.g. creation of connection with non-existent object, or entering non-existent command), CLU in which the error was found will be switch to Configuration error work mode. Name of that CLU will remain black, but there will be error symbol displayed next to its icon:



After dragging cursor over the CLU, a field with list of errors will appear.



Emergency mode

If configuration containing syntax errors is sent to CLU (e.g. after sending script in the text edition), or if LUA interpreter crashed as a result of script's work, CLU will switch to EMERGENCY MODE. The name of the CLU will change its colour to orange, and the failure symbol will appear next to its icon:

CLU

If CLU switched to emergency mode, check accuracy of recently made changes and send configuration to CLU again.

Note!

The CLUs taken out from the box (in the delivered condition) are in Emergency mode!

6. Connecting Z-Wave modules

Wireless IOM modules communicate with other system elements using Z-Wave protocol. They work and are recognisable (both from OM level and from control level) the same as other modules in the GRENTON system.

To enable using Z-Wave modules in the system, that system must contain at least one module CLU equipped with Z-Wave controller.

Note!

Adding the Z-Wave module to the system should take place after placing it **in the installation's destination** - this is due to the requirements for creating the mesh network, the range of the device operation and disturbances of the Z-Wave network.

6.1. Adding Z-Wave modules

You have to add IOM Z-Wave modules to CLU for them to be present in the system. You can do it in two ways:

1. By clicking LINK button on CLU module

In order to do that, press Link button placed on the CLU module with Z-WAVE controller.

After pressing the button, the CLU switches to the mode of adding modules - the ON diode blinks all the time at intervals of 200ms.

Then, press the button once on the added Z-Wave module (according to the instruction manual). The correct addition of the module will be signaled by lighting the ON diode for 1 second, and then by blinking the ON and ERR LEDs three times in intervals of 200ms. After completing the addition of the Z-Wave module, the ON LED will flash at 500ms. After completing the addition of Z-Wave modules, *CLU Discovery* should be performed - new Z-Wave modules will be added to the project.

2. Using Object Manager software

This way of adding allows to define time for which CLU will await for wireless modules to "introduce" themselves, therefore it is very useful when you want to add modules located further away from the CLU and need more time to press the button on them.

To add wireless modules using OM, open object configurator of Z-Wave CLU module to which you will add wireless modules (double-click CLU icon on the objects list). Then, set time (as parameter) for StartZwaveDiscovery method in the Control tab and invoke this method.

0					×
CLU properties					
Name: CLU		Serial number:	221001090		
IP: 192.168.100.223		FW:	505		
Control News	Embedded features	atures			
Method	Parameter name		Value	Call	_
AddToLog	Log	string		۲	
ClearLog				۲	
SetDateTime	LocalTimestamp	09:04:24 06-07-2020		۲	
StartZWaveDiscovery	Time	number		۲	
StopZWaveDiscovery				\triangleright	
				OK Cancel	

Set time will be the time for which CLU awaits for new Z-Wave modules to connect. When the time is up, the search is finished, even if no modules were found. Entering 0 will cause the search to end automatically after finding one new module.

After calling the <u>StartZWaveDiscovery</u> method, press the button located on the added Z-Wave module. The correct addition of the module will be signaled by lighting the ON diode for 1 second, and then by blinking the ON and ERR LEDs three times in intervals of 200ms. After correctly adding the Z-Wave modules, the ON LED will flash at 500ms. After completing the addition of Z-Wave modules, the *CLU Discovery* process should be performed - new Z-Wave modules will be added to the project.

Note!

Calling the StopZWaveDiscovery method interrupts the search for Z-Wave modules.

Note!

Do not add modules to the system that have already been connected to it. If you are not sure whether a module has been added before, you should first perform the removal procedure for this module.

The situation is similar when the Z-Wave module was connected and was not removed from another controller - the procedure of removing the module should be performed first.

6.2. Removal of Z-Wave modules

For the wireless module to stop appearing in the system configuration, it must be removed from it.

To do this, it is necessary to press the Unlink button on the CLU with the controller.

After pressing it, the CLU goes into the module removal mode - the ERR diode blinks all the time at 200ms intervals.

Then press the button on the wireless module to be removed. Correct removal of the module will be signaled by blinking ON and ERR LEDs three times in 200ms intervals. After completing the deletion of the Z-Wave module, the ERR LED will turn off and the ON will flash at 500ms. The last step will be *CLU Discovery* - the removed modules will be grayed out.

6.3. No communication with the Z-Wave module - a mechanism for counting communication failures and blocking device communication in the Z-Wave network

Note!

The presented mechanism is available for CLU from version 04.07.41 (183201)

Failures in communication with a Z-Wave device may occur when:

- the Z-Wave module is damaged,
- no power supply (230V) on the module / depletion of the battery supplying the module,
- the device works on the border of the range with the controller / it is not within the range of the controller,
- the controller (CLU) after sending the order will not receive confirmation from the device (ACK).

Information about the device status in the Z-Wave network can be read from the Object Manager using the ZWAVE object of the given Z-Wave module.

Note!

ZWAVE_CONFIG objects are not available for all Z-Wave modules - they have Grenton Z-Wave modules and selected modules that are supported by the Grenton system.

The following features are available for a given object:

0							×
Objec	t properties						
Name:	x4262592002_ZWAVE_	CONFIG1		Device type:			~
ld:	CLU221001090->ZWA	.1902		Serial number:	4262592002		1
Туре:	ZWAVE_CONFIG						
@ c	ontrol 🔡 User sche	emes 隆 Events 🛞 Embedded	l features	Statistics			
Feature	name	Current value	Initial val	ue	Unit	Range	
Nodel)	2				[0-232]	
Banneo	ł	0				[0-1]	
FailCou	nt	0				[0-65536]	
Auto	o refresh 🙆						(Refresh
							0
						ОК	Cancel

- NodeID Number of the module (node) in the Z-Wave network (transmitted for each Z-Wave module after adding it to the controller)
- Banned Information on blocking Z-Wave communication with the module
- FailCount The number of unsuccessful attempts to communicate with the Z-Wave module

Failure counting mechanism in communication:

• In the event of failure of communication with the module (no response, confirmation, etc.), the FailCount feature of the ZWAVE_CONFIG object of the Z-Wave device is incremented.

0					×
Object propertie	s				
Name: x4262592002_	ZWAVE_CONFIG1	Device type:			v
Id: CLU22100109	0->ZWA1902	Serial number:	4262592002		1
Type: ZWAVE_CON	IFIG				
🔗 Control 🚺 U	Jser schemes 🔖 Events 🔶 Er	nbedded features			
Feature name	Current value	Initial value	Unit	Range	
NodelD	2			[0-232]	
Banned	0			[0-1]	
FailCount				[0-65536]	
	\smile				
🖌 Auto refresh 🧑				٩	Refresh
				UK C	ancel

- Another attempt to send an order to the retry device is every 15 seconds 3 attempts are made to communicate with the device.
- In the case of 3 attempts to communicate with the module, the Banned feature is set to 1 and all communication with the module is blocked.

0							×
Objec	t properties						
Name:	x4262592002_ZWAVE_C	ONFIG1		Device type:			~
ld:	CLU221001090->ZWA19	902		Serial number:	4262592002		1
Туре:	ZWAVE_CONFIG]			
@ 0	ontrol 🔚 User schem	nes ≽ Events 📢	Embedded features	Statistics			
Feature	name	Current value	Initial va	alue	Unit	Range	
Nodel)	2				[0-232]	
Banned	i	1				[0-1]	
FailCou	nt	4				[0-65536]	
✓ Auto	o refresh 🧑						O Refresh
						ОК	Cancel

Locking mechanism for communication with the module

- When the Banned feature is set to 1, communication with the Z-Wave device is blocked this means that all action calls on the device (ie change of output status, query for parameters) are not sent by the CLU to the blocked module.
- You can assign any action when you block communication with a given module using the OnBanned event.

0							×
Objec	xt properties						
Name:	x4262592002_ZWAVE_CONF	FIG1		Device type:			~
ld:	CLU221001090->ZWA1902			Serial number:	4262592002		1
Туре:	ZWAVE_CONFIG]			
@ c	ontrol 🔡 User schemes	Events	1 Embedded features	Statistics			
Event n	iame		Assigned c	ommands			Add command
OnBan	ned						d -
						ОК	Cancel

- A short query (NOP) is sent to the banned module every 1.5 minutes:
 - if the module does not confirm receipt of the query, the Banned attribute continues to be 1, and the next query is repeated every 1.5 minutes,

Note! If more than one module is banned, then the NOP is sent every 1.5 minutes to the next banned module . Example:	
3 modules (A, B, C) banned	
CLU - NOP -> module A	
1.5 minutes break	
CLU - NOP -> module B	
1.5 minutes break	
CLU - NOP -> module C	
1.5 minutes break	
CLU - NOP -> module A	
e.t.c.	

• if the module confirms receipt of an inquiry (ACK), the Banned attribute changes to 0 - it means that it is possible to send commands again to a given device.

0							×
Objec	t properties						
Name:	x4262592002_ZWAVE_C	ONFIG1		Device type:			¥
ld:	CLU221001090->ZWA1	902		Serial number:	4262592002		1
Туре:	ZWAVE_CONFIG						
@ 0	ontrol 당 User schen	nes 🔖 Events 🎓 Emb	edded features	Statistics			
Feature	name	Current value	Initial va	lue	Unit	Range	
Nodel	0	2				[0-232]	
Banned	ł	1				[0-1]	
FailCou	nt	4				[0-65536]	
						_	
✓ Auto	o refresh 🧑						3 Refresh
						ОК	Cancel

• It is possible to manually remove the lock - using the **RemoveBan** method.

0					×	
Objec	t properties					
Name:	x4262592002_ZWAVE_CONFIG1	Device type:			~	
ld:	CLU221001090->ZWA1902	Serial number:	4262592002		1	
Туре:	ZWAVE_CONFIG]				
c 🚱 c	ontrol 당 User schemes New Events 😭 Embedded features	Statistics				
Metho	Parameter name		Value		Call	
Remov	reBan					
ClearFa	ilCount				\triangleright	
				OK	Cancel	

• After calling this method, the Banned property changes value to 0 - it means that it is possible to send commands again to a given device.

Note!

RemoveBan is not synonymous with re-communication with the module - it allows resending an order / query to the module! In the event of failure, the entire blocking process is restarted!

• In the event of communication failure with the module, the entire mechanism (counting failures in communication and blocking) starts from the beginning.

It should be remembered that in case of unblocking communication with the module, the FailCount feature is not reset - this can be done using the ClearFailCount method.

6.4. Z-Wave network configuration tips

When creating a Z-Wave network, it is important to:

• Z-Wave network configuration was carried out after installing devices in the workplace.

The Z-Wave network is defined statically. Z-Wave devices should be linked when they are in their target locations. Changing the position of Z-Wave devices after adding them can cause unexpected problems with communication in the Z-Wave network - with all devices!

• The antenna (in modules that have it) has not been folded or wrapped around the module.

The antenna should be facing the module if possible.

• The battery modules are not woken up at the same time.

Waking modules at the same time leads to delays in operation. In order to avoid the described situation, different awakening times should be used for all devices (in the ZWAVE_WAKEUP object for battery modules) and selected in such a way that the set times have the largest possible "smallest common multiple", e.g. 57min, 58min, 59min , 60min, 61min, etc ...

• There are no inactive modules (damaged or incorrectly removed) in the Z-Wave network.

The linked module that is missing in the system causes continuous attempts to renew communication with it, which in turn can introduce temporary delays and deficiencies in communication with other devices as well.

Note!

For CLU Z-Wave placed in a box/cabinet, it is recommended to use longer antennas and take them out of the switch cabinet.

6.5. Clearing information about nodes

It is possible to simultaneously remove all Z-Wave modules from the CLU. The HardReset function is used for this purpose <u>look up XI.1.</u>.

7. Sending the configuration to the CLU



The configuration is stored in the OM and until it is sent to the CLU, it is not taken into account in the operation of the system. To send the configuration to the CLU, press the 'Send configuration' button in the menu.

Object Manager detects on which CLU the change was made and sends the configuration.

Note!

After sending the configuration, the CLUs will be restarted, so the lamps connected to the system may go out, and the system may not react for a few seconds to press the switches, etc.

8. Initial values of features

Each object in the system has its own list of features, some of which can be set. Features can be set during system startup (CLU restart), thanks to which it is possible to configure the behavior of objects once (eg setting the touch panel buttons as bistable, monostable). Initial values of features are set in the tab: *Embedded features* in the object's form (CLU, inputs, outputs):

0								×
Objec	t properties							
Name:	x250004877_PANEL_E	BUTTON1		Device type:	Button/Swit	ch		~
ld:	CLU221001090->PAN	V6913		Serial number:	250004877			1
Туре:	PANEL_BUTTON							
🥐 c	ontrol User sch	emes 隆 Events 礢 Embedde	d features	Statistics				
Feature	name	Current value	Initial value	2	Unit		Range	
Mode		0	Monostab	le v			0,1,2	
HoldDe	elay	1000	1000		ms		[100-5000]	
HoldIn	terval	100	100		ms		[100-2000]	
Value		0			bool		0,1	
Label		-			string)	[0-15]	
IconA		-			string)	[0-9]	
IconB		-			string)	[0-9]	
√ Auto	o refresh 🌀						[Refresh
							ОК	Cancel

To set the selected feature, in the appropriate field, enter the desired value in the Initial value column, and then send the configuration to the CLU.

9. Creating basic connections

Calling reactions in the system (eg switching on the lighting after pressing the key) is accomplished by creating links between objects. As a rule, these are connections between the entrance (eg switch) and the output (lamp). However, the system does not limit the creation of connections and allows them to create events between events of any other objects between events, which makes it possible, for example, to switch on the LED lighting when the main lamp is turned off.

Associations can be created in two ways:

- By using configuration diagrams it allows quick creation of typical switch-lamp connections;
- By manually creating event-method bindings which will provide great flexibility in creating system logic.

Creating basic connections by using configuration diagrams

To create a binding using the configuration scheme, do the following:

- Click on the selected input;
- Go to the User schemes tab, select an interesting scheme from the list;

0				×
Objec	t properties			
Name:	x260000524_BUTTON1	Device type:		¥
ld:	CLU220001096->BUT2582	Serial number:	260000524	1
Type:	BUTTON			
🥐 ca	ontrol 🚺 User schemes New Events 🛞 Embedded features	Statistics		
Schen	ne Dimmer v User configuration Two-way switch Bistable button Monostable button to switch bistable relay Button hold-ramp Dimmer Script (scene) Color change (LED RGB)	Relationships		ı ∯ Add
			ОК	Cancel

• By clicking 🕂 Add , select the outputs to be triggered;

0			×
Objec	t properties		
Name:	x260000524_BUTTON1	Device type:	~
ld:	CLU220001096->BUT2582	Serial number: 260000524	1
Туре:	BUTTON		
C Scher	ontrol 😈 User schemes 📡 Events 😭 Embedded	I features Statistics	_
Jener	Diminer V	© ×	
		Choice of outputs for the scheme Dimmer	
		▲ +♣+ CLU220001694	
		↑ x42000018_EEDRGB1	
		▲ x310000003_DIMM2	
		▲ • CLU220001096	
		★ x280001173_LEDRGB1	
		x31000009_DIMM1 x31000000 DIMM2	
_		OK Cancel	
		OK Cancel	

Only outputs for which it is possible to assign a given logic will appear in the output selection.

To select more than one output, select objects by holding the Ctrl or Shift key on the keyboard. After confirming the selected outputs, Object Manager will automatically create event associations with object methods.

• Configure the remaining inputs and send the configuration to the CLU.

Manually creating event-method bindings

To manually create an event-method binding:

- From the list of objects in the system, select the object you are interested in, double-click it;
- Go to the Events tab:

0					×
Objec	t properties				
Name:	x250004877_PANEL_BUTTON1	Device type:	Button/Switch		~
ld:	CLU221001090->PAN6913	Serial number:	250004877		1
Туре:	PANEL_BUTTON				
@ c	ontrol 🔢 User schemes 🏹 Events 🈭 Embedded features	Statistics			
Event n	ame Assigned	commands			Add command
OnValu	eChange				÷
OnSwit	tchOn				÷
OnSwit	tchOff				÷
OnSho	rtPress				÷
OnLong	gPress				÷
OnHold	1				÷
OnClick	k				÷
				ОК	Cancel

- Find the event to be linked from the list and click +;
- In the method selection format, select the object, method and parameters in sequence:

0				×
Parameters				
CLU->Lamp->SwitchOn(60000)				
* 2 • • •	1			
* *CLU * "Lamp * x201000275_AnalogIN1 * x201000275_DOUT2 * x201000275_DOUT3 * x201000275_DOUT3 * x201000275_DOUT4 * x250004877_PANEL_BUTTON1 * x250004877_PANEL_BUTTON1 * x250004877_PANEL_BUTTON10 * x250004877_PANEL_BUTTON11 * x250004877_PANEL_BUTTON11 * x250004877_PANEL_BUTTON12 * x250004877_PANEL_BUTTON12 * x250004877_PANEL_BUTTON13 * x250004877_PANEL_BUTTON13 * x250004877_PANEL_BUTTON14 * x250004877_PANEL_BUTTON15 * x250004877_PANEL_BUTTON16 * x250004877_PANEL_BUTTON3 * x250004877_PANEL_BUTTON3 * x250004877_PANEL_BUTTON4 * x250004877_PANEL_BUTTON5 * x250004877_PANEL_BUTTON5 * x250004877_PANEL_BUTTON6 * x250004877_PANEL_BUTTON8 * x250004877_PANEL_PAGE1 * x250004877_PANEL_PAGE1 * x250004877_PANEL_PAGE2 * x250004877_PANEL_PAGE1 * x250004877_PANEL_PAGE2 * x250004877_PANEL_PAGE1 * x250004877_PANEL_PAGE1 * x250004877_PANEL_PAGE1 * x250004877_PANEL_PAGE3 * x250004877_PANEL_PAGE1 * x250004877_PANEL_PAGE3 * x250004877_PANEL_PAGE3 * x250004877_PANEL_PAGE3 * x250004877_PANEL_PAGE1 * x250004877_PANELPAGE1 * x250004877_PANELPAGE1 * x250004877_PANELPAGE1 * x250004877_PANELPAGE1 * x250004877_PANELPAGE1 * x250004877_PANELPAGE1 * x250004877_PANELPAGE3 * x250004877_PANELPAGE3 * x250004877_PANELPAGE3	 Hethods SetValue(Value) Switch(Time) SwitchOn(Time) SwitchOff(Time) SetOverload(Overload) 	Parameters Time: Unlimited Time Value Feature	60000 S	ms
			ОК	Cancel

• Configure the remaining events and send the configuration to the CLU.

Up to 4 exit methods can be added to each event. If it is necessary to add more methods or conditions, it is suggested to create a script.

0						×
Objec	t properties			5		
Name:	x250004877_PANEL	BUTTON1	Device type:	Button/S	Switch	~
ld:	CLU221001090->PA	N6913	Serial number:	2500048	77	1
Туре:	PANEL_BUTTON					
c	ontrol 🔡 User so	hemes 隆 Events 🛞 Embedded features	Statistics			
Event n	ame	Assigned	commands			Add command
OnValu	eChange					4
OnSwit	chOn					d .
OnSwit	tchOff					÷
OnSho	rtPress					÷
OnLong	JPress					÷
OnHold	I					÷
OnClick	c	CLU->Lamp->SwitchOn(6000	0)		Assign command 🐹	÷
		CLU->x201000275_DOUT2->S	witch(0)		Assign command 💥	
		CLU->x250004877_PANEL_BU	TTON1->ShowOK	0	Assign command 💥	
		CLU->x320001024_DIMM1->S	etValue(1)		Assign command 💥	
					ОК	Cancel

If the user created individual event-method connections using **Events** tab, they are visible on the list

as User configuration.

Control 🔡 User schemes	Events 😭 Embedded features	Statistics		
Scheme User configuration	~	Relationships	CLU220001694->x300000280_DOUT1 💥	
				de Add
			ОК	Cancel

10. Performing an update

10.1. The process of updating the interface database

If the option *to automatically update the interfaces database* is marked when the Object Manager is started for the first time, there is no need to run it again. Otherwise, remember to update regularly. Updating the interfaces database should be done always before updating the software of a given Grenton module, and it is necessary to connect to the internet to perform it (the update takes place from the server).

In order to update the interface database in the Object Manager:

- Select Tools from the menu bar.
- Select the item Interfaces base.
- Select Update interfaces database from the list displayed:

File Edit	Too	s Window Help			
- Q		Smart diagram	Alt+Q	4	📑 😭 😰 💥 😫 🗐 (
f ¹ ⁰ House?		Interfaces base	•		Update interfaces base
•		Firmware update view			Update interfaces base from file Reload interfaces base
🔺 🚺 Ob		Reset cipher key		5	Reload interfaces base
⊿ +∰+		Save the diagnostic package			
4		Download file with measurement			
	تر ا* 🔶	.amp		_	
	🚽 x2	201000275_AnalogIN1			

• After a while a window will appear with detected changes in the interface database, which should be accepted by clicking the *OK* button:

0	Interfaces base	×
Interfaces bas	e changes detected.	
New files: module_one_wi module_one_wi module_one_wi	re_fv01_10.xml re_fv01_28.xml re_fv02_28.xml re_fv03_28.xml	^
		~
Save changes	Yes	No

• Then a window will be displayed informing you that the interfaces base has been reloaded:



• The final stage is sending the configuration to the central logic unit, which follows automatically.

Note!

If the configuration is up to date, then after choosing the option: *Update interface base*, the following message will be displayed:



10.2. The process of updating the firmware on the CLU

The firmware update on the CLU is carried out in order to: add support for new devices and increase the capabilities of the system. More details can be found in the Release Notes.

Note!

Firmware update CLU 2.0 is only possible in Object Manager version 1.3.0.1927 or higher!

Note!

Device status display is available in Object Manager version 1.3.5.240201 or higher!

Note!

The following requirements must be met for the update process to run correctly:

- The computer must be connected to the AC adapter, it cannot be on battery power.
- The network connection between the CLU<->router<->computer must be wired, the WIFI connection cannot be used.
- Do not perform any actions on the Grenton system while updating the firmware.

A. Update from Grenton server

In order to to update the firmware on the CLU you should:

- Select Tools from the menu bar.
- Select item Firmware update view:

File Edit	Tools	Window Help	
- \	S	mart diagram Alt+Q	
C House2	Ir	nterfaces base	
+#+	F	irmware update view	
⊿ 😳 Ob ⊿ 🌞 ⊿	R S D	eset cipher key ave the diagnostic package Download file with measurement	
	→ Larr ▲ x201	ip 1000275 AnalogIN1	1

• Select the object type <u>CLU_ZWAVE_2</u>. Selecting the check box is only possible if the current firmware on the CLU is out of date:

G Firmy	ware update view						- 🗆 🗙
Firmware	repository: Official Grenton 👻	•					
Choice	Туре	Serial Number	Current Firmware	Target Firmware	Status	IP Address	Refresh
• 🗸	CLU_ZWAVE_2 (19-1-3)	221001380	5.5.6	5.5.5	ОК	192.168.100.189	Undate selected
	ANALOG_DIN (25-1-2)	461000377	1.2.8	1.2.8	ОК	192.168.100.189	
	ROLLER_SH_DIN (23-1-2)	451002574	1.1.11	1.1.11	OK	192.168.100.189	
	RELAY_DIN_4 (21-1-2)	201000275	1.3.11	1.3.12	OK	192.168.100.189	
	DIGITAL_IN_DIN (20-1-2)	181000775	1.2.12	1.2.12	ОК	192.168.100.189	
	DIMMER_MOSFET_DIN (26-1-2)	320001024	1.1.9	1.1.9	OK	192.168.100.189	

• Select the Update selected option. Read and accept to continue:



• Once accepted, the upgrade process will begin:

Note!

During the upgrade process, do not turn off the power or perform other activities on the system.

O Firmware update process	_		×
2020.10.13 15:10:42 Update started for devices: [type=CLU_ZWAVE_2 (19-1-3), serialNumber=221001380, sourceFirmware=5.6.3-2041, targetFirmwar 2020.10.13 15:10:44 Firmware update initialized 2020.10.13 15:10:44 Uploading firmware file to CLU	e=5.5	i.5, :	ip=192
در			>
	ि	Ca	ncel

• If the firmware update fails, there will be two attempts to update the module. If they also fail, the message [FAILED] will appear next to the module:

Firmware update process			×
<pre> Firmware update process 2020.10.14 09:46:00 Update started for devices: [type=CLU_ZMAVE_2 (19-1-3), serialNumber=221001380, sourceFirmware=5.5.6, targetFirmware=5.5.5 2020.10.14 09:46:01 Uploading firmware file to CLU 2020.10.14 09:46:06 Firmware update failed - Uploading firmware file failed 2020.10.14 09:46:06 Retry update (2) 2020.10.14 09:48:07 Retry update (3) 2020.10.14 09:50:08 Firmware update failed - Receive timed out 2020.10.14 09:50:08 Update result: ###################################</pre>	, ip #### re=5		×
			>
		Clos	;e

• If there are TF-Bus modules in the queue for updating and the CLU update fails, their update will be canceled:



• If the update is successful, [UPDATED] appears when the CLU is updated.

• To complete the update process, click Close button.

If the update was successful, the firmware version should match the target version and the device status should be "OK". If the OM cannot establish a connection with the CLU then the status will be "DISCONNECTED".

Note!

After the update is completed, perform CLU Discovery.

You can update more CLUs in one process. To do this, select all CLUs to be updated on the selection list.

B. Update with a .ZIP file

By default, information about the current firmware is downloaded from the Grenton server. However, you can update CLU from a local file. Updating from a file is done using .zip packages prepared by Grenton.

Note!

Do not rename the .zip file provided by Grenton. The file must have an appropriate name to be properly loaded.

To update from a file you need to:

• Expand the *Firmware repository* and use the Choose a file option:

Firmware update view							
Firmware	repository: Official Grenton 🔻]					
Choice	Official Grenton	Serial Number	Current Firmware	Target Firmware	Status	IP Address	Refresh
• 🔲	CLU_ZWA	221001380	5.6.3-2041	5.5.5	ОК	192.168.100.189	Undate colocted
	ANALOG_DIN (25-1-2)	461000377	1.2.8	1.2.8	OK	192.168.100.189	opoure serected
	DIMMER_MOSFET_DIN (26-1-2)	320001024	1.1.9	1.1.9	OK	192.168.100.189	
	ROLLER_SH_DIN (23-1-2)	451002574	1.1.11	1.1.11	OK	192.168.100.189	
	DIGITAL_IN_DIN (20-1-2)	181000775	1.2.12	1.2.12	ОК	192.168.100.189	
	RELAY_DIN_4 (21-1-2)	201000275	1.3.11	1.3.12	ОК	192.168.100.189	

After loading the file, you will be able to select the module that can be updated. Under *Target Firmware*, the version number of the firmware to which the update will take place appears.

G Firmw	vare update view						- 🗆 ×
Firmware r	epository: File (file:/C:/CLU_ZWA	VE_2-19-1-3-5.06.03-2043.zip) 👻]				
Choice	Туре	Serial Number	Current Firmware	Target Firmware	Status	IP Address	Refresh
• 🗸	CLU_ZWAVE_2 (19-1-3)	221001380	5.6.3-2041	5.6.3-2043	OK	192.168.100.189	Undate selected
	ANALOG_DIN (25-1-2)	461000377	1.2.8	N/A	ОК	192.168.100.189	oposic science
	DIMMER_MOSFET_DIN (26-1-2)	320001024	1.1.9	N/A	OK	192.168.100.189	
	ROLLER_SH_DIN (23-1-2)	451002574	1.1.11	N/A	OK	192.168.100.189	
	DIGITAL_IN_DIN (20-1-2)	181000775	1.2.12	N/A	OK	192.168.100.189	
	RELAY_DIN_4 (21-1-2)	201000275	1.3.11	N/A	OK	192.168.100.189	

• After selecting the module, select the Update selected option and continue the installation, similarly to the standard update from the server look up VI.10.2.A.

10.3. The process of updating the firmware of the 2.0 series modules

Note!

The device firmware update process is only possible for modules from the 2.0 series!

Note!

The following requirements must be met for the TF-Bus device update process to run correctly

- The computer must be connected to the AC adapter, it cannot be on battery power.
- The network connection between the CLU<->router<->computer must be wired, the WIFI connection cannot be used.
- Do not perform any actions on the Grenton system while updating the firmware.
- You should start with the CLU firmware upgrade, then perform CLU Discovery and in the next step you can upgrade the modules, after which CLU Discovery should also be performed.

The 2.0 series modules update is similar to the CLU firmware update. Before starting the update, keep the following in mind:

- Firmware update of a given module is only possible if the firmware on the CLU is current. Otherwise, you must also select CLU, which will be updated first.
- The update is carried out for all modules of the same type. By selecting a given module, all modules of the same type on the list (if any) are selected.
- If an update is made for a given module to a version that changes the firmwareApiVersion of a module (for example, from version 1.x.x to 2.x.x) an icon A is displayed next to the module in the Target firmware column and after selecting the module a warning about the interface changes and creating new objects (_UPGRADED) for the device after CLU Discovery is displayed.



- At the start of the process, it is not possible to stop updating for a device that is currently being updated. The update will be aborted after the process is completed for a given group of devices (canceled for the next group of modules).
- In some cases, the update of a given device can be multi-step. In this case, after completing the upgrade process, check whether another new firmware version for the module is available.
- After updating the module, check if the firmware version is the same as the target version, and if the device status is "OK".
- If the module shows the "BOOT" status after the update, it means that the firmware update process has been interrupted and the device is still waiting for the new firmware. After closing the update process window, a warning will appear:


In such a case, the update should be repeated. The "DETACHED" status means that the CLU cannot establish connection with the module. In such a case, check the TF-Bus connections and perform a reset by disconnecting the power.

Note!

After completing the update, perform CLU Discovery. It should not be performed if any module has the "BOOT" or "DETACHED" status!

10.4. CLU / modules status in the firmware update window

The modules status is displayed in the firmware update view table. If there is a status change while the update window is open, the list must be refreshed using the "Refresh" button.

Note!

Device status display is available in Object Manager version 1.3.5.240201 or higher!

Note!

The functionality of device statuses is available for CLUZ fw. version 5.06.03-2043 or higher!

A. CLU status

Status: OK - Correct connection with the CLU.

Firmwa	are update view						- 0
nware re	epository: File (file:/C:/CLU_ZWA	VE_2-19-1-3-5.06.03-2043.zip)	•				
hoice	Туре	Serial Number	Current Firmware	Target Firmware	Status	IP Address	Refresh
	CLU_ZWAVE_2 (19-1-3)	221001380	5.6.3-2041	5.6.3-2043	ОК	192.168.100.189	Lindate selec
	ANALOG_DIN (25-1-2)	461000377	1.2.8	N/A	OK	192.168.100.189	opulate selec
	DIMMER_MOSFET_DIN (26-1-2)	320001024	1.1.9	N/A	ОК	192.168.100.189	
	ROLLER_SH_DIN (23-1-2)	451002574	1.1.11	N/A	ОК	192.168.100.189	
	DIGITAL_IN_DIN (20-1-2)	181000775	1.2.12	N/A	ОК	192.168.100.189	
	RELAY_DIN_4 (21-1-2)	201000275	1.3.11	N/A	ОК	192.168.100.189	

Status: DISCONNECTED - The OM cannot connect to the CLU. This status is when the OM does not get a response from the CLU. In this case, check if the network cable is properly connected to the CLU / router / switch or perform a voltage reset of the CLU.

O Firmw	are update view						- 🗆 X
Firmware r	epository: File (file:/C:/CLU_Z	WAVE_2-19-1-3-5.06.03-2043.zip)					
Choice	Туре	Serial Number	Current Firmware	Target Firmware	Status	IP Address	Refresh
	CLU_ZWAVE_2 (19-1-3)	221001380	N/A	N/A	DISCONNECTED	192.168.100.189	Update selected

B. TF-Bus modules status

Status: OK - Correct connection of the module with the CLU.

G Firmw	vare update view						- 🗆 X
Firmware r	repository: File (file:/C:/CLU_ZWA	VE_2-19-1-3-5.06.03-2043.zip) -]				
Choice	Туре	Serial Number	Current Firmware	Target Firmware	Status	IP Address	Refresh
•	CLU_ZWAVE_2 (19-1-3)	221001380	5.6.3-2041	5.6.3-2043	ОК	192.168.100.189	Undete coloritad
	ANALOG_DIN (25-1-2)	461000377	1.2.8	1.2.8-1949A	ОК	192.168.100.189	opdate selected
	DIMMER_MOSFET_DIN (26-1-2)	320001024	1.1.9	1.1.9-2020	ОК	192.168.100.189	
	ROLLER_SH_DIN (23-1-2)	451002574	0.0.0	1.1.10-1949A	BOOT	192.168.100.189	
	DIGITAL_IN_DIN (20-1-2)	181000775	1.2.12	1.2.12-2006	ОК	192.168.100.189	
	RELAY_DIN_4 (21-1-2)	201000275	0.0.0	1.3.12-2006	DETACHED	192.168.100.189	

Status: BOOT - The module is currently in the bootloader. This state appears when the module update is interrupted. In this case, the module must be updated again.

Note!

Do not execute CLU Discovery if the module has the BOOT status! The module will not be discoverable by the Discovery process. If this happens, you will need to force an update for that module <u>look up VI.10.5.</u>.

mware	repository: File (file:/C:/CLU_ZWA	VE_2-19-1-3-5.06.03-2043.zip)	-				
hoice	Туре	Serial Number	Current Firmware	Target Firmware	Status	IP Address	Refresh
	CLU_ZWAVE_2 (19-1-3)	221001380	5.6.3-2041	5.6.3-2043	ОК	192.168.100.189	Undate cala
	ANALOG_DIN (25-1-2)	461000377	1.2.8	1.2.8-1949A	ОК	192.168.100.189	opdate sele
	DIMMER_MOSFET_DIN (26-1-2)	320001024	1.1.9	1.1.9-2020	OK	192.168.100.189	
	ROLLER_SH_DIN (23-1-2)	451002574	0.0.0	1.1.10-1949A	BOOT	192.168.100.189	
	DIGITAL_IN_DIN (20-1-2)	181000775	1.2.12	1.2.12-2006	OK	192.168.100.189	
	RELAY_DIN_4 (21-1-2)	201000275	0.0.0	1.3.12-2006	DETACHED	192.168.100.189	

Status: DETACHED - CLU cannot establish connection with the module. In such a case, check the TF-Bus connections and perform a voltage reset of the CLU.

Firmwa	are update view						
Firmware re	pository: File (file:/C:/CLU_ZWA	VE_2-19-1-3-5.06.03-2043.zip)	•				
Choice	Туре	Serial Number	Current Firmware	Target Firmware	Status	IP Address	Refresh
•	CLU_ZWAVE_2 (19-1-3) ANALOG_DIN (25-1-2) DIMMER_MOSFET_DIN (26-1-2) ROLLER_SH_DIN (23-1-2) DIGITALI_N_DIN (20-1-2) RELAY_DIN_4 (21-1-2)	221001380 461000377 320001024 451002574 18100075 201000275	5.63-2041 1.2.8 1.1.9 0.0.0 1.2.12 0.0.0	5.6.3-2043 1.2.8-1949A 1.1.9-2020 1.1.10-1949A 1.2.12-2006 1.3.12-2006	OK OK BOOT OK DETACHED	192.168.100.189 192.168.100.189 192.168.100.189 192.168.100.189 192.168.100.189 192.168.100.189	Update selecte

10.5 Forcing the module update

If a properly connected module is not detectable by the Discovery process, it is possible that the firmware for that module has not been properly loaded. In such a situation, it is necessary to force the module update.

In order to force a module update, you should:

- Select Tools from the menu bar.
- Select item Firmware update view:



• Right-click on the CLU module and select the option "Force update":

🕜 Firmwa	re update view						– 🗆 ×
Firmware re	pository: Official Grenton 🔻						
Choice	Туре	Serial Number	Current Firmware	Target Firmware	Status	IP Address	Refresh
-	CLU_ZWAVE 2 (19-1-3)	221001380	5.5.5	5.5.5	ОК	192.168.100.189	Update celected
	RELAY_DIN_ Force update	191000162	1.3.12	1.3.12	ОК	192.168.100.189	opuare selected
	ANALOG_DI Refresh	461000377	1.2.8	1.2.8	ОК	192.168.100.189	
	DIMMER_MOSFET_DIN (26-1-2)	320001024	1.1.9	1.1.9	ОК	192.168.100.189	
	ROLLER_SH_DIN (23-1-2)	451002574	1.1.10	1.1.11	ОК	192.168.100.189	
	LED_RGBW_DIN (24-1-2)	281000507	1.4.7	1.4.6	ОК	192.168.100.189	
	IO_MODULE_DIN_8 (30-1-2)	330000132	1.4.9	1.4.9	ОК	192.168.100.189	
	RELAY_DIN_4 (21-1-2)	201000275	1.3.12	1.3.12	ОК	192.168.100.189	
	DIGITAL_IN_DIN (20-1-2)	181000775	1.2.12	1.2.12	ОК	192.168.100.189	
	CLU_ZWAVE (0-0-3)	220001096	N/A	N/A	DISCONNECTED	192.168.100.103	
	CLU_ZWAVE_2 (19-1-3)	221001090	5.5.5	5.5.5	ОК	192.168.100.80	

• Select one module for which the forced update is to be performed and press the Force button:

Force update	— 🗆 X
Forcing the update should be performed when the module i found during "CLU Discovery". Forcing the update will also be	s connected to the TF-Bus, but it has not been updated correctly and is not be performed for connected and correctly found devices.
The action will be performed for modules connected to the Type: CLU_ZWAVE_2 (19-1-3) Serial Number: 221001380	following CLU:
Туре	Target Firmware
ANALOG_DIN (25-1-2)	1.2.8
ANALOG_DIN (25-2-2)	1.2.12
DIGITAL_IN_DIN (20-1-2)	1.2.12
DIMMER_MOSFET_DIN (26-1-2)	1.1.9
IO_MODULE_DIN_8 (30-1-2)	1.4.9
LED_RGBW_DIN (24-1-2)	1.4.6
RELAY_DIN_2 (22-1-2)	1.3.12
RELAY_DIN_4 (21-1-2)	1.3.12
RELAY_FM (31-1-2)	1.1.8
ROLLER_SH_DIN (23-1-2)	1.1.11
ROLLER_SH_FM (32-1-2)	1.0.7
TOUCH_PANEL_FM_4 (28-1-2)	1.1.5
TOUCH_PANEL_FM_8 (27-1-2)	1.1.3
L	
	Force Cancel

• After reading the message, select "Yes" to continue:



• After a successful update, [UPDATED] will appear:

• Firmware update process	-		×
<pre>2020.10.19 12:32:24 Update started for devices: [type=ROLLER_SH_FM (32-1-2), 1p=192.168.100.199, targetFirmware=1.0.7] 2020.10.19 12:32:25 Upinoding firmware file to CLU 2020.10.19 12:32:28 File uploaded to CLU 2020.10.19 12:32:28 Firmware file eventfied. 2020.10.19 12:32:28 Preparing bootloader 2020.10.19 12:32:40 Resetting CLU 2020.10.19 12:32:41 Firmware updated 2020.10.19 12:32:41 Update result: ####################################</pre>	••••		****
		Clo	e

• CLU Discovery must be performed when finished.

11. Diagnostic view

Note!

Diagnostic view is available for Object Manager version v1.4.0 (or higher) and for CLUZ fw. v5.7.1 (or higher).

The diagnostic view presents information about all CLU in the project and the modules connected to them.

To open Diagnostic View in Object Manager:

• Select Tools from the menu bar,

• Select Diagnostic view.



A window showing a list of all CLUs in the project will appear:

O Diagnostic vie	w								-					
	Type Serial Number Status IP Address Cloud Connecti Voltage HwType HwVersion FwVersion FwAPIVersion													
Туре	Serial Number	Status	IP Address	Cloud Connecti	Voltage	HwType	HwVersion	FwType	FwVersion	FwAPIVersion				
CLU_ZWAVE_2	221000552	LOGGING	192.168.0.69	Disconnected	24.85 [V]	19	1	3	5.10.1-2219	510				
CLU_ZWAVE_2	221000540	ОК	192.168.0.155	Connected	23.99 [V]	19	1	3	5.10.1-2219	510				
TF-Bus Z-Wave														

The view presents the following information for the CLU:

- Type device type name,
- Serial Number device serial number,
- Status CLU status,
- IP Address device IP address,
- Cloud Connection cloud connection status,
- Voltage CLU supply voltage value,
- HwType hardware type,
- HwVersion hardware version,
- FwType firmware type,
- FwVersion firmware version,
- FwAPIVersion API firmware version.

CLU statuses:

- OK CLU returns diagnostic data,
- DISCONNECTED CLU not responding,
- LOGGING CLU in logging mode,
- DIAGNOSTICS OFF CLU responds but does not return diagnostic data.

After clicking on the CLU, a window appears with all TF-Bus modules connected to it:

😡 Diagnostic v	iew									-	
≣ C .	Auto refresh										
Туре	Serial Number	Status	IP Addres	s Cloud Cor	nnecti Vo	ltage	НwТуре	HwVersion	FwType	FwVersion	FwAPIVersion
CLU_ZWAVE_2	221000552	LOGGIN	G 192.168.0.6	59 Disconn	ected 24	.85 [V]	19	1	3	5.10.1-2219	510
CLU_ZWAVE_2	221000540	OK	192.168.0.1	55 Conne	cted 23	99 [V]	19	1	3	5.10.1-2219	510
TF-Bus Z-Way	n Lans										
	e Logs										
	e Logs										
Type	Serial Number	Status	Order 🔺	Voltage	Fails	Banned	НwТуре	HwVersion	FwType	FwVersion	FwAPIVersion
Type	Serial Number 181000235	Status OK	Order 🔺 Disordered	Voltage 24.75 [V]	Fails 0	Banned false	HwType 20	HwVersion 1	FwType 2	FwVersion 1.2.14	FwAPIVersion
Type DIGITAL_IN_DIN DIMMER_MO	Serial Number 181000235 320000441	Status OK OK	Order Disordered Disordered	Voltage 24.75 [V] 0.0 [V]	Fails 0 0	Banned false false	Н wType 20 26	HwVersion 1 1	FwType 2 2	FwVersion 1.2.14 1.1.11	FwAPIVersion 1 1
Type DIGITAL_IN_DIN DIMMER_MO IO_MODULE	Serial Number 181000235 320000441 330000283	Status OK OK OK	Order Disordered Disordered Disordered	Voltage 24.75 [V] 0.0 [V] 24.21 [V]	Fails 0 0 0	Banned false false false	HwType 20 26 30	HwVersion 1 1 1	FwType 2 2 2	FwVersion 1.2.14 1.1.11 1.4.11	FwAPIVersion 1 1 1 1 1
Type DIGITAL_IN_DIN DIMMER_MO IO_MODULE LED_RGBW_DIN	Serial Number 181000235 320000441 330000283 281000024	Status OK OK OK OK	Order Disordered Disordered Disordered Disordered	Voltage 24.75 [V] 0.0 [V] 24.21 [V] 23.64 [V]	Fails 0 0 0 0	Banned false false false false	HwType 20 26 30 24	HwVersion 1 1 1 1 1 1	FwType 2 2 2 2 2 2	FwVersion 1.2.14 1.1.11 1.4.11 1.4.7	FwAPIVersion 1 1 1 1 1
Type DIGITAL_IN_DIN DIMMER_MO IO_MODULE LED_RGBW_DIN RELAY_DIN_2	Serial Number 181000235 320000441 330000283 281000024 191000055	Status OK OK OK OK	Order Disordered Disordered Disordered Disordered Disordered	Voltage 24.75 [V] 0.0 [V] 24.21 [V] 23.64 [V] 24.46 [V]	Fails 0 0 0 0 0 0	Banned false false false false false false	HwType 20 26 30 24 22	HwVersion 1 1 1 1 1 1 1 1 1 1	FwType 2 2 2 2 2 2 2 2 2	FwVersion 1.2.14 1.1.11 1.4.11 1.4.7 1.3.13	FwAPIVersion 1 1 1 1 1 1 1 1 1 1

The view shows the following information for TF-Bus modules:

- Type module type name,
- Serial Number serial number of the module,
- Status connection status with TF-Bus,
- Order the sequence of connection to the TF-Bus (set manually),
- Voltage voltage value on the bus for the module,
- Fails number of failed module responses,
- Banned information if the module is banned,
- HwType hardware type,
- HwVersion hardware version,
- FwType firmware type,
- FwVersion firmware version,
- FwAPIVersion API firmware version.

In the lower right corner there is information about the number of used modules:

Modules usage 19/48

Note!

If the module does not have a voltage measurement, "0.0 [V]" will be displayed in the Voltage column.

If the CLU has Z-Wave modules connected, it will be possible to display them in the Z-Wave tab:

😡 Diagnosti	c view											-	
EC	Auto refresh												
Туре	Serial Nu	mber	Status	IP Address	Cloud Conn	ecti Volt	age	HwType	HwVersion	FwTy	pe Fw	ersion I	wAPIVersion
CLU_ZWAVE	_2 221000	552	LOGGING	192.168.0.69	Disconnec	ted 24.85	5 [V]	19	1	3	5.10	.1-2219	510
CLU_ZWAVE	_2 221000	540	OK	192.168.0.155	Connecte	ed 23.99	9 [V]	19	1	3	5.10	.1-2219	510
TE-Bus 7-W	/ave Logs												
	Logs												
Туре	Serial Num	Status	NodelD	HomelD	ProductID	Manufactu	TypeID	Fails	Banned	Signal	Battery level	HwType	FwAPIVersi
ZWAVE_GR	390100309	ОК	2	cc38475e	0135	3142	2700	0	false	72 [%]	N/A	314227000	255
ZWAVE_GR	400100322	OK	3	cc38475e	0142	3142	2800	0	false	64 [%]	N/A	314228000	255
ZWAVE_GR	380100539	OK	4	cc38475e	0000	3142	2600	0	false	83 [%]	N/A	314226000	255

The view presents the following information for Z-Wave modules:

- Type module type name,
- Serial Number serial number of the module,
- Status connection status with CLU,
- NodeID Node ID of the module,
- HomeID Home ID of the module,
- ProductID Product ID of the module,
- ManufacturerID Manufacturer ID of the module,
- TypeID Type ID of the module,
- Fails number of failed module responses,
- Banned information whether the module is banned,
- Signal signal strength,
- Battery level battery level,
- HwType hardware type,
- FwAPIVersion API firmware version.

Note!

The values for signal and Battery level are updated after the module wakes up. If the module is banned (Banned = true) the current values will not be displayed.

Note!

If the Z-Wave module is not a battery module, "N/A" is displayed in the Battery level column.

For CLU with the TelnetLogLevel embedded feature, a Logs tab is available to record and display the logs of a given CLU:

O Diagnostic vie	Diagnostic view – 🗆 X												
	uto refresh												
Туре	Serial Number	Status	IP Address	Cloud Connecti	Voltage	HwType	HwVersion	FwType	FwVersion	FwAPIVersion			
CLU_ZWAVE_2	221000552	LOGGING	192.168.0.69	Disconnected	24.85 [V]	19	1	3	5.10.1-2219	510			
CLU_ZWAVE_2	221000540	OK	192.168.0.155	Connected	23.99 [V]	19	1	3	5.10.1-2219	510			
TF-Bus Z-Wave	Logs												
▶∎⇒	= ô												
2022-06-01 12:	57:06 Connection	with telnet of	pened.										
Notal													

To fully use the described logging functionality, you must have Object Manager version 1.7.0 or higher and CLU with firmware 5.10.01 or higher.

A textbox is available in the view to present the logged logs. Logging level specified via CLU embedded feature TelnetLogLevel or SetTelnetLogLevel method:

- 0FF,
- ERROR,
- WARNING,
- INFO,
- DEBUG.

Note!

Only one telnet connection is supported within one CLU.

The maximum number of characters for one log line is 1000.

The functionality of sending logs is available in scripts, using function blocks. It enables to display logs with the designations: [ERROR], [WARNING], [INFO], [DEBUG]. When using the print function the value is displayed in logging at the login [DEBUG] level.

0			\times
Select function			
~	Value		
delay print	◯ Features		
logError logWarning			
logInfo			
logDebug	ОК	Cano	cel



The logging functionality is also available whenever the CLU is in the Emergency mode. It is then possible to display the reason for entering Emergency mode.

11.1 Configuration of the diagnostic view

A. Refreshing the view

The diagnostic view is refreshed when the "Refresh" button is pressed, or every 5 seconds if the Auto refresh option is selected.



B. Table configuration

Visibility and the order of displaying columns can be set after pressing the "Column settings" button, located in the upper left corner of the window.



The configuration window will appear:

Column name	Visible	↑ Up
Туре	\checkmark	
Serial Number	\checkmark	↓ Dowi
Connection	\checkmark	
IP Address	\checkmark	
Cloud Connection	\checkmark	
Voltage	\checkmark	
HwType	\checkmark	
HwVersion	\checkmark	
FwType	\checkmark	
FwVersion	\checkmark	
FwAPIVersion	\checkmark	

It is also possible to change the order of the columns by dragging their names in the main window.

C. Sorting rows

By clicking on a column name, you can sort rows in ascending or descending order or return to the default display.

	Serial Nu	m	NodelD 🔺	Н	melD	Productl
R	390110	87	2	dai	b8332	0000
R	380100	12	3	dai	b8332	0000
R	400110	56	4	dai	b8332	0000
E	3660284	006	6	dai	b8332	1082

D. Setting the sequence of connection to the TF-Bus

The order of the modules connected to the TF-Bus must be set manually, otherwise the modules in the Order column will be marked as "Unordered".

To set the order of modules, click the "Tfbus order" button:

TF-B	TF-BUS Z-		Wave	
	6]		
Туре			Serial Num	

Then a window will appear in which you can set the order of modules in relation to CLUZ (Center O) using the Up and Down buttons:

Туре	Serial Number	Order 🛧
DIMMModule	31000003	Left -8
MODULE	290000521	Left -7
DIGITAL_IN_DIN	181000775	Left -6
RELAY_DIN_4	201000275	Left -5
ROLLER_SH_FM	441000509	Left -4
LED_RGBW_DIN	281000507	Left -3
ROLLER_SH_DIN	451002574	Left -2
DIMMER_MOSFET_DIN	320001391	Left -1
CLU_ZWAVE_2	221001380	Center 0
ANALOG_DIN	461000050	Right 1
LED_RGBW_FM	421000113	Right 2
RELAY_FM	340000535	Right 3
DALI_MASTER	490000110	Right 4
RELAY_DIN_2	191000162	Right 5
IO_MODULE_DIN_8	330000395	Right 6

E. Configuration of the login tab

Available buttons in the tab:

TF-Bus	Z-Wave	Logs	
	∎ਙ	=	ô

- Start log,
- Stop log,
- Word wrap,
- Clear log,
- Scroll lock.

12. Other operations on the system

Cleaning configuration

The user always has the option of clearing the configuration of any CLU in the system. In order to clear the configuration on the selected CLU, first we need to select them, and then click on the cleaning icon.



Clearing the configuration deletes all changes and settings made and sets default values.

After clearing the configuration on the given CLU, the links between the objects of the other CLU and the cleaned CLU objects will be lost!

Downloading configuration from an existing object

Object Manager allows you to download the configuration located in an existing and operating system. The configuration can be downloaded only when creating a new clean project - it is not possible to download the configuration for a project that already has some data.

Adding a new CLU or IOM module

After installing the new module, add it to the system. The module must be plugged into the system bus (before disconnecting the new module, the bus power supply must be disconnected). In the case of Z-Wave modules, add them to the controller - <u>look up VI.6.1</u>. After correct installation of the module, you should run CLU Discovery, it will automatically search and add a new module. If there are unused I / 0 in the system, the system will launch a list that allows assigning inactive I / 0 to the I / 0 from the new module. After completing the above procedure, the module will appear in the list of objects.

Replacing the IOM module (inputs / outputs)

If a given module is exchanged for a different one but with the same parameters (same type and same number of inputs / outputs), the module must also be replaced in the project in the Object Manager program. After correctly installing and connecting the module, the CLU Discovery function must be started. The system will automatically search for and recognize a new module, and automatically assign an input / output from the "old" module to it. After searching, a list will be displayed with I / O assignments between the mentioned modules and an option to confirm and accept the change. If you accept the changes, nothing will change in the list of objects, and all assignments will be made automatically. Lack of acceptance will cause new items to appear on the list of objects, while at the same time inactive inputs / outputs will be displayed (marked in gray).

Exchange of the module from one CLU to another in the same system.

In situations where it is necessary to switch the IOM module from one CLU to another, physically overpass the module (switch cables), and then perform the CLU Discovery function, which will update the list of modules in all CLUs.

VII. Advanced configuration functions

1. Containers

In order to manage available inputs / outputs more easily, OM has a function of containers, which allow to group inputs/outputs according to needs of the user.

Containers can be used for example to sort inputs / outputs according to their function (lighting, heating, etc.) or their placement in the building (living room, kitchen, etc.).

To add new container, click container icon in the menu, then name it. New container icon will appear in the tree on the level of the main container. No Polish letters can be used in the container name.

The inputs / outputs are assigned to each other by: dragging from the CLU or after clicking on it with right mouse button and choosing option *Move to container*.

2. Scripts

Scripts enable creation of very complex logic using conditional functions, loops, and variables, which also allows to create complex scenes that modify their actions depending on external conditions.

Created scripts are displayed in the system as CLU methods and can be invoked by being added to events of any object. They can also be invoked from the level of other scripts.

To create a scripts, click CLU on which the script will be stored, then select option Create script in the actions menu, as shows picture below:



After naming the script (no Polish letters allowed), script builder that enables script creation will open in a tab. Script builder can work in two modes: graphic and text. After new script creation, script builder automatically launches in the graphic mode. You can switch to text mode by clicking Text mode, as shows picture below.

🗐 Script 🔀			
			😳 Palette 🛛 👂
E Text mode	Script parameters	Plun script STAR	<u> </u> } 00↓ ↓
			Compon 👳
			Condition
			Action
			block
			Operations
			on variables
		· · · · · · · · · · · · · · · · · · ·	
<		>	

Note!

Switching from graphic mode to text mode is irreversible. If a script was created in graphic mode, it will be converted to the text form. However, after edition in text mode, going back to graphic edition won't be possible.

2.1. Script creation in the graphic mode

After opening, a clear worksheet appears.



There is components list on the right of the worksheets. Drag commands from the list to the worksheet to add them. After dropping a command on the worksheet, a dialogue box open which allows to determine command parameters and conditional instructions. After adding a new component to the worksheet, a connection between last added component (or start if it's the first component) and currently added component is created automatically. Commands are fulfilled in order of connections, beginning with start. If you want to change the order of fulfilling commands, delete existing connection and add a new one (according to desired order) using Link tool.

🗟 🖽 🕇

Note!

Leaving a component, which is not connected to other components, in the worksheet, will be seen as error and displayed as configuration error of CLU o which the script was created.

Script Builder uses the following components:

A. Action

CLU_220001205->x190000558_DOUT1->SwitchOn(0)

The block in which the order to be executed is entered. The command might be not only method invocation, but also value change or script invocation. After dragging action icon into the worksheet, a window with objects list and their methods opens. Scripts are available on the list as CLU methods after clicking CLU on which they are located.

B. Condition



Logic block realising IF then ELSE function. Using this block makes it possible to make the action dependent on the conditions, eg if it is dark, turn on the light, if not, turn it off. After dragging block to the worksheet, enter condition which needs to be fulfilled in its parameters. After adding "condition" component, add at least one "action" or "Operation on variables" component and connect it with "condition" component with an arrow which head points at the action. After adding an arrow, OM will ask whether the action should be performed when condition is met (true) or when it is not (false). Two actions can be connected to one condition - when performed when it is fulfilled, the other when it is not. To change the true / false assignment, double click on one of the arrows coming out of the condition.

Picture below shows easy conditional instruction which changes light intensity depending on the hour.



Conditions can be connected via cascade connection, thanks to which operator and can be implemented (action is performed when two or more conditions are fulfilled). The following diagram shows an example of using cascade connection:



Conditions can compare any object feature or script parameter with a number, a text, other feature, or other script parameter.

C. Function block



Contains instructions invoked within the script which can be used for creating more advanced scenes ("delay" function) and debugging ("print" function). After dragging the icon of the block into the worksheet, a window with list of function blocks opens. The list contains:

• DELAY

Allows to set time delay between consecutive commands during script realisation

PRINT

The command that causes the display of the declared text in debugging.

D. Operation on variables

CLU_220001205->Page++

The block enables creation of complex logical functions using variables. The variables must be declared first so they can be used in the script. Variables can be declared in scrip parameters and CLU user features. A variable declared as script parameter can be used within the script to make calculations during running of the script. Data stored within that variable is not available outside the script. To store or use data from variables outside the script, use CLU user features.

When the user feature or script parameter is set to type number, several math operations are available.

0					×
Select function					
★ Number1	= += -= *= /= ++ 	 Value Feature Script 	10 es parameter	numb	ber
		()K	Cano	cel

Description mathematical operations based on the example above (with the given number value = 10):

Actions	Description
=	Setting the number 10 as the value of the user feature / script parameter.
+=	Adding the number 10 to the value of the user feature / script parameter.
-=	Subtracting the number 10 from value of the user feature / script parameter.
*=	Multiplying the number 10 by the value of the user feature / script parameter.
/=	Dividing the value of the user feature / script parameter by the number 10.
++	Increasing the value of the user feature / script parameter by +1.
	Decreasing the value of the user feature / script parameter by -1.

2.2. Script creation in the editor

Another method of script creation is using text editor, which gives practically endless possibilities of script creation using LUA instructions expanded with possibility of using addresses of objects of logical interface.

Logical interface addresses are treated as functions and can be invoked and used as parameters in conditional instructions, loops, etc.

The script below shows way of using logical interface addresses in scripts:

```
Graphical mode | Parameters | Run script

1 if (CLU_220001205->R2012>-1) then

2 CLU_220001205->R201000961_DIMM1->SetValue(1)

3 clas

4 if (not (CLU_220001205->R0urc6)) then

5 CLU_220001205->R21000961_DIMM1->SetValue(0.5)

6 else

7 CLU_220001205->R20000051_DIMM1->SetValue(0.3)

8 CLU_220001205->Rage=CLU_220001205->Rage+1

9 end

10 end

11
```

2.3. Script parameters

Scripts can have initial parameters, which are sent during their invocation (e.g. in the event) and then can be used inside the script, e.g. in conditional instructions. Script parameters are created by clicking on Script parameters, then a window will open in which you should select Add parameter and define the name, value to run, default value, type and restrictions. To delete a variable, click the button - on the right.

0				×
Scripts Parameters				
Object name				
script_A Add parameter				
Name Value to run	Default value	Туре	Restrictions	
number_1 1	1	number $$	1-10	-
string_1	null	string \vee		-
logic_1	true	boolean \vee		-
		OK	Cancel	
Notel				

Variable names cannot contain spaces and start with a digit or a character.

Value to run - this is the value that is set when running the script using the "Run script" button in the Object Manager.

Default value - this is the parameter value that will be used if the parameter is not specified when calling the script.

Type - allows to determine type of data that will be stored in the parameter:

- string for text data;
- **number** for numerical data;
- **boolean** for boolean variables true / false.

Restrictions - for numerical parameters, restrictions of maximum and minimum parameter values can be set. In the case of invocation of script outside this range, the script will be invoked with default parameter value. Restrictions must be specified in the format x-y, where x and y are the minimum and maximum values of the restriction. After entering the restriction, complete the *Value to run* field.

Note!

Script parameter contains values which can be used only within it (local values). These values are not available in other scripts. If it's necessary to save values to use in other areas, use user features available in CLU, or send the value to another script using its parameter.

Note!

Local variables in one script may only be used by the CLU on which the script was created. In order for the variable to be used by other CLUs, the **user feature** must be defined on the CLU, e.g .:

(CLU_A - CLU on which the script was created)

```
CLU_A->Lampa1->SetValue(local_variable)
CLU B->Lampa2->SetValue(user variable)
```

2.4. Scripts invocation

Scripts are displayed and treated as CLU methods . They can be invoked from events of any object, and from action block in another script identically as other methods.

• Invocation by an event

Picture below shows adding script to a switch. The script will be started after pressing the switch.

0			×
Objec	t properties		
Name:	x250004877_PANEL_BUTTON1	Device type:	¥
ld:	CLU221001090->PAN6913	Serial number: 250004877	1
Туре:	PANEL_BUTTON		
c	ontrol 😈 User schemes 🏹 Events 🌪 Embedded features	Statistics	
Event n	ame Assigned o	commands	Add command
OnValu	eChange		.
OnSwi	tchOn		÷
OnSwi	tchOff		÷
OnSho	rtPress		÷
OnLon	gPress		÷
OnHole	1		÷
OnClic	k CLU->Script1()	Assign command 💥	÷
		OK	Cancel

Invocation from script level

The following figure shows how to call from the script level using the Run script button.



Invocation from another script

Picture below shows fragment of diagram in which another script was invoked using action block.



• Calling a script with a parameter

To specify input parameters when calling the script, enter them in parentheses in the correct order:

CLU-> script (12, "text", true)

where: parameters were specified for a variable of type number, string and boolean.

To assign specific features to local variables, enter the full paths of given features:

CLU-> script_A (CLU-> AnalogIN1-> Value, CLU-> BUTTON1-> Label, CLU-> CloudConnection)

where: parameters were specified for a variable of type number, string and boolean.

The input parameters can be easily defined using the Parameters window:



2.4. Find / Replace function

Note!

The Find / Replace function is available in Object Manager version 1.6.0 or higher.

In the case of scripts created in the editor, it is possible to perform the operation of finding and replacing data strings in the script. The Find / Replace function is available from the Edit -> Find / Replace menu or it can be called in the script using the Ctrl + F keyboard shortcut.

🛈 G	rentor	n Object Manager (version 1.6.0-2141)		
File	Edit	Tools Window	Help			
->\ <mark>`</mark>		Back Repeat	Ctrl+Z Ctrl+Y	9	To the second	
€8 H		Cut	Ctrl+X		☐ DOUT_SwitchOn ⊠ Parameters Run script	
Eilter		Сору	Ctrl+C			
Filter		Paste	Ctrl+V		1 Relay X4 DIN Switchun 2 CUUZ 1-Sw201000220 DOUT 01-SSwitchun(0)	
~ 6		Delete	Delete	<u>^</u>	3 CLUZ_1->x201000339_DOUT_01->SwitchOn(0) 4 CLUZ_1->x201000339_DOUT_02->SwitchOn(0)	
		Select all	Ctrl+A			5 CLUZ_1->x201000339_DOUT_04->SwitchOn(0) 6
		Find	Ctrl+F		7 Relay x2 DIN SwitchOn	
		Content Assist	Ctrl+Space		8 CLUZ_2->x191000016_DOUT_01->SwitchOn(0) 9 CLUZ_2->x191000016_DOUT_02->SwitchOn(0)	

When searching for a given string, it should be placed in the Find text box, while when searching and replacing, the new phrase should be enter also in the Replace with text box. The window contains options that define the specificity of searching for a given phrase, e.g. specifying the direction of the search, the scope for which the search is being performed, or the case-sensitivity of the letters.

Actions available:

- Find the phrase entered in the Find field is searched;
- *Replace* the found phrase is replaced with the text entered in the *Replace with;*
- *Replace/Find* the indicated phrase is replaced and then the next text (entered in the *Find* field) is searched;
- Replace All the replacement occurs throughout the script for the given phrase.

Note!

The Find / Replace feature is not available for scripts in graphic mode.

2.5. Copying scripts

Note!

The copy option is available in Object Manager version 1.6.0 or higher.

In the case of scripts created in editor, it is possible to make a copy of the script. The script can be copied in the area of a given CLU as well as it is possible to make a copy of the script to another CLU.

Grenton Object Manager	(version 1.6.0-2141)			
File Edit Tools Window	/ Help			
🔌 📲 🦃 🌾		Ċ		<9
🕼 Home_v2 👘 Trash				
* 2 -				
Filter objects	✓ 10.1	_		
w 🚱 Object Manager				
Scrints				
Add script				
DOUT Switch	hOn			
↑ x201000339	Open		Ctrl+Alt+O	
★ x201000339	Delete			
↑ x201000339	Character		52000	
↑ x201000339	Change name		F2	
w x201000339_	Add virtual object			
V 🔹 CLUZ_2	Assign active I/O to inac	tive		
🗸 😽 Scripts	CLUDiscovery			
🕂 Add scri	Close CIU			
▲ x191000016_	Clear CLU			_
▲ x191000016	Copy script			
№ x191000016_	Create script			
₩ x3300002/4_	Generate GUI			
₩ x330000274_	New container			
₩ X330000274	Send all			
v330000274_	1.05	_		
×330000274_DIN	05 L 06			
₩ x330000274 DIN	1 07			
₩ x330000274 DIN	1 08			
	_ UT_01			
	UT_02			
	UT_03			
	UT_04			
	UT_05			
	UT_06	~		

After calling the option, the *Copy of the script* window is displayed in which you must select the CLU to which the selected script will be copied and a new script name.

0	×
Copy of the script	
Choose CLU:	
CLUZ_1	~
Enter the new name of the script:	
DOUT_SwitchOn_copy	
	OK Cancel

The copied script is added to the list of scripts of a given (selected) CLU.



Note!

Script copying is not possible with scripts in graphic mode. When you try to copy, the following message will be displayed:



3. Date and time

CLU is equipped with real time clock (RTC) powered by built-in battery. CLU provides several features which can be used in the script. The full list of time-related features reads as follows:

Name	Description
Uptime	Work time of the device since the last reset (in seconds)
Date	Shows current date
Time	Shows current time (hh:mm:ss)
Day	Shows number of current day of the month
Month	Shows number of the current month
Year	Shows number of the current year
DayOfWeek	Shows number of current day of the week (0=Sunday)
Hour	Shows current hour(without minutes and seconds)
Minute	Shows current number of minutes since the last full hour
LocalTime	Shows current local time maker
TimeZone	Shows the current time zone set
NTPServer	Shows the address of the UTC time server

LocalTime feature is worth noticing - it shows number of seconds since 1970 (local time) as one figure. It can be useful for checking how much time has passed from the previous script running or event.

The current time (in UTC form) is automatically downloaded to the CLU from the NTP server and corrected by the TimeZone set. You can also set it manually using the SetDateTime method.

If, while opening the project, the Object Manager detects that the time on the CLU is out of date, it will ask the user to set the current time to the CLU.



VIII. Visual Builder - Smartphone control

Note!

Support for Visual Builder functionality has been ended. The Home Manager interface creator will be removed in the next versions of Object Manager.

1. System control on the level of smartphone

The system enables control using any devices working on the basis of both android and iOS operational systems (tablets, mobile phones, media players). For each system, one or numerous interfaces can be prepared, each of which can contain many subpages. It enables creation of various interfaces for various users according to their needs and preferences, as well as logical sorting of control function within each interface (e.g. each room at separate subpage or dividing by function such as heating, lighting etc.).

Interfaces are created using Visual Builder tool (which is part of Object Manager), then sent to the application installed on the android or iOS device.



2. Interface structure

Note!

Support for Visual Builder functionality has been ended. The Home Manager interface creator will be removed in the next versions of Object Manager.

Each interface consists of one or many subpages on which control elements (buttons, scroll bars) are placed. The designer can fully control page layout, arrangement of graphical elements, and interface appearance which is set by graphic skin selection.

Pages in the interface can be on two levels: level zero and level one. Pages located on level zero are available as basic interface pages used for navigation by scrolling left / right through them. The user can get to pages of level one by *Link* component.



3. Application for smartphone - GRENTON HOME MANAGER

GRENTON HOME MANAGER application allows to launch user interfaces designed in Visual Builder on android and iOS devices. A packet prepared in Visual Builder containing interface description, all files related to it, and configuration data is sent to the application.

Depending on the created interface, the GRENTON HOME MANAGER application allows to check current system status and control of all functions available in the system.

To control GRENTON system using smartphone, install the application on it, then send interface created using Visual Builder. The application can be downloaded for free from GOOGLE PLAY store for android devices and APP STORE for iOS devices. For application to work properly, it must be installed on a device connected to the same LAN network as GRENTON system, or there must be remote connection created in the WAN network.

4. New interface creation

Note!

Support for Visual Builder functionality has been ended. The Home Manager interface creator will be removed in the next versions of Object Manager.

To create new interface, select Add interface in actions menu.



After entering name, new interface window will open. It contains two tabs: appearance and pages (interface window is also available through double-clicking icon of created interface in the objects menu). Appearance tab:

0	;	×
Interface name: s	smart_home File name: main	
Appearance	Pages	
Screen resolution	480 x 640 VGA 🗸	
Orientation	● Vertical ○ Horizontal	
Skin	BasicSkin_Medium 🗸	
Main menu		
	OK Cancel	

Contains information on the way of displaying interface, such as: resolution, orientation, available skins list, and box that creates main menu upon selection.

Upper right corner contains fields File Name. This name, after sending interface to mobile device is displayed on its interfaces list. In the case of sending more than one interface to one device, remember to give different name to each interface.

Tab Pages contains list of all created pages.

)				
terface name: house		File name: mair	1	
Appearance Pages				
lame Level zero Icon	Page background	Scale backgro	und Rotation of bac	kground Order Remo
Kitchen 🗹	480x640.jpg	O	50	ተ 🔱 🕱
				<u>.</u>
				ب ن ه.

In the tab, you can change order of displaying pages and delete created pages. After selecting levelzero option, the page will be visible in the main menu. You can also change page icon displayed in the menu on the bottom of the page and page background in this tab.

If the chosen background has orientation different than the one used in the interface, you can rotate it using Rotation of backgrounds buttons.

In addition, there is possibility of background scalling. Selecting this option adjusts any background resolution to the resolution of the interface being created.

Note!

Newly created project has no information in the *Pages* tab, new information appears whenever interface page is created.

4.1. Graphic skin selection

Skins are graphic settings sets for mobile device interface.

GRENTON skins

The user can use skins provided with OM in created interfaces. List of available skins is located in the mobile interface parameters.

0						×
						÷
Interface name: h	ouse		File name:	main		
Appearance	Pages					
Screen resolution	480 x 640 VGA	~				
Orientation	• Vertical • Horizontal					
Skin	BasicSkin_Medium V					
Main menu	BasicSkin_ExtraLarge BasicSkin_Large BasicSkin_Large BasicSkin_Medium BasicSkin_Small GrentonSkin_Large GrentonSkin_Large GrentonSkin_Medium GrentonSkin_Medium GrentonSkin_720_x_1280 GrentonSkin_720_x_1280 GrentonSkin_1200_x_1920 GrentonSkin_1200_x_1920 GrentonSkin_1200_x_1920 GrentonSkin_1242_x_2208 GrentonSkin_1240_x_1920 GrentonSkin_1244_x_2260 GrentonSkin_1440_x_2960 GrentonSkin_1440_x_2960 GrentonSkin_1456_x_2048 GrentonSkin_1536_x_2048 GrentonSkin_1600_x_2560 GrentonSkin_1668_x_2224 GrentonSkin_1668_x_2224					
	GrentonSkin_2048_x_2732				ОК	Cancel

4.2. Interface pages creation

After interface creation, new pages should be added to it. Page creation is launched from the actions menu:



After creating the new page and naming it, edition worksheet will open. The worksheet contains two tabs: Design and UI Simulator (the tabs are located at the bottom part of the page).

The DESIGN tab contains: objects list, main container, components and panels list.



Objects list displays all objects used in the current worksheet.

4.3. Components

Components - list of objects which can be used during interface creation. Components list includes:

• Button - works as a monostable button

Button

• Button - works as a bistable button

Visite Two-state button

• Picture - enables adding picture from an external file

💓 lmage

• Text - enables adding text box

A Text

• Slider - enables fluid regulation

Slider

• Measure - displays object value in an analogue way

🕜 Gauge

• Radio - displays object state in digital (on/off) way

Radio button

• Link - enables creating links to other pages within the same interface

Link

• Container - arranges components in the workspace in specific way

🗂 Container

• Camera - allows to display image from an IP camera in the Home Manager application

Camera

• **Thermostat** - allows displaying the virtual object Thermostat in the Home Manager application

Thermostat

• **Intercom** - allows you to configure the intercom (configure the connection to the SIP server, assign methods to specific events and display the image from the IP camera during the call)

Intercom

• **ONE BUTTON** - allows you to assign the BEACON method to the event in ONE BUTTON mode.

ONE BUTTON

• **BEACON ZONE** - allows you to configure BEACON in BEACON ZONE mode and assign specific methods to events (after adding BEACON ZONE to the page visible at the bottom).



Selected objects are put in the container by dragging them from the components list and their arrangement depends on type of used main container.

4.4. Panels

Panels - list of objects that can be used when creating the interface for a mobile device. Panels, unlike components, occupy the entire page of the mobile interface. The list of panels includes:

Thermostat - creates a panel for the thermostat on the entire interface page in the HM.
 Thermostat

The previously created virtual object Thermostat is set as the thermostat panel source.

0	×
ID: ThermostatPanel3	
) Source 💽 Events 💵 Pa	rameters
Thermostat	Thermostat name in HomeManager
CLU_220001205->Bathroom	Bathroom
CLU_220001205->Dining_room	Dining room
CLU_220001205->Bedroom	Bedroom
	OK Cancel

- **Statistics** creates a panel for media measurement on the interface page in HM.
 - Statistic

After dragging the panel to the interface page, select the objects for which the media measurement will be presented in the HM. The window will display only objects for which *Media Measurement* was previously attached.

0			×
ID: StatisticPanel43			
Source Events Events			
CLU_220001205->x180000478_DIN1			
CLU_220001205->x190000558_DOUT1			
CLU_220001205->x210000961_DIMM1			
		ОК	Cancel

• **Camera** - creates a panel for displaying the image from the IP camera on the defined space of the interface page in the HM.

Camera

The RTSP stream of the IP camera should be given as the source of the camera panel.

0	×
ID: VideoStream2	
Source Events I Parameters	
Source rtsp://192.168.3.23/live/ch00_0	
	OK Cancel

4.5. Containers

A container is objects compartment determining their arrangement in the workspace.

Objects within the workspace are arranged accordingly to the type of the selected container.

Container type can be changed in object parameters of the container. Parameters window opens after double clicking container object on the first place in the objects list.

0	×
ID: Container15	
Object parameters	
Type of container Free Vertical Horizontal Free Grid	
	OK Cancel

There four types of containers:

1. **Vertical** - the elements are arranged vertically in equal, automatically created sections.



2. Horizontal - the elements are arranged in horizontal sections



3. Net - the elements are arranged in a symmetrical net.



4. Random - enables any arrangement of the elements within the whole container area


4.6. Adding components and connecting to the system objects

After selecting component from the list on the right and putting it in the main container, windows of its properties opens automatically. There are three tabs in the window (Source, Events, and Parameters), that need to be set as follows:

1. In the source tab, select an object which value should be mirrored, and time of refreshing the value, e.g. if you put a slider controlling the dimmer in the interface, then the controlled dimmer must be set as a source so the current value of light can be displayed on the smartphone.

0						×
		D	-			
ID: Slider2						
) Source Events	arameters					
Source CLU_2200012	205->x190000558_DOUT1->Value	2		Assign commar	nd 💥	÷
				[ок	Cancel

2. Events tab is used for control objects, e.g. a button or a slider. In the tab, there are events applicable for certain type of objects, which needs to be connected to methods of the controlled objects.

0		×
ID: ToggleButton343	vents	
Event name	Assigned commands	Add command
ONSWITCHON	CLU_220001205->x190000558_DOUT1->SwitchOn(0)	÷
ONSWITCHOFF	CLU_220001205->x190000558_DOUT1->SwitchOff(0) Assign command	÷
	OK	Cancel

3. In the Parameters tab there is data on displaying specific object in the interface. The user can change font and object size, and add edition skin.

Ο				×
ID: ToggleButton343				
Source Events	Parameters			
Skin LedRGB_Toggle (Object parameters	0			
x	235			
Y	110			
Text	Lamp on			
Text in not selected state	Lamp off			
			(DK Cancel

Note! If the **\$value\$** command is entered in the Text field, it will display the current value of the value feature of the object selected in the Source tab.

After and during interface creation the user has an option of checking its functionality and appearance. To do that, launch UI Simulator (second tab on the bottom of the page).

4.7. Sending interface to mobile device

To enable system control by a mobile device, the created interface must be sent to GRENTON HOME MANAGER application installed on the device.

To do that:

• Select the interface you wish to send from the list of created interfaces in VISUAL BUILDER - the icon for sending the interface tool is in the main menu:



- On the mobile device, connect to the network in which the CLU is located (after displaying the send window in the Object Manager);
- In the open Home Manager application, select **Connect to OM from the main menu**;
- Enter the IP address of the Object Manager and choose OK:

Type IP addre	ess to con	nect with OM	
CANCEL		ОК	
, the second sec			
	Gren	ton	
\bigtriangledown	0		

• The mobile device will appear in the send window that was displayed in the Object Manager;

Note!

The list displays the devices which have GRENTON HOME MANAGER application running, and have connect to OM option turned on in the application settings.

• Double click on its name or select and select Send file:

(0				-	_		×
5	Send	the interfa	ce file					
R C F	tun th bject	e application H Manager devices:	Home Manager on a mo	obile device, and e	nter the IP address	: 192.	168.3.8	3 for
Γ	L.p.	IP address	Version of application	Screen resolution	Device			
	1.	192.168.3.234	1.2.0	720 x 1208	ALE-L21			
-								
-								
-								
	Send	file						
							Clos	e

• In the mobile application, the window for accepting the interface will appear. Select *Save*:



- The transfer status bar will appear on the screen. When finished, the information on the correct completion of the transfer will be displayed on the upper bar of the program.
- After sending the file with the interface to the mobile device, for the remote control to be possible, the uploaded interface must be loaded.

5. Automatic interface creation - GUI generator

Note!

Support for Visual Builder functionality has been ended. The Home Manager interface creator will be removed in the next versions of Object Manager.

This function allows to quickly create interface through selection of objects which you want to control from all objects available in the system.

Start automatic user interface creation by launching GUI Generator. Generator icon is located in the objects menu:



5.1. Creating an interface with available resolution

A. Simple configurator

After clicking on the icon, the GUI Autogenerator window opens. It is a simple configurator in which you should choose:

- resolution of the mobile device
- a skin that determines the appearance of icons in the interface
- objects (from the list of objects) to be included in the created interface

0 ×
Autogenerator GUI
Screen resolution 480 x 640 VGA VGA
Skin BasicSkin_Medium V
Select objects for interface:
↑ x300000271_DOUT1
[♠] □x300000271_DOUT2
1 x67000007_AnalogOUT1
1 x67000007_AnalogOUT2
1 x450000258_ROLLER_SH1
III
190000558_DOUT2
W 200000218_DOUT1
1 x200000218_DOUT2
1 x200000218_DOUT3
O X20000218_DOUT
Heater Slider
1 x460000283_AnalogOUT1
1 x460000283_AnalogOUT2
Select/deselect all
Advanced configurator
OK Cancel

After selecting the objects of interest, click OK. As a result, the newly created pages appear in the list of objects (under the icon of the created interface) according to the following figure:

O Object Manager File Edit Toolo Help		- o	×
·			
A Constraint of the co			
To Outputs1 The Rations To Store			
	Registered mobile devices: 0	53M of 65N	

At any time, you can change the interface settings - just double click on its name, and a window will open with two tabs: Appearance and Pages.

In the Appearance tab, the user can select skins visible in the interface. In this view there is also a field *Main menu*. After selecting it, a menu will be created containing all available and selected pages.

0	×
Interface name: auto_generated	File name: main
Appearance Pages	
Screen resolution 480 x 640 VGA	
	OK Cancel

The Pages tab contains a list of pages created and allows you to change their parameters, such as:

- Level zero whether or not the page should be displayed in the menu;
- Icon icon displayed in the menu (by default, it is icon from the selected skin);
- **Background** background of the displayed page. By default, background from the selected skin is displayed, but the user can define their own background;
- Scale background match the selected resolution to the resolution of the mobile device;

- Background rotation change of the background orientation;
- Order set the order in which the pages are displayed in the menu;
- **Delete** complete deletion of the page from the interface.

0					×
Interface name: auto	_generated		File name: main		
Appearance	Pages				
Name Level zer	o Icon	Page background	Scale backgro	und Rotation of back	ground Order Remove
Outputs 🗹	outs.png	480x640.jpg	0	5 0	rt 🔱 💥
Outputs1	outs.png	480x640.jpg	0	5 ¢	∱ 🔱 💥
Lamps 🗹	lamps.png	480x640.jpg	0	50	rt 🔱 🗶
Rollers 🗹	rollers.png	3 480x640.jpg	0	50	∱ 🔱 💥
Heating 🗹	heating.png	3 480x640.jpg	_ ○	5 @	∱ 🔱 🗶
Heating1	heating.png	3 480x640.jpg	0	5 ¢	∱ 🔱 💥
Scene 🗹	scenes.png	8 480x640.jpg	_ ○	50	♠ 🔱 🗶
					🕂 Add
				0	K Cancel

The user also has the option of making changes to the generated pages. Double-clicking on the page icon will open the edit sheet, containing the two tabs Design and Simulator.

Design tab - displays the workspace contained in the container and allows you to edit the created page.



The <u>Simulator</u> tab - gives the user the ability to check the appearance and operation of the created interface from the computer screen (before it is sent to the mobile device).



B. Advanced configurator

After clicking the Generate GUI icon in the Autogenerator window, you can select the Advanced configurator option. Selecting this option will open a new window in which you should select:

- the resolution with which the mobile device is working;
- interface orientation (vertical or horizontal);
- arrangement of components (grid or list);
- objects and features (from the list of objects) to be included in the created interface;
- displayed icon and events for each object.

0	>	×
Autogenerator GUI		
Screen resolution:	Orientation of in Layout of co	mţ
Default (480 x 640)	180 y: 640 O Horizontal	
		~
- Containers		
Embedded features		
+ Defined features		
SC:Script	Button V Events	
SC:Another_Script	Button V Events	
WY:x300000271_DOUT1	Two state button V Events	
WY:x300000271_DOUT2	Two state button V Events	
WY:x67000007_AnalogOUT1	Two state button V Events	
WY:x67000007_AnalogOUT2	Two state button V Events	
WE:x67000007_AnalogIN1	Radio V Events	
WE:x67000007_AnalogIN2	Radio V Events	
WE:x290000228_DIN1	Radio V Events	
WE:x290000228_DIN2	Radio V Events	
WE:x290000228_DIN3	Radio V Events	
WE:x290000228_DIN4	Radio V Events	
WE:x290000228_DIN5	Radio V Events	
WE:x290000228_DIN6	Radio V Events	
WE:x240000392_BUTTON1	Radio V Events	
WE:x240000392_BUTTON2	Radio V Events	
WE:x240000392_BUTTON3	Radio V Events	
WE:x240000392_BUTTON4	Radio V Events	
WE:x240000392_BUTTON5	Radio V Events	
WE:x240000392_BUTTON6	Radio V Events	
WE:x240000392_BUTTON7	Radio V Events	
WE:x240000392_BUTTON8	Radio V Events	
WE:x240000392_PANELSENSTEMP1	Radio V Events	
WE:x240000392_PANELSENSLIGHT1	Radio V Events	
WY:x450000258_ROLLER_SH1	Two state button V Events	ы
VI WY:x190000558 DOUT1	Two state button	~
Simple configurator		
	OK Cancel	

Then, after setting all parameters and pressing OK, the window of the created interface opens. The window, in addition to the name field of the created interface, contains two tabs: Appearance and Pages. Their functionalities are exactly the same as in the case of the simple configurator.

After setting all parameters in the created interface window and clicking o_{K} , the newly created pages appear in the list of objects (under the icon of the created interface) as shown in the following figure:

O Object Manager		- 0	×
+ a = 0 w m			
10000478_DIN3			
4 x18000475_DH44			
4 x18000012 BIN/7			
* x180000478 DINB			
↑ 19000558 DOUT1			
↑ x19000058_DOUT2			
↑ x20000218_DOUT1			
↑ x20000218_DOUT2			
★ x20000218_DOUT3			
A 20000218,D0114			
de vanonage Birthar			
4 x24000392 BUTTON3			
A ×240000392 BUTTON4			
№ x240000392_BUTTON5			
№ x240000392_BUTTON6			
AL x240000392_BUTTON7			
** x24000332_BUTTON8			
e zadouose panti senstanti			
W APMONDS2 PINA CLEAR STEPPEN			
* x29000228 INV2			
4 x290000228 DIN3			
₩ x290000228_DIN4			
AF x290000228_DIN5			
14 x290000228_DIN6			
↑ x3000027_D0UT1			
A USDOOD21 DOUD2			
+ x46000283 Analog1N1			
N x460000283 AnalogINZ			
N 460000283_Analog1N3			
New W60000283_Analog1N4			
rh x46000283_AnalogOUT1			
↑ x80000285_Analog0012			
◆ w6000253_Analog0UT3			
4 x5700002 Analog N1			
(4) x67000007_AnalogIN2			
Visual Builder			
✓ [m] auto_generated			
S due page			
×			
	Registered mobile devices: 1	33M of 65M	4 10

As with the simple configurator - the user has the option of making changes to the generated pages. Double-clicking on the page icon will open the edit sheet, containing the two tabs Design and Simulator.

5.2. Creating an interface with its own resolution

In the case of the advanced configurator, it is possible to create an interface with its own, selected resolution. To do this:

- Click on the Generate GUI icon in the top object window;
- Select the advanced configurator;
- In the window for selecting the resolution, select the option *Customize* and enter the dimensions of the interface;
- Select the remaining interface parameters;
- Accept the settings you have made.

0		- D X
Autogenerator GUI		
Screen resolution:	✓ x: 888 y: 999	Orientation of interface: Layout of components: Vertical Horizontal
Containers CLU_220001205 H Embedded features H Defined features Scripts		
SC:Script	Button ~	Events
SC:Another_Script	Button \vee	Events
WY:x300000271_DOUT1	Two state button	 Events
WY:x300000271_DOUT2	Two state button	 Events
WY:x670000007_AnalogOUT1	Two state button	 Events
WY:x670000007_AnalogOUT2	Two state button	V Events
Simple configurator		
		OK Cancel

5.3. Changing the orientation of the interface with its own resolution

Using the advanced configurator, the change of interface orientation does not take place in the Autogenerator GUI window.

0						
Autogenerator GUI			X			C
Screen resolution:			Orient	ation of interface:	-Layout of	components:
Custom	~ x	: 888 y: 999	O Vert	tical izontal	Grid	~
Containers CLU_220001205 H Embedded featu Defined featu Scripts	atures res					
SC:Script		Button	Events			
SC:Another	Script	Button	Events			
WY:x300000271_D	DUT1	Two state button	Events			
WY:x300000271_D	DUT2	Two state button	Events			
WY:x670000007_Ar	nalogOUT1	Two state button	Events			
WY:x670000007_Ar	nalogOUT2	Two state button	Events			~
Simple configurator						
				0	к	Cancel

- If you want to change the orientation of the interface with your own resolution, after creating it you have to:
 - Click twice on its name;
 - Go to the tab Pages ;
 - Delete all visible pages;
 - Go to the Appearance tab;
 - Select orientation horizontal or vertical;
 - Go back to the tab Pages;
 - Add pages to the interface;
 - Accept changes by clicking OK;
 - Send the interface to the mobile device.

6. Video intercom configuration

Note!

Support for Visual Builder functionality has been ended. The Home Manager interface creator will be removed in the next versions of Object Manager.

6.1. Connection and configuration of a video intercom

The configuration of a video intercom with the Grenton system is possible for devices connected to a common network (*LAN*) or those using remote access to a given network, enabling the use of *rtsp* stream of IP camera built into the device. Two or more accounts on the *SIP* server are needed for correct video intercom configuration.

An exemplary configuration was made on the intercom Akuvox R26.

Note! The Video intercom panel is available for Object Manager version 1.2.0.180202 and higher.

A. Connection of a video intercom

You should:

- Connect the video intercom to the power supply;
- Connect the video intercom with the RJ45 network cable to the router.

B. Camera configuration

The video door entry panel in the Grenton Home Manager application uses the visualization of the camera embedded in the device - if you want to have access to the camera image, you should issue the appropriate port in the network settings.

In order to configure the port, log in to the router settings using its IP address in the web browser, make appropriate changes, and then save the settings:

- Enter redirect settings ¹;
- Find the port settings;
- Set the triggering and forwarding port to **554**² and the triggering and relaying protocol on **TCP**;
- Save settings;

Note!

Please note that in order to allow remote connection of the application, it is necessary to set the port **1234** in the **UDP** protocol.

• Finally, go to the list of currently connected devices to the network and save the IP address of the video doorphone - it will be needed when configuring the *SIP* server.

C. SIP configuration:

- To create a video intercom configuration you need at least two SIP accounts;
- Using the browser, log in to the video intercom ³;
- It is necessary to find the *SIP* account settings ⁴;
- Then select one of the available accounts (e.g. Account_1) and set its status to activated (enabled);
- In the next step, set the SIP account number / name and password;
- After that, it is necessary to enter the *SIP* server settings (Server IP, Port, Registration Period) these settings should appear when creating accounts;
- Then find the settings of the codecs used in the operation and activate the PCMU type codecs;
- At the end it is necessary to find the settings of the Intercom, where you must configure the number / name of the customer to which the video door phone should be called (second account *SIP*) and set (if possible) the device's behavior when the connection is missed.

Note!

If in the setting of Intercom, it is necessary to select one account from several configurable, select the previously selected one - in the example **Account_1**!

6.2. Creation and configuration of the application interface

A. Adding a door intercom to the application interface in the Object Manager

In order to add a video intercom to the interface:

• From the main menu, click Add interface:



- Configure interface settings choose: resolution, name, skin, add at least one page;
- To the created page from the component palette add the button *Intercom*:

Intercom

- In the window that will open after adding the button, set the parameters of the video intercom:
 - Source stream *rtsp* found in the settings of the video intercom or its documentation;
 - IP address IP address of the video door phone (previously saved when making its configuration);
 - **Account** number / account name *SIP* entered first in the video intercom settings account from which calls will be made (selected in item 3 of the chapter "*Connection and configuration of a video intercom*"):

0				×
ID: Intercom351				
) Source	Events			
Stream source				
IP address				
Account				
			ок са	ancel

- Go to the tab *Events*:
 - To the OnDoorClick event assign a method to be called after pressing the wicket opening button in the doorphone panel in the Home Manager application;
 - Associate the OnGateClick event with the method to be called after pressing the button for opening the entrance gate in the intercom panel in the Home Manager application;
 - To assign the OnDoorBell event to the method or script to be executed when the call is made when the bell on the intercom is pressed:

Θ		×
ID: Intercom351		
Source Events I Parameters		
Event name ONDOORCLICK	Assigned commands	Add command د
ONGATECLICK		÷
ONDOORBELL		÷
		OK Cancel

- Click OK;
- Send the interface to the mobile device look up VIII.4.7.

B. Home Manager application configuration

In order to carry out the configuration:

- Open the Home Manager application;
- Select Settings from the main menu (gearstick pictogram);
- From section Intercom select SIP configuration ⁵;
- In the settings specify:
 - Server address server IP address SIP on which the accounts were created;
 - **User name** number / account name *SIP* to which calls will be made specified in the entry phone settings, as the destination account for receiving calls (selected in item 3 of the chapter "Connecting and configuring a video intercom");
 - **Password** password for the above *SIP* account, to which connections from the interphone will be made:

	S	erver addr	ess	
sip.f	reecone	et.pl		_
		Usernam	e	
gren	iton			_
		Passwor	d	
•••	••••			
				—
	SAVE		CANCEL	
	\triangleleft	0		

- Confirm your entries by pressing Save;
- Correctly carried out configuration will cause the screen of the mobile device in its notification bar to display information about the connection to the *SIP* server;
- Exit the application settings.

6.3. Making a call from the intercom

- 1. On the intercom, press the call button.
- 2. Regardless of whether the Home Manager application on the mobile device is open, a connection will be established the door intercom panel will appear on the screen.
- 3. The button on the top left is used to receive a call until it is used the caller will hear nothing and the interphone will still ring.
- 4. The <u>OnDoorClick</u> and <u>OnGateClick</u> events can be triggered from the door video panel position, which will work depending on the setting made in the Object Manager.
- 5. In the doorphone panel there is also a button for switching on / off the hands-free mode.

<section-header>

7. IP cameras image operation

 \triangleleft

Note!

Support for Visual Builder functionality has been ended. The Home Manager interface creator will be removed in the next versions of Object Manager.

Ο

Home Manager application allows to access image of IP camera via any interface. There is no limit of number of operated cameras, however, image of each of them will be displayed separately.

Note!

Home Manager application displays correctly images of cameras supporting RTSP protocol and h264 codec in MPEG standard.

A. Adding camera component

To add camera image to the interface, drag the "camera" object available on the objects list to the workspace:



Then, enter address of the camera which image will be displayed as a source of the object. Added camera needs to be pre-configured to enable opening images from it using RTSP protocol.

0	×
ID: Camera2	
Source Events Frameters	
Source rtsp://192.168.3.23:554/axis-media/media.amp	
OK Cano	el

After sending created interface, image from the camera will be displayed on the screen of the mobile device after clicking added object.

B. Adding camera panel

It is possible to add an image from the camera to the interface using the *Camera* panel. To do this, drag it to the blank page of the interface.

Then - as the source for the added object, it is necessary to enter the address of the camera whose image is to be displayed. The added camera must be set up in advance in such a way that it can be previewed via the RTSP protocol.

0	×
ID: VideoStream2	
Source Events Frameters	
Source rtsp://192.168.3.233:554/live/ch00_0	
	OK Cancel

After sending the created interface, the image from the camera will be displayed on the screen of the mobile device after pressing the page with the added panel *Camera*.

8. Remote access of the mobile application to the system

The Grenton system gives you the freedom to control your home from anywhere in the world. Sitting at work, or being on a business trip, we can easily control the state of our investment and manage its functions in a very simple way.

To be able to remotely access the Grenton system, it should meet the following requirements:

- the Grenton system must be fully configured;
- created mobile application interfaces must be sent to mobile devices from which remote access is to be performed;
- the internet service provider must provide access to a static external IP address;
- the router / access point must be able to route ports.

8.1. System configuration

The manual has been prepared for a system in which the central unit is connected to a router visible through an external static IP address.



Before configuring remote access, you must:

- make sure that the central unit has been connected to the router of the local network and that the address of the central unit has been sent from the router's address pool;
- check the address of the central unit assigned by the local area router (for this purpose, doubleclick on the central unit's icon);
- in the newly opened window, read the information from the box marked below:

0					×
CLU_220001205					
Name: CLU_220001205		ID:	220001205		
IP: 192.168.1.2		FW:	407		
Control Sevents	🖹 Embedded features 🏻 🔒 Use	er features			
Method	Parameter name		Value		Call
AddToLog	Log	string			
ClearLog					\triangleright
SetDateTime	UnixTimestamp	13:11:22 15-02-2019			\triangleright
StartZWaveDiscovery	Time	numbe	er		
StopZWaveDiscovery					
				ОК	Cancel

For the analyzed case, the central unit's address is: *192.168.1.2*. This address will be used to perform port routing.

8.2. Port routing setting on the local network router

Note!

The port routing settings for each router may vary! The general procedure is presented below.

In order to set up port forwarding it is necessary to:

 access to the settings of the local network router - to do this, it is necessary to connect to the local network in which the central unit is located;

- opening an internet browser and entering the IP address of the local network router in the address field (in order to enter its settings) the default address is usually found at its bottom;
- logging in using login data the default login and password are most often in the form of a sticker on the bottom of the local network router (the default router data can also be found in dedicated internet tools);

Note!

If the entered IP address or login details are incorrect, it means that they have been changed by the network administrator. To access the router's settings, please contact him.

- find the position regarding port forwarding in the router's settings (Port Forwarding or similar);
- execution of external port forwarding 1234 to internal port 1234 of the local address of the central unit using the UDP protocol an example configuration is provided below:

Tomato Version 1.28 by shibby							Ope	nLinksys
Status	Por	rt Fo	rwarding					WL500gP
Overview								
Device List	On	Proto	Src Address	Ext Ports	Int Port	Int Address	Description	▲
Web Usage		TCP	T	1234	1234	132.100.1.2	CLOT	
Logs		TOP						Add
Bandwidth								Add
Real-Time		Src Ad Ext Po	dress <i>(optional)</i> - Fo rts - The ports to be	rward only if from forwarded, as see	this address n from the V	. Ex: "1.2.3.4", "1 VAN. Ex: "2345",	1.2.3.4 - 2.3.4.5", "1.2.3.0/24" "200.300", "200-300.400",	, "me.example.com".
Last 24 Hours	•	Int Po	rt (optional) - The de	stination port insid	le the LAN. I	f blank, the destin	nation port is the same as Ext	Ports. Only one port per
Daily	•	Int Ad	dress - The destinat	ion address inside	the LAN.	Jore.		
Weekly								
Monthly								
IP Traffic								
Tools								
Dasia								
Basic								
Port Forwarding								
Basic IDv6								
Dasic IPV0								
Triagorod								
Access Restriction								
Randwidth Limiter								
USB and NAS								
VPN Tunneling								
Administration								
About								
Reboot								
Shutdown								
Logout								

• save router settings - in some cases it may be necessary to restart the device.

Note!

Make sure external communication is not blocked by internal router settings.

8.3. Configuration of the Home Manager mobile application

When creating a configuration, you must:

- start the Home Manager mobile application;
- make sure that the interface has been uploaded to the mobile application, by means of which the remote access functionality will be implemented;

• go to the main screen of the mobile application and enter *Settings* (by clicking on the gear icon in the lower left corner of the screen):



• in the settings, click *Remote access, Set addresses*:



- select the one for which remote access is to be configured from the list of available interfaces;
- then a window will be displayed with the current network configuration of the system with the address information:
 - local (local IP address of the central unit);
 - remote (external IP address of the network to which the central unit is connected together with the port number assigned to it):



Note!

If the specified remote address differs from the actual external IP address, change should be made by clicking on the address window. In the newly opened window, it is necessary to make changes according to the actual IP address of the device. To accept changes, press *OK*.

Local addres	s: 192.	168.3.4		
Remote addı	ess: 91.9	0.184.188:12	34	
Ren	note ad	dress set	tings	
IP	91.90.1	84.188		
Port	1234			
		CANC	יבו	OK
		CANC		OK
	\triangleleft	0		

8.4. Starting remote access

The Grenton Home Manager mobile application automatically switches from local communication to remote communication. For remote access to be possible, the mobile device must meet the following conditions:

- remote access must be configured correctly;
- the device must be connected to a non-local internet network (other than the one to which the system is connected) or it must have cellular network data enabled (*internet in the phone*).

In order to start remote communication with the system, open the interface for which the remote access configuration was performed by selecting it from the list of interfaces:



If the interface was set as the default one, click the button:



Firstly, the Home Manager application will attempt to establish a connection via the local network. When the lack of this possibility is detected, the remote communication will be switched over.

IX. CLU Objects

1. Timers

Timers are virtual objects created within specific CLU. Object Manager enables creation of maximum 64 timers. Timers can be used wherever there is need for method invocation after specific time or cyclical method invocation.

The timer itself is also an OM object and as any other object, it has its own features, methods, events, and initial values. Timer can work in two modes:

- **Countdown** after starting, counts down set time. When countdown reaches zero, method connected to OnTimer event is invoked, while the timer stops and remained stopped until next usage of start method.
- **Interval** cyclical timer, it counts down set time after starting. When countdown reaches zero, method connected to OnTimer event is invoked, while the timer starts the countdown again. The situation repeats until stopping timer using Stop method.

A. Timers creation

To create timer in a specific CLU, mark it, then select add CLU object from the upper menu.



After clicking the icon, a list of available objects will appear. Find and select <u>Timer</u> option. After selecting the timer, click <u>ok</u>, then name the new timer, set its time [in ms] and work mode [countdown or interval]. Selected time will be simultaneously time setting in initial conditions. Created timer will appear on the objects list of the selected CLU.

Created timer is also a CLU object, and as other physical objects, it is controlled by objects configurator <u>look up V.4.1</u>.

B. Configuration parameters of timer

FEATURES

Name	Description
Time	Countdown time (in ms)
Mode	Timer work mode: 0 - countdown, 1 - interval
State	Current timer work status: 0 - stopped, 1 - counting, 2 - paused
Value	Time left until onTimer event occurs (in ms)

METHODS

Name	Description
SetTime	Sets time of the timer (in ms)
SetMode	Sets work mode
Start	Starts the timer
Stop	Stops the timer
Pause	Pauses the timer

EVENTS

Name	Description
OnTimer	The event is called when the timer is counted
OnStart	The event is triggered when the timer starts
OnStop	Event triggered when the timer stops
OnPause	The event is called when the timer is paused

2. Calendar

Calendars, just as timers, are virtual objects created by the user in CLU. It is possible to create up to 64 calendars on one CLU. One calendar created in CLU is a one rule followed on a specific day and time or in daily, monthly, or hourly intervals, with accuracy down to a minute. The rules can be created using graphic interface, or using syntax compliant with CRON rules of the LINUX system.

A. Calendar creation

To create a calendar, mark CLU in which you want to create it, then launch Add CLU object from the upper menu.



In the window that opens, select Calendar. After clicking OK, enter the name for the calendar you are creating. The Object Manager will display the properties window of the created object.

Note!

The calendar after creating and sending the configuration to the CLU automatically becomes active - to stop the calendar, call the **STOP** method.

B. Calendar features

Window calendar features contains four tabs:

0								×
Objec	ct properties							
Name:	Calendar			Туре:	Calendar			
ld:	CLU221001090->CAL645	1						
1 (1)	Control 🔖 Events 😭	Embedded features	🟹 Rule					
Metho	d	Parameter name				Value		Call
Start								\triangleright
Stop								\triangleright
SetRul	le	Rule			string			\triangleright
Cancel	Next	count			number			\triangleright
							01	
							ОК	Cancel

- **Control** contains calendar methods;
- Events contains calendar events;
- Built-in features contains list of calendar features;
- Rule contains interface enabling defining rules easily.

C. Calendar rules

There are two ways of entering rules for the calendar:

- Through the graphic interface using Rule tab;
- By entering CRON rule using SetRule method in the control tab or Rule as a Built-in feature.

D. Calendar rule creation through graphic interface

There is graphic interface in the Rule tab, using which the user can easly set rules parameters of the calendar.

Note!

After entering rule parameters through graphic interface, Rule value in the Built-in features is entered automatically according to the selected criteria.

0			×
Object properties			
Name: Calendar Id: CLU221001090->CAL6451	nbedded features 🔊 Rule	Type: Calendar	
Time: * : *			^
Month Day of month January February March April May June July August September October November December	Day of Sunday Monda Tuesda Wedne Thursd Friday Saturda	veek / /day /y	 Even/odd days Even days Odd days
			OK Cancel

There are two section there, in which the user selects rule parameters:

- **Time** contains two boxes: the first, in which the hour (or hours range) is entered; the second, in which the minute (or minutes range) is entered. Values in the boxes should be entered according to the CRON rule.
- **Criteria** contains remaining parameters of the rule. The user makes selection by marking appropriate boxes.

E. Calendar rules creation in accordance with CRON format

Calendar rules are created by entering them in the Rule field in calendar built-in features, or using SetRule method. Detailed information on this process can be found in CRON calendar documentation.

F. Configuration parameters of Calendar

FEATURES

Name	Description
Rule	Calendar rule in CRON format (or "ERROR" format in the case of entering wrong rule)
SinceLastRun	Time (in minutes) since the condition of the rule was last met
ToNextRun	Time (in minutes) until next calendar action invocation
State	Calendar work status: 1 (active) or 0 (not active)

METHODS

Name	Description
Start	Switching to active state (State =1)
Stop	Switching to paused state (State =0)
SetRule	Setting calendar rule
CancelNext	Cancelling invocation of selected number of the nearest calendar actions

EVENTS

Name	Description
OnCalendar	Events since calendar action invocation
OnStart	Events since restarting calendar work
OnStop	Events since stopping calendar work
OnCancel	Events since cancelling the nearest actions

3. Schedule

Schedule is a virtual object used for setting value of any feature throughout a week. The values are set using graphic interface for each day and each hour with 15 minutes, 30 minutes, or 1 hour frequency. Up to 64 schedules can be created in one CLU.

Note!

After schedule's creation (after sending new configuration to CLU) it becomes automatically active. To stop schedule work, invoke Stop method.

A. Schedule creation

To create a schedule, mark CLU within which you wish to create it, then launch Add CLU object from the upper menu.



In the opened selection window, it is necessary to find and select the Scheduler object. After entering the name, the schedule properties window will open on the screen. In this window there are four tabs:

- Control includes schedule methods;
- Events contains schedule events;
- Built-in features contains a list of schedule features;
- **Scheduler** includes a graphical interface allowing simple formulation of values for the entire scope of the schedule.

B. Setting values for the schedule

In the schedule tab of properties window there is graphical interface, thank to which you can define values for specific output.



The schedule allows to enter values for 7 days (within one week) with 15-minutes frequency. You can set values for every day individually or for several days at once. Day of which the values are currently being set is discerned by black mark on the right of its name. Switching to another day happens after clicking its name.

To simultaneously enter values for several days, mark days for which you will set values (by clicking marker), then begin entering the values. You can add values directly on the chart using mouse, or enter them in the values window which appears after clicking a specific hour.

×			
0.54			
0.54			
0.54			
0.54			
Cancel			

C. Setting output value using schedule

Changing value in a set schedule triggers OnHarmonogram event.

To copy values set in the schedule to the values of selected output, add SetValue method of the selected output to the OnHarmonogram event. Then, select Schedule as parameter of the method.

0		×
Parameters		
CLU->x201000275_DOUT1->SetValue(CLU->Sched	uler->Value)	
	1	
 *CLU *Calendar *Scheduler *Scheduler *201000275_DOUT1 *201000275_DOUT2 *201000275_DOUT3 *201000275_DOUT3 *201000275_DOUT4 *250004877_PANEL_BUTTON11 *250004877_PANEL_BUTTON10 *250004877_PANEL_BUTTON11 *250004877_PANEL_BUTTON11 *250004877_PANEL_BUTTON11 *250004877_PANEL_BUTTON11 *250004877_PANEL_BUTTON11 *250004877_PANEL_BUTTON13 *250004877_PANEL_BUTTON14 *250004877_PANEL_BUTTON15 *250004877_PANEL_BUTTON16 *250004877_PANEL_BUTTON3 *250004877_PANEL_BUTTON3 *250004877_PANEL_BUTTON3 *250004877_PANEL_BUTTON3 *250004877_PANEL_BUTTON4 *250004877_PANEL_BUTTON4 *250004877_PANEL_BUTTON4 *250004877_PANEL_BUTTON4 *250004877_PANEL_BUTTON4 *250004877_PANEL_BUTTON4 *250004877_PANEL_BUTTON5 *250004877_PANEL_BUTTON4 *250004877_PANEL_BUTTON4 *250004877_PANEL_BUTTON5 *250004877_PANEL_BUTTON6 *250004877_PANEL_BUTTON8 *250004877_PANEL_PAGE1 *250004877_PANEL_PAGE2 *250004877_PANEL_PAGE3 *250004877_PANEL_PAGE4 *250004877_PANEL_PAGE4 *250004877_PANEL_PAGE4 	 Methods SetValue(Value) Switch(Time) SwitchOn(Time) SwitchOff(Time) SetOverload(Overload) 	Value: © Schedule :CLU->Scheduler->Value Off On
x281000507_LEDRGB1 x320001024_DIMM1		
№ x330000132_AnalogIN1		
		OK Cancel

Every 15 minutes value of this output will be set according to the value saved in the schedule.

Note!

Remember to make sure that the range of values set in the schedule is the same as the range in which the selected output can be controlled. You can change schedule values range using SetMax and SetMin methods, and by changing built-in Min and Max features.

D. Configuration parameters of schedule

FEATURES

Name	Description
Data	String defining value changes schedule (see: Data format)
State	Schedule work status: 1 (active) or 0 (not active)
Value	Output value, changed every 15 minutes according to the schedule
Min	Minimum value for setting graphic interface value range
Max	Maximum value for setting graphic interface value range

METHODS

Name	Description
Start	Switching to active state (State =1)
Stop	Switching to paused state (State =0)
SetData	Setting weekly schedule

EVENTS

Name	Description
OnHarmonogram	Events since change of Value feature
OnStart	Events since restarting work
OnStop	Events since stopping work

4. PID controller

CLU enables creation of up to 64 PID controllers (proportional-integrating differentiating), used to maintain set output value on the constant level depending on the input value.

The most popular way of using PID controller is temperature control on the basis of information gathered from temperature sensor.

Note!

PID controller working in AUTO mode after starting work (after first switching on or after CLU reset) performs object calibration procedure, during which the temperature of the controlled object may increase for several percent above the set temperature. Thus, PID controllers are not recommended to use with objects of high thermal inertia, e.g. to control water temperature in an aquarium.

A. PID controller creation

To create PID controller mark CLU within which you want to create it, then launch Add CLU object from the upper menu


In the open window find and select **PIDCONTROLER**, then name it. Windows of features of the newly created controller will appear on the screen. It contains three tabs

- Control contains controller methods;
- Events contains controller events;
- Built-in features contains list of controller features.

B. Control using the controller

To control output values with controller, you must properly connect it to the input and output objects. To do that, follow these steps in order:

• Add the source value to the Source method, eg the temperature sensor's Value feature (in the temperature sensor to the Onchange event, select the PID controller, and assign the value from the temperature sensor to the Source method as a parameter).

0		×
Parameters		
* <i>2</i> • • •		
	 Hethods Source(Value) Start() Stop() SetPoint(Value) SetKp(Kp) SetKk(Kd) SetKd(Kd) SetSwitchTime(SwitchTime) SetAlpha(Alpha) SetMode(Mode) SetA(A) SetB(B) 	Image: Parameters Value: ○ Value Image: CLU->x250004877_PANELSENSTEMP1-> Value
		OK Cancel

Associate the output module with the corresponding PID object events.
 To do this, assign control methods to the object to the onouton and onoutoff events.

In the case of temperature control, the OutOutOn event in the controller should be assigned the Switchon method of the output from which the heat source is controlled (to which the radiator, furnace, radiator control valve is connected), whereas the OutOutOff event should be assigned a Switchoff of this output.

0							×
Objec	ct properties						
Name: Id:	PID CLU221001090->PID2435		Туре:	PIDcontroller			
<i>(</i> ?)	Control 隆 Events 🌪 Embedd	ed features					
Event r OnCha	name nge	Assigned c	ommand	ls			Add command
OnSta	rt						÷
OnSto	р						+
OnOut	tOn	CLU->Heater->SwitchOn(0)			Assign comma	nd Ӝ	÷
OnOut	Off	CLU->Heater->SwitchOff(0)			Assign comma	nd Ӝ	÷
						ОК	Cancel

Alternatively - if the output module's interface allows it, only the OnChange event can be used. To do this, assign the OnChange method in the controller to the SetValue (Value) method of the output controlling the heat source (the output must have such a method), and then indicate the ControlOut feature of the PID controller.

In such configuration, when relay output value in the controller changes, it will be reconnected to the output value.

C. Work modes

The controller has two possible work modes:

• Automatic control (Auto)

Control in the mode is based on automatic control algorithm, in which all the vital parameters are adjusted automatically on the basis of received data.

• Manual control (Normal)

In this mode, the user can set all the vital parameters used by PID controller with manual choice of set points (Kp, Ki, Kd parameters).

The Normal mode is intended for advanced users who know the tuning principles of PID controllers.

To set controller in a specific work mode, change value of Mode feature to:

- Normal for manual mode;
- Auto for automatic mode.

Depending on the selected work mode, option of setting values of particulr features changes - e.g. parameters A and B are used only for the Auto algorithm, while parameters Kp, Ki, and Kd are used only in Normal mode.

Note!

Parameters A and B can't be changed during control since they are continuously updated by the algorithm.

D. PID Controller operational design

The controller controls Controlout feature by setting its value to 1 or 0 with frequency set by SwitchTime feature through duty cycle change.

Before starting control, the controller carries out procedure of controlled object inertia estimation and sets acceptable range of SwitchTime values on its basis. After finishing this stage, SwitchTime feature value is set automatically in the middle of the selected range.

Note!

If the control is run automatically, manual change of Switchtime value is not possible.

E. PID Controller configuration parameters

FEATURES

Name	Description
ControlOut	Value of relay output (binary, switched in cycle defined by SwitchTime and DutyCycle)
State	Controller work status: 1 (active) or 0 (not active)
SetPoint	Controller input – target value
Кр	Strengthening of PID controller proportional element
Ki	Strengthening of PID controller integrating element
Kd	Strengthening of PID controller differentiating element
SwitchTime*	Time of switching
Alpha	Parameter $\boldsymbol{\alpha}$ in Kaczmarz algorithm (protection against denominator zeroing)
Gamma	Parameter $\boldsymbol{\gamma}$ in Kaczmarz algorithm (dynamics of a and b estimation changes)
Mode	Controller work mode: 1 - "manual" PID or 2 - automatic Kaczmarz algorithm
A*	Parameter a in Kaczmarz algorithm
B*	Parameter b in Kaczmarz algorithm

• Setting these parameters is not possible in all of controller work modes.

METHODS

Name	Description
Source	Entering new value of input for driver (feedback loop)
Start	Switching to active mode (State =1)
Stop	Stopping work (State =0)
SetPoint	Setting the target value of the regulator
SetKp	Setting the proportional gain value
SetKi	Setting the gain value of the integrator
SetKd	Setting the gain value of the differentiator
SetSwitchTime	Setting the switching time
SetAlpha	Setting the Alpha parameter in the Kaczmarz algorithm, protecting against zeroing the denominator
SetGamma	Setting the Gamma parameter in the Kaczmarz algorithm
SetMode	Setting the controller's operating mode - manual PID (Normal PID) or automatic algorithm of Kaczmarz (Auto-Kaczmarz)
SetA	Setting parameter a in the Kaczmarz algorithm
SetB	Setting parameter b in the Kaczmarz algorithm

EVENTS

Name	Description
OnChange	An event dispatched when the value of the Control Out
OnStart	Events since change of ControlOut feature value
OnStop	Events since stopping work
OnOutOn	An event dispatched when the value of the ControlOut property is switched to 1
OnOutOff	An event dispatched when the value of the ControlOut property is changed to 0

5. Thermostat

A thermostat is a virtual object that is used to create a heating or cooling control configuration depending on the given temperature sensor and the heating or cooling schedule introduced in the weekly schedule. Temperature values are set using the graphical interface for each day and hour with a 15-minute, 30-minute or hour resolution.

You can create up to 64 thermostats in one CLU.

Note!

After creating the thermostat (after sending a new configuration to the CLU), it becomes active automatically. To stop his work, call the stop method.

A. Thermostat creation

In order to create a thermostat, select the CLU, under which it is to be placed, and then from the top menu run Add object CLU.



In the opened selection window, search for and select Thermostat. After entering the name, entering the source (which should be the temperature sensor responsible for a given heating zone) and selecting the receiver (which is the output to which the device responsible for a given heating zone is connected - eg radiator head, floor heating) for the created object, on the screen will open the schedule properties window.

In this window there are four tabs:

- Control includes schedule methods;
- Events contains schedule events;
- Built-in features contains a list of schedule features;
- **Scheduler** includes a graphical interface that allows you to easily formulate values for the entire scope of the schedule.

B. Formulating values for a thermostat

In the tab *Scheduler* (in the properties window) there is a graphical interface, thanks to which it is possible to set values.



The schedule allows you to enter values for 7 days (within one week) with a 15-minute resolution. You can set values for each day separately or for several days at the same time. The day for which the values are currently entered is marked with a black marker on the left side of the name.

Switching to another day follows after clicking on its name.

To enter values for several days at the same time, click on the tags next to the names for which the values will be set. The values can be set directly on the graph using the mouse or manually enter values in the window, which opens after clicking on the selected hour.

0	×
Set values	
16:00 - 16:14	19.8
16:15 - 16:29	19.8
16:30 - 16:44	19.8
16:45 - 16:59	19.8
OK	Cancel

The thermostat responds to the schedule when it is in the <u>Auto</u> mode. The choice of the operating mode is made by means of the application or by the methods of the object.

C. Configuration parameters of the Thermostat object

FEATURES

Name	Description
Source	Thermostat input, connection to a temperature sensor
Control	Thermostat output, connection with the actuator
OutputType	Determination of the output type (-1 - autodetection, 0 - digital output, 1 - analog output)
PointValue	The value of the temperature set manually
HolidayModeValue	The temperature value for the holiday mode
Hysteresis	Hysteresis value - defining the limits of thermostat activation and deactivation
State	Operation status (1 - active thermostat, 0 - inactive)
ControlDirection	Working direction (O - normal mode (warming up), 1 - reverse mode (cooling))
Mode	Operating mode (O - manual mode (using <pre>PointValue</pre>), 1 - holiday mode (HolidayModeValue), 2 - automatic mode (AutoMode value from the Schedule), 3 - heating mode (HeatUp value))
Data	A string that defines the schedule for changing values
Min	The lower value of the scope of the built-in schedule
Max	The upper value of the scope of the built-in schedule
TargetTemp	The current value of the target temperature
ControlOutValue	The value assigned to the heating control output

METHODS

Name	Description
Start	Switching thermostat to active state (State = 1)
Stop	Switching the thermostat to an inactive state (State = 0)
IncreaseDegree	Increase PointValue by 1 ° C
DecreaseDegree	Decrease PointValue by 1 ° C
HeatUp	Increasing PointValue by a given value at a specified time
HolidayModeStart	Starting holiday mode
HolidayModeStop	Stopping the holiday mode
AutoModeStart	Starting the AutoMode mode (downloading temperature from the schedule)
AutoModeStop	Stop the AutoMode mode
SetData	Setting the weekly schedule
SetOutputType	Output type setting (Auto - auto detection, Digital - digital output, Analog - analog output)
SetPointValue	Setting the manually set temperature
SetHolidayModeValue	Setting the temperature value for the holiday mode
SetHysteresis	Setting the hysteresis value
SetControlDirection	Setting the working direction (0 - normal mode (warming up), 1 - reverse mode (cooling))

EVENTS

Name	Description
OnChange	An event generated when the value of the PointValue property is changed
OnStart	The event is generated when the thermostat is restarted
OnStop	Event generated when the thermostat stops working
OnOutOn	An event dispatched when the value of OutValue is set to a value greater than zero
OnOutOff	An event that is dispatched when the value of OutValue is less than zero
OnHolidayModeOn	An event generated when starting holiday mode
OnHolidayModeOff	An event generated when the holiday mode is turned off

6. Push

Push notifications are virtual objects created by the user in the CLU. This object enables sending notifications to the device with MyGrenton app installed. It is possible to create up to 64 calendars on one CLU.

Note!

Push notifications are available for Object Manager version v1.3.3 (or higher) and myGrenton app (Android) version v1.1.9 (or higher) or myGrenton app (iOS) version v1.3.3 (or higher). It is necessary to enable the cloud connection in the CLU (To do this, set the parameter UseCloud == true and then send the configuration to the CLU. Correct connection to the cloud will be signaled by the cloudConnection == true parameter)

A. Push creation

To create Push notification, mark the CLU within which you want to create it, then launch Add CLU object from the upper menu.



In the open window find and select Push, then name it. Windows of features of the newly created Push object will appear on the screen. It contains three tabs

- Control contains push methods;
- Events contains push events;
- Built-in features contains list of push features.

B. Configuration parameters of the Push object

FEATURES

Name	Description
Message	Notification content
Title	Notification title
LastSendTime	The time when the last notification was sent
Interval	Interval between successive notifications (in seconds)

METHODS

Name	Description
SetMessage	Setting the notification content
ClearMessage	Clearing the notification content
SetTitle	Setting the notification title
ClearTitle	Clearing the notification title
Send	Sending notification to device
SetInterval	Setting the interval between successive notifications (in seconds)

EVENTS

Name	Description
OnSend	An event generated when the message is sent
OnOverflow	An event generated when the queue overflows

C. MyGrenton configuration

To add a notification to the myGrenton interface, click the $\ensuremath{\,\tt MyGrenton\/}$ interface settings link in the toolbar:

P	🗶 💽	->)	Ę	MyGrenton interface settings
		*My house	ß	

The window with interface settings will appear:

0	Interfac	e settings			×
Name / icon	💼 My I	nouse			
Interface theme	blue		•		
Logo - light mode:	Greni	00		Change	
	C	.on		Revert to defa	ult
Logo - dark mode:	Gren	ton		Change Revert to defa	ult
Block access through the cloud					
	Selection	Object Name	CLU	J Serial Numbe	r
	\checkmark	Alert	22100	1090	
					_
Push notification objects					
				Close	

In the Push notification objects, select the notifications you want to activate, then send the interface to your mobile device look up XVII.5.

D. How push notifications work

After calling the send method, a push notification appears on the device screen.

🔹 myGr	enton		() 📚 1	1 41%
Attentio Flooding	n g is detected	I. Cutting off	the water.	
Ŷ	Lamp OFF			
	•			

Sending more notifications from one Push object results in adding them to the queue and appearing on the device at intervals defined by the Interval feature.

QUEUE PROPERTIES

- There can be a maximum of 10 messages in the queue at one time;
- If more than 10 notifications appear in the queue, the OnOverflow event will be generated;
- If more than 10 notifications appear in the queue, only the last 10 notifications will be sent to the device.

Note!

Messages sent from different push objects will appear on the device simultaneously.

7. Presence Sensor

Presence sensor is a virtual object created within a given CLU. Object Manager allows you to create up to 64 objects. The presence detector can be used wherever it is necessary to call the method after a specified time, as well as to count the time from the last call (e.g. after motion detection).

Note!

To fully use the described functionality of the Presence Sensor object, you must have a CLUZ with firmware 5.10.01 or higher.

A. Presence sensor creation

In order to create a presence detector, select the CLU within which it is to be included, and then run Add CLU object from the top menu.



After clicking the icon, a selection window with a list of available objects appears, where you need to find and select the **PresenceSenor** object. After selecting, pressing **OK**, it is necessary to give a name to the new presence sensor. The created sensor will appear on the list of objects of the selected CLU.

B. Operation mode of presence sensor

The presensce sensor can work in two modes depending on the motion sensor used:

- Impulse input a mode, in which the PresenceDetected = 1 is maintained for a Timeout period after this time, the PresenceDetected change to 0;
- State input a mode, in which after the detection of movement by the sensor PresenceDetected = 1 is maintained until UndetectPresence method is started - after its activation the high state of the PresenceDetected is maintained during the Timeout.

C. Presence sensor configuration parameters

FEATURES

Name	Description
Timeout	Time (in seconds) from last movement detection. When this time elapses PresenceDetected sets on 0
State	Current state of presence sensor: 1 - On 0 - Off
PresenceDetected	Movement detection state
TimeFromLastPresence	The time since the last motion detection (from the sensor or switching on the light from the button). Reset after calling: - DetectPresence() - regardless of Locked, DetectionDelay - SwitchLocked() when changing Locked to 1 - SetLocked(On) In state mode after calling DetectPresence(), TimeFromLastPresence = 0, until UndetectPresence() is called
DetectionDelay	Time to ignore DetectPresence after changing Locked On->Off
Locked	Presence blocked status: • - reacting to DetectPresence • - maintain PresenceDetected as 1
Mode	Operation mode depending on the type of motion sensor used:

METHODS

Name	Description
Start	Start a presence sensor
Stop	Stop a presence sensor
DetectPresence	Method called while presence detection. Sets PresenceDetected value to 1 and resets TimeFromLastPresence timer
UndetectPresence	Used in state mode (Mode = 1). Ends keeping the PresenceDetected parameter (after Timeout)
SwitchLocked	Changes the value of the Locked parameter to the opposite. Cases: - changing Locked from 0 to 1 - setting to 1 and blocking PresenceDetected, triggering the OnSwitchOn event (if PresenceDetected = 0 before), resetting TimeFromLastPresence - changing Locked from 1 to 0 - setting to 0 and unlocking PresenceDetected, triggering the OnSwitchOff event
SetLocked	Sets the value of the Locked parameter. Cases: - changing Locked from 0 to 1 - setting to 1 and blocking PresenceDetected, triggering the OnSwitchOn event (if PresenceDetected = 0 before), resetting TimeFromLastPresence - changing Locked from 1 to 0 - setting to 0 and unlocking PresenceDetected, triggering the OnSwitchOff event - SetLocked(On) if Locked = 1 - resets TimeFromLastPresence - SetLocked(Off) if Locked = 0 - no reaction
SetTimeout	Set a Timeout parameter (in seconds)
SetDetectionDelay	Sets the DetectionDelay parameter (in seconds)
SetMode	Sets the Mode parameter

EVENTS

Name	Description
OnStart	A event called when sensor starts
OnStop	A event called when sensor stops
OnSwitchOn	A event called if a presence detected (change of PresenceDetected parameter value from 0 to 1)
OnSwitchOff	A event called when a timer timeouts (change of PresenceDetected parameter value from 1 to 0)

8. Sunrise and Sunset Calendar

The sunrise and sunset calendar is a virtual object created within a given CLU. Object Manager allows you to create up to 64 objects. The calendar can be used when certain actions in the system are performed depending on the time of day (sunrise / sunset).

Note!

To fully use the described functionality of the Sunrise Sunset Calendar object, you must have a CLUZ with firmware 5.11.01 or higher.

A. Create a calendar

In order to create a sunrise and sunset calendar, select the CLU within which it is to be included, and then, from the top menu, start Add CLU object.

File Edit Tools Window	Help	
🔌 📔 🎺 🌴	Add periphery object	8
🗗 Dom 🦰 Trach	Had perpirely object	

After clicking the icon, a selection window with a list of available objects appears, where you need to find and select the SunriseSunsetCalendar object. After selecting, pressing OK, it is necessary to name the new calendar. The created calendar will appear on the list of objects of the selected CLU.

B. Calendar configuration parameters

FEATURES

Name	Description
Longitude	Longitude in decimal degrees (DD), range -180 to 180
Latitude	Latitude in decimal degrees (DD), range -90 to 90
State	Current state of the sunrise and sunset calendar: 1 - On, 0 - Off
SunriseUTC	UTC sunrise time for a selected location (± 5 minutes) $\mathbb{N}A$ - Unable to calculate sunrise time
SunsetUTC	UTC sunset time for a selected location (\pm 5 minutes) N\A - Unable to calculate sunset time
SunriseLocal	Sunrise local time for a selected location (\pm 5 minutes) N\A - Unable to calculate sunrise time for a selected location
SunsetLocal	Sunset local time for a selected location (\pm 5 minutes) N\A - Unable to calculate sunset time for a selected location
SunriseUTCTimestamp	UTC sunrise time for a selected location (± 300 seconds) -1 - Unable to calculate sunrise time
SunsetUTCTimestamp	UTC sunset time for a selected location (± 300 seconds) -1 - Unable to calculate sunset time
SunriseLocalTimestamp	Sunrise local time for a selected location (± 300 seconds) -1 - Unable to calculate sunrise time for a selected location
SunsetLocalTimestamp	Sunset local time for a selected location (± 300 seconds) -1 - Unable to calculate sunset time for a selected location"
IsDayNow	Determines the current part of the day based on local sunrise/sunset (± 5 minutes): 0 - nighttime, 1 - daytime, -1 - Unable to calculate for a selected location
SunriseOffset	Offset for the sunrise (in minutes), range -1439 to 1439
SunsetOffset	Offset for the sunset (in minutes), range -1439 to 1439
NextSunrise	Time left until sunrise (in minutes) -1 - Unable to calculate for a selected location
NextSunset	Time left until sunset (in minutes) -1 - Unable to calculate for a selected location

METHODS

Name	Description
Start	Starts sunrise and sunset calendar
Stop	Stops sunrise and sunset calendar
SetLongitude	Set a longitude in decimal degrees (DD), range -180 to 180
SetLatitude	Set a latitude in decimal degrees (DD), range -90 to 90
SetSunriseOffset	Set the offset for the sunrise (in minutes), range -1439 to 1439
SetSunsetOffset	Set the offset for the sunset (in minutes), range -1439 to 1439

EVENTS

Name	Description
OnStart	A event called when calendar starts
OnStop	A event called when calendar stops
OnSunrise	A event called when the sun rises
OnSunset	A event called when the sun sets
OnSunriseSunsetChange	A event called when the sun rises or sets
OnDay	A event called when IsDayNow changes from 0 (nighttime) to 1 (daytime)
OnNight	A event called when IsDayNow changes from 1 (daytime) to 0 (nighttime)

9. Event Scheduler

The event scheduler is a virtual object created within a given CLU. It is used to trigger a given event for a given hour and day of the week. In order to define the time and day of the week on which the event is to be executed, an appropriate rule should be added using the AddRule method. Rules are created using the syntax compliant with the CRON rules of the LINUX system.

Note!

To fully use the described functionality of the Event Scheduler, you must have a CLUZ with firmware 5.09.02 or higher.

To configure and manage rules it is recommended to use the EVENT_SCHEDULER widget from the level of myGrenton application - <u>see section XVIII.3.18.</u>

A. Create a event scheduler

In order to create a event scheduler, select the CLU within which it is to be included, and then, from the top menu, start Add CLU object.



After clicking the icon, a selection window with a list of available objects appears, where you need to find and select the *EventScheduler* object. After selecting, pressing OK, it is necessary to name the new event scheduler. The created event scheduler will appear on the list of objects of the selected CLU.

B. Event scheduler rules

There are two ways of entering rules for the event scheduler:

- Through the myGrenton application and the EVENT_SCHEDULER widget a detailed description can be found in chapter see section XVIII.3.18.
- By entering CRON rule using AddRule method in the control tab detailed information on this process can be found in CRON calendar documentation.

Note!

The Event Scheduler virtual object uses only the three parts of the CRON record "**minute hour** day month **week_day**". The day and month values are ignored, so you must enter * in place of these values. The target CRON syntax looks like this: minute hour * * week day

C. Event scheduler configuration parameters

FEATURES

Name	Description
RuleList	List of all rules in the format {{id, rule_state, "crone"},{id, rule_state, "crone"},} rule_state: 0 - rule disabled, 1 - rule enabled
CurrentRule	<pre>Rule from the list that is responsible for the current event {id, rule_state, "crone"} Returns a run rule for 1 minute, then "N\A" rule_state: 0 - rule disabled, 1 - rule enabled</pre>
NextRule	Rule from the list for the next event in {id, rule_state, "crone"} format rule_state: 0 - rule disabled, 1 - rule enabled
RuleCount	Number of rules added
RuleAvailableCount	The number of rules that can be added to an existing list (free space)
State	Current state of event scheduler

METHODS

Name	Description
Start	Start Event Scheduler
Stop	Stop EventScheduler
AddRule	Adds a rule to the list. Provide a crone rule minute hour * * day_of_week. Returns the id number of the assigned rule. When return 0 - error
DeleteRule	Removes the rule with the given id from the list. Returns 0 - ok, 1 - error
GetRule	Returns the rule in the format {id, rule_state, "crone"} for the given rule_state: 0 - rule disabled, 1 - rule enabled
EnableRule	Change state of rule to activated. Returns 0 - ok, 1 - error
DisableRule	Change state of rule to deactivated. Returns 0 - ok, 1 - error
GetRules	<pre>List of all rules in the format {{id, rule_state, "crone"},{id, rule_state, "crone"},} rule_state: 0 - rule disabled, 1 - rule enabled</pre>
GetNextRule	Rule from the list for the next event in {id, "crone"} format

EVENTS

Name	Description
OnStart	A event called when Event Scheduler starts
OnStop	A event called when Event Scheduler stops
OnEvent	Target event triggered on the basis of the set rules and the current time of the device
OnRuleAdd	The event is raised when adding a rule to the list
OnRuleDelete	The event is raised when removing a rule from the list

X. Media measurement

1. Virtual media measurement

1.1. Launching media measurement on the Object Manager page

The Object Manager allows you to perform a media measurement, which allows the estimated presentation of the energy consumed (based on the time the device is turned on and the receiver power specified in the configuration). The media measurement configuration takes place in OM and it must be run for each input and output separately - so that the CLU collects data on energy consumption. Media measurement is recorded every 15 minutes, starting the countdown from the full hour - based on the CLU clock (*CLU feature -> TIME*).

Note!

Media measurement is available for Object Manager version 1.2.0.180202 and higher, and for CLU with firmware 04.07.29-1802 and higher.

Note!

Support for the Media measurement functionality has been discontinued. The statistics tab and options related to virtual measurement will be removed in the next versions of Object Manager.

Media measurement can be run for modules:

• Input (Digital IN) - in the continuous mode (counting the working time) or pulse (counting the pulses appearing at the binary input):

0									×
Object	properties								
Name: Id: Type:	x181000775_DIN1 CLU221001090->DIN8273 DIN ontrol User schemes	Events 🛞 Embedded feat	ures	Device type: Serial number:	181000775	5			× 1
Feature	name	Current value	Initia	l value		Unit		Range	
Inertio	n	0	0			ms		[0-100]	
HoldDe	elay	500	500			ms		[100-5000]	
HoldIn	terval	100	100			ms		[100-2000]	
Value		0				bool		[0-1]	
Distrib	utedLogicGroup	0	0					[0-10000]	
Statisti	cState	0	Cor	ntinuous 🗸		number		0,1,2	
Load		0.	Off Cor Pul:	ntinuous se		number			
🗹 Auto	o refresh 🜔							[Refresh
							ОК		Cancel

• Output (Relay, Led RGB, Dimmer) - in continuous mode (counting working time):

0					×
Object	properties				
Name	×201000275 DOUT1		Davisa tuna		~
Ide	CU1221001000->DOU5138		Seriel symbol 201000275		
Tunor			Serial number: 201000275		I '
iype.	0001				
c	ontrol 🔡 User schemes	Events 😭 Embedded featu	ures Statistics		
Feature	name	Current value	Initial value	Unit	Range
Value		0	Off \checkmark	bool	0,1
Statisti	cState	1	Continuous 🗸	number	0,1
Voltage	еТуре	2	Off Continuous		0,1,2
Voltage	Value	230	230	V	[0-230]
Power		0		W	[0-3000]
Overlo	ad	3000	3000	W	[0-3000]
Distrib	utedLogicGroup	0	0		[0-10000]
Load		60	60	number	
🗹 Auto	o refresh 🔇				3 Refresh
				ОК	Cancel

Note!

The media measurement of the above-mentioned modules applies to modules for DIN rail and flush-mounted Tf-bus! The measurement setting is not available for Z-Wave modules!

A. Creating a configuration

To create a configuration:

- Double click on the selected module from the list of modules in the main view of the program (this
 applies to the above-mentioned modules for media measurement support);
- Go to the tab *Embedded features*;
- Change the selection of the StatisticState feature to: Continuous or Pulse (for binary inputs of the Digital In module);
- The Load item will appear below to its initial value, enter the active power input of the device connected to the input or output in watts per hour (eg 60) CLU will recalculate the given value continuously (multiplying by time in hours):

StatisticState	1	Continuous 🗸	number	0,1,2
Load	60	60	number	

- Confirm with OK;
- Add media measurement settings for subsequent modules repeat the above steps;
- Send the configuration to the CLU.



B. Read media measurement in the Object Manager

In order to read the media measurement in the Object Manager program:

- Wait at least for the first scheduled measurement recording by the CLU (up to XX.00 or XX.15 or XX.30 or XX.45 - where XX is the hour);
- Select Tools -> Download file with measurements;
- A window will be displayed with information about downloaded records:

Sync completed	×
CLU, with sync:	
CLU221001090: Success, number of records: 10 CLU221001380: Success, number of records: 2	^
Wand Van like sure with slave?	~
	Cancel

- Click OK;
- The Object Manager will then synchronize the downloaded data with the cloud;
- After the synchronization is completed, press OK:

🖸 Syr	: finished.		×
Clau	supervise successful. Vous data is up t	ta data	
Ciou	sync was succession. Your data is up i	lo dale	
		OK	
		UK	Cancel

Note!

In case of a synchronization error, please contact Support!

- In order to make sure that the media measurement has been registered, double-click on the selected module for which the media measurement has been run;
- Then go to the *Statistics* tab:
 - You can choose the type of graph displayed: bar or line in both cases, the total amount of energy consumed (in watts) for each hour appears on the chart;
 - You can also select the interval of the media measurement viewed: day, month, year or manually select the date range - depending on the selected interval, the corresponding graph will be displayed.



C. Configure the media measurement for the Home Manager application interface

Note!

Support for Visual Builder functionality has been ended. The Home Manager interface creator will be removed in the next versions of Object Manager.

The media measurement configuration for the application interface must follow the following diagram:

• Add a new application interface:



- Enter the name of the application being created;
- Set resolution, skin, add at least one page, click OK;
- From the panel tray, drag the panel Statistics to the editable area of the application interface;
- In the Source tab, select check boxes for modules whose media measurement graphs are to be displayed in the statistics panel in the application:

		♀ Palette ▷ ▶ ♥ Components ♥ Button ♥ Two-state
		button image A Text Slider Gauge
STATY	ID: StatisticPanel3 ID: Source ID: Events ID: Events ID: ID: ID: CLU221001090->x181000775_DIN1 ID: CLU221001090->x181000775 DIN3	 Radio button Link Camera Thermostat Intercom Container
/	CLU221001090->x201000275_DOUT1 CLU221001090->x201000275_DOUT2 CLU221001090->x330000132_DIN1	ONE BUTTON BEACON ZONE Panele Thermostat Statistic Camera
	CLU221001380->>x201000262_DOUT1	
	OK Cancel	

- Click OK;
- Send the interface to the mobile device- look up VIII.4.7.

1.2. Using media measurement on the Home Manager application side

Note!

Media measurement is available for Home Manager version 1.1.110 or higher.

To properly use the media measurement in the mobile application, first take measurements from the CLU and - if necessary - synchronize the measurements with the cloud.

A. Taking measurements

- Enter the application settings from the main menu (gear icon).
- Select from the list of settings: Download measurements from the CLU.
- After a moment, the following message will be displayed: Success for CLU: X, Y 6 .
- Launch the application interface the measurements should be updated and displayed on the chart.

B. Media panel view options

 Change of displayed data of specific *I* / *O* - after clicking on the modules listed, the upper bar of the media measurement panel displays a window of available modules added to the panel, which are selected by default - their unchecking results in the lack of showing measured values for specific *I* / *O*:



• In the same window where the modules are visible, it is possible to change the graph view - the default is a line graph, but you can also select a bar, pie or ranking;



- Change of the time range of the displayed waveforms this can be done using the "daily" buttons (summing measurements for each hour of the day), "monthly" (adding up values for each day in the month) and "annual" (adding up the measurements for each month separately);
- It is also possible to choose your own time range after clicking on a given hour, the window for selecting the start and end day is displayed:



C. Synchronization and downloading of measurements

- Taking measurements from the CLU, which was done before, took place at the local connection with the CLU. For the measurements to be displayed during remote access, synchronize them with the cloud;
- In order to synchronize the measurements with the cloud, enter the Main menu of the Home Manager application in the settings and at the bottom select: *Synchronize measurements with the cloud*.

2. Real media measurement

Note!

Real media measurement is only available for modules of the Grenton 2.0 series: GRENTON RELAY 2HP (DIN), GRENTON RELAY 4HP (DIN), GRENTON ROLLER SHUTTER (DIN), GRENTON ROLLER SHUTTER (Flush), GRENTON I/O MODULE 2/2(Flush).

2.1. Real media measurement settings in Object Manager

Object Manager allows you to carry out media measurement, which allows real presentation of consumed energy (based on the VoltageValue and VoltageType parameters of the device). The configuration of media measurement is done in OM and should be parameterized for each output separately. In order for the media to be measured correctly, it is necessary to determine the electrical parameters of the network to which the entire system is connected. For this purpose, in the embedded features of the CLU module, define the frequency (VolatageFrequency) and the rated voltage

(DefaultVol	ltageVal	Lue) of the netw	ork.				
0						:	×
CLU properties							
Name: CLU2210024	193			Serial number:	221002493		
IP: 192.168.0.11	10			FW:	507		
Control 🍡 Ev	vents 😭 Emi	bedded features 🔓 User	features				
Minute	20		m			[0-59]	^
LocalTime	1621869627		S				
FirmwareVersion	05.07.02-212						
UseCloud	false	False ~	bool				
CloudConnection	false		bool				
VoltageFrequency	50	50Hz ~	Hz			50,60	
DefaultVoltageValu	i 230	230	V				
NTPServer	tempus1.gun	tempus1.gum.gov.pl	1				
TimeZone	0	Europe/Warsaw				0,1,2,3,4,5,6,7,8,9,10,11,12,13,14,15,16,17,18,19,20	
QoS	0	QoS0 ~				0,1	
PrimaryDNS	8.8.8.8	8.8.8.8	string				
SecondaryDNS	8.8.4.4	8.8.4.4	string				~
🗹 Auto refresh 🧖						 Refret 	sh
						OK Cancel	

Media measurement is recorded in real time. Power features are expressed in watts for relay output modules and LoadCurrent are expressed in milliamperes for blind drive control modules.

The VoltageType feature takes the values:

• For DOUT objects: 0-AC, 1-DC, 2-Signal

0					×
Object	t properties				
Name:	k201000275_DOUT1		Device type:		~
ld:	CLU221001090->DOU1265		Serial number: 201000275		1
Туре:	DOUT				
<i>(</i>) 0	ontrol 📳 User schemes	Events 😭 Embedded featu	res Statistics		
Feature	name	Current value	Initial value	Unit	Range
Value		1	Off ~	bool	0,1
Statist	icState	0	Off ~	number	0,1
Voltage	еТуре	0	AC ~		0,1,2
Voltage	eValue	230	230	v	[0-230]
Power		10		W	[0-3000]
Overlo	ad	3000	3000	W	[0-3000]
Distrib	utedLogicGroup	0	0		[0-10000]
Auto	o refresh Ŭ				Refresh
				ОК	Cancel

• For ROLLER SHUTTER objects: 0-AC, 1-DC

0							×
Object	properties						
Name	441000509 ROLLER S	HUTTER1	Device two				~
Id:	CLU221001090->ROL6	777	Serial num	ber 4/1000500			1
Type:	ROLLER SHUTTER		Senarriun	1001. 441000303			
36- I							
Po	ontrol 🔡 User scher	mes 🔖 Events 🎓 Embedded fe	atures 🔢 Statisti	cs			
Feature	name	Current value	Initial value		Unit	Range	
State		1			-	0,1,2	
MaxTin	ne	30000	30000		ms		
Up		1				0,1	
Down		0				0,1	
LoadCu	rrent	106			mA		
Overcu	irrent	1600	1600		mA		
Voltage	туре	0	AC ~			0,1	
Auto	o refresh 칭						Refresh
						ОК	Cancel

XI. CLU service functions

1. Restoring factory settings CLU - Hard Reset

Activating the Hard Reset CLU function results in:

- Removal of the saved configuration;
- Formatting the flash memory partition;
- Removal of all created LUA objects;
- Clearing all data of the Z-Wave controller;
- Removal of information about connected Z-Wave modules.

In order to restore the factory settings of the CLU with the *Hard Reset* function, perform the following steps (in accordance with the order given):

- Disconnect power from the CLU module;
- Press and hold the Link button on the module;
- Connect the power supply to the CLU module;
- Keep the *Link* button depressed for at least 10 seconds both LEDs on the CLU will be permanently illuminated;
- After 10 seconds, release the *Link* button the correct execution of the reset will be confirmed by a blink of both LEDs 5 times.

Note!

If Z-Wave modules were added to the CLU before starting the *Hard Reset* function, after performing the reset it will be necessary to perform the procedure of deleting and re-adding each Z-Wave module!

2. System diagnostics - Save the diagnostic package

Diagnostic package is used for CLU diagnostics and for quick finding of problems in the created project.

In order to diagnose the system, you should:

- Open the project in the Object Manager;
- Select **Tools** from the taskbar and then *Save the diagnostic package*:

Grenton Object Manager (version 1.3.5-204201)



• In the window that opens, select Save:



• Specify where to save the file and give the backup name:

0	×
Create project backup	
Set filename	
My_home	
	OK Cancel

• Then the package will appear in the selected location in * .zip * format. The content will be as follows:

CLU220001096	22.10.2020 11:11	
CLU221001090	22.10.2020 11:11	
CLU221001380	22.10.2020 11:11	
logs	22.10.2020 11:11	
🕎 interfaces.zip	22.10.2020 11:11	544 KB
🚾 My_home.zip	22.10.2020 11:11	217 KB
My_home_backup_20-10-22_11-11.omp	22.10.2020 11:11	215 KB

- The package created in this way contains:
 - folders with configuration files of all CLUs;
 - "logs" folder containing the file with the specified application logs;
 - .zip package containing the interface database used in the project;
 - package .zip containing information about the project;
 - project backup file.

XII. SMART PANEL

1. Smart Panel equipment

Smart Panel consists of:

- OLED display;
- Four touch buttons;
- A sensor that recognizes four gestures;
- proximity / presence sensor;
- Temperature sensor;
- Light intensity sensor;
- Buzzer.

2. Connection of the Smart Panel to the CLU

Note!

Smart Panel is available for Object Manager version 1.2.0.180202 and higher, and for CLU with firmware 04.07.29-1802 and higher.

Note!

Smart Panel version v4 is available for Object Manager in version 1.2.1.190201 and higher, and for CLU with firmware 04.07.49-1912 and higher.

Connection of the Smart Panel to the system takes place by means of twisted-pair cable. To the appropriate terminals of the ARK connector, two pairs of twisted wires should be derived from the Smart Panel - the connection diagram is shown in the figure below:

- Connect one lead from the first twisted pair (eg UTP cable) to the Vcc terminal;
- Connect the other wire from the pair to the GND terminal;
- Connect one cable from the other pair to terminals A and B.



After connecting and carrying out the *CLU Discovery* operation in the project, the following Smart Panel v3 elements will appear in the list of modules:



After connecting and carrying out the *CLU Discovery* operation in the project, the following Smart Panel v4 elements will appear in the list of modules:

😡 Grenton Object Manager

T [®] Smart Panel vA		•	000	U
	•			
✓ ⁽ⁱ⁾ Object Manager				
✓ +♣+ CLU220001006				
🗸 🖶 Scripts				
🕂 Add script				
№ x250000021_PANEL1				
x250000021_PANELSENSLIGHT1				
x250000021_PANELSENSTEMP1				
* x250000021_PANEL_BUTTON1				
x250000021_PANEL_BUTTON10				
* x250000021_PANEL_BUTTON11				
x250000021_PANEL_BUTTON12				
X250000021_PANEL_BUTTON13				
X250000021_PANEL_BUTTON14				
X250000021_PANEL_BUTTON15				
X250000021_PANEL_BUTTON10				
V250000021_PANEL_BUTTON2				
at x250000021_PANEL_BUTTONA				
x250000021_PANEL_BUTTONS				
v250000021_PANEL_BUTTON6				
x250000021 PANEL BUTTON7				
* x250000021 PANEL BUTTON8				
* x250000021 PANEL BUTTON9				
* x250000021 PANEL PAGE1				
* x250000021 PANEL PAGE2				
* x250000021 PANEL PAGE3				
* x250000021_PANEL_PAGE4				
Visual Builder				

If you correctly add elements to the project, you can proceed to create a configuration.

Note! In case of failure, please contact Support!

3. Information to help you create a configuration

 The configuration of the panel with the display differs from the configuration of the classic Grenton touch panel, inter alia, that in addition to: features, methods and events of each button, temperature / light sensor, the user also has: a gesture sensor, as well as features, methods and events for the *Smart Panel* only. From version 04.03.04.1910 new Smart Panel functionalities are available, such as the PANEL_PAGE configuration object or new features, methods and events in the PANEL object.

- 2. The display, in which the touch panel is equipped, has a resolution of 128x64 pixels.
- 3. Smart Panel v3 can work in two modes: displaying icons (display is divided into 4 fields) or in drawing mode (using the entire display field).

Smart Panel v4 can work in four modes:

- 1. Backward compatibility mode (default configuration) Inactive,
- 2. Icon display mode (display divided into 4 fields) Buttons,
- 3. Drawing mode (using the entire display field) FreeDraw,
- 4. Operating mode of thermostats Thermostats.
- 4. The touch panel is equipped with a microSD card slot, which is used to store the default icons displayed on the panel. Files must be placed in the main directory of the card with the extension *.bmp*.
- 5. The Smart Panel screen is blank by default. It lights up when the proximity sensor is activated (display time is taken from the *panel -> ProximityTimeout* feature after this time the panel does not detect presence, the display turns off).
- 6. The presence sensor operates depending on the distance set using the sensitivity the ProximitySens feature. Upon detection of presence, the OnProximityDetect event is generated.

4. Configuration of the Smart Panel module in the version v3

4.1. Configuration parameters

A. Panel

FEATURES

Name	Description
GestureIconUp	The name of the BMP file with the icon for the up gesture (no extension)
GestureIconDown	BMP file name with icon for gesture down (no extension)
GestureIconLeft	BMP file name with icon for gesture left (no extension)
GestureIconRight	The name of the BMP file with the icon for the right gesture (no extension)
ProximitySens	Sensitivity of the proximity sensor
ProximityTimeout	The time after which the display will be turned off
ProximityValue	Proximity sensor signal (non-dimensional value)
BuzzerValue	Control of sound signaling (on / off)

METHODS
Name	Description
SwitchOnDisplay	It wakes the display from sleep mode
ShowButtons	Changes the display mode to <i>buttons</i>
ClearScreen	Cleans the display content in freedraw mode
PrintText	Display text in <i>freedraw</i>
PrintFloat	Displays the number in <i>freedraw</i>
DrawLine	Draws the line in <i>freedraw</i>
DrawPoint	Draws a point in <i>freedraw</i>
DrawIcon	Draws the icon (bmp) in <i>freedraw</i>
DisplayContent	Displays the contents of the graphic memory buffer; changes the display mode to <i>freedraw</i>
SetGestureIconUp	Sets the BMP file with the icon for the up gesture
SetGestureIconDown	Sets the BMP file with the icon for the down gesture
SetGestureIconLeft	Sets the BMP file with the icon for the left gesture
SetGestureIconRight	Sets the BMP file with the icon for the right gesture
SetProximitySens	Sets the sensitivity of the proximity sensor
SetProximityTimeout	Sets the time after which the display will be dimmed
SetBuzzerValue	Enables / disables sound signaling

EVENTS

Name	Description
OnGestureUp	An event related to a gesture up
OnGestureDown	An event related to a gesture down
OnGestureLeft	An event related to a gesture left
OnGestureRight	An event related to a gesture right
OnProximityDetect	An event triggered when a person is detected approaching the panel display

B. Buttons

FEATURES

Name	Description
Mode	Returns the set operation mode of the button: 0 - monostable, 1 - bistable, 2 - locked (the diode is red with continuous light)
HoldDelay	The time (in milliseconds) after which the OnHold event will be triggered (when pressing and holding the button)
HoldInterval	Cyclic time interval (in milliseconds), after which when the button is held the OnHold event will be triggered
Value	Returns the input state (0 or 1)
Label	Text describing the button (displayed instead of the icon)
IconA	File name of the icon assigned to the button in monostable and bistable mode in the <i>OFF</i> position; the name preceded by "~" will display the graphic in negative; IconA has priority over the Label feature
IconB	The file name of the icon assigned to the button in bistable mode in the ON position; the name preceded by "~" will display the graphic in negative

METHODS

Name	Description
SetMode	Sets the mode of the button operation: 0 - monostable, 1 - bistable, 2 - locked (the diode is permanently red)
SetHoldDelay	Sets the value of HoldDelay
SetHoldInterval	Sets the value of HoldInterval
SetLabel	Sets the text describing the button
SetIconA	Sets the A icon file
SetIconB	Sets the B icon file
ShowOK	Blinks the green LED on the button for two seconds (frequency 500ms)
ShowError	Blinks the red LED on the button for two seconds (frequency 500ms)
LedSwitchOn	It turns on the green LED on the button
LedSwitchOff	Turns off the green LED on the button

EVENTS

Name	Description
OnChange	An event dispatched when the state changes (regardless of the value)
OnSwitchOn	An event that is triggered when the high state on input is set
OnSwitchOff	An event dispatched when the low state on input is set
OnShortPress	The event is triggered after pressing the button for 500 - 2000 ms
OnLongPress	The event is called after pressing the button for the 2000 - 5000 ms
OnHold	An event that is called for the first time after the HoldDelay time has elapsed, and then cyclically every time HoldInterval
OnClick	The event is triggered after pressing the button for less than 500ms

C. Temperature and lighting sensors

FEATURES

Name	Description
Threshold	Hysteresis size (accuracy 0.1) specifying the sensitivity at which events are generated: OnChange OnLowerValue , OnRaiseValue
Sensitivity	Time (in ms) for which the sampled values are averaged
MinValue	The minimum value of the Value property that is triggered by the OnOutOfRange event
MaxValue	The maximum value of the Value property, which is exceeded by the OnOutOfRange event
Value	Input value: for temperature sensor (from 0 to 45 $^\circ$ C) or for light sensor (0 - 100%)

EVENTS

Name	Description
OnChange	Event triggered when the input state changes (regardless of value)
OnRaiseValue	An event triggered when the upper hysteresis threshold is exceeded
OnLowerValue	An event triggered when the hysteresis threshold is exceeded
OnOutOfRange	The event is dispatched when the output value is outside the specified range

4.2 Creating button and display configurations

In order to create a configuration:

• Open the *PANEL_BUTTONX* object (where X is the number of one of the 4 buttons) by double clicking on the list of modules;

- Go to the tab Events;
- Configure the operation of the button by assigning methods to specific events (by clicking on "+" on the right side of the window):

0		×
CLU_2200012	05->x240000392_BUTTON1	
Name: k24	10000392_BUTTON1 Source/Receiver:	~
Identification: 24	0000392 1 Type: BUTTON	
Control	User schemes 📡 Events 🌪 Embedded features 🧱 Statistics	
Event name	Assigned commands	Add command
OnChange	CLU_220001205->x190000558_DOUT1->Switch(0) Assign comman	d 💥 🕂
OnSwitchOn	CLU_220001205->Heater->SwitchOn(0,500) Assign comman	d 💥 🕂 🕂
OnSwitchOff	CLU_220001205->Heater->SwitchOff(0,500) Assign comman	d 💥 🦛
OnShortPress		÷
OnLongPress		÷
OnHold		÷
OnClick		÷
	[OK Cancel

- Select the tab *Embedded features* and define the objects displayed on the screen of a given button:
 - Label a feature defining the text assigned to a given button;
 - IconA a feature that defines the name of the icon assigned to a given button when it is in monostable mode or for bistable mode for the Value = 0 attribute;
 - IconB a feature that specifies the name of the icon assigned to a given button when it is in bistable mode for the Value = 1 property. To assign the same icon, but with the inverted colors, the prefix name should be preceded by the "~" character (eg ~ lamplon):

0						\times
CLU_220001205->x25	0000863_PANEL_BUTTON1					
			1			
Name: x250000863_P/	ANEL_BUTTON1		Source/Receiv	ver:		~
Identification: 250000863	1		Туре:	PANEL_BUTTON		
Control 🚺 User sch	emes 🔖 Events 😭 Embedd	led features	Statistics			
Feature name	Current value	Initial value		Unit	Range	
Mode	1	Bistable \lor			0,1,2	
HoldDelay	1000	1000		ms	[0-5000]	
HoldInterval	100	50		ms	[0-2000]	
Value	0			bool	0,1	
Label	-			string	[0-15]	
IconA	lamp2off	lamp2off		string	[0-9]	
IconB	~lamp2on	~lamp2on		string	[0-9]	
🗹 Auto refresh 🅥						O Refresh
					Ж	Cancel

The above features can be set both in the tab *Built-in features*, as well as via the methods: SetLabel, SetIconA, SetIconB.

Note!

The SetIcon method has a higher priority in the system than the SetLabel method!

• Send the configuration to the CLU.

4.3 Creating a gesture sensor configuration

To create a configuration for a gesture sensor:

- Open by double click object Panel;
- Go to the tab *Events*;
- Assign methods to the events OnGestureUp, OnGestureDown, OnGestureLeft, OnGestureRight (clicking on the '+' on the right of each method):

0					×
CLU_220001205	->x250000863_PANE	.1			
Name: x2500	00863_PANEL1		Source/Receiv	ver:	~
Identification: 25000	0863	5	Type:	PANEL	
Control 🚺 L	Jser schemes New Events	😭 Embedded feature	s Statistics		
Event name		Assigned co	mmands		Add command
OnGestureUp	CLU_220001205->Heater->S	SwitchOn(500,500)		Assign command 💥	÷
OnGestureDown	CLU_220001205->Heater->S	witchOff(500,500)		Assign command 💥	÷
OnGestureLeft	CLU_220001205->x25000086	3_PANEL_BUTTON1->Show	wOK()	Assign command 🐹	÷
OnGestureRight	CLU_220001205->x25000086	3_PANEL_BUTTON1->Show	wOK()	Assign command 🐹	÷
OnProximityDete					÷
				ОК	Cancel

It is possible to substitute icons displayed by default when calling gestures - for this purpose go to the tab *Built-in features* and enter the names of the desired icons without the *.bmp* extension:

0				×		
CLU_220001205->x250000863_PANEL1						
Name: k250000863_PAN	EL1	Source/Re	eceiver:	~		
Identification: 250000863	5	б Туре:	PANEL			
Control 🚺 User schem	nes 🔖 Events 🛞 Embeda	ded features Statistics				
Feature name	Current value	Initial value	Unit	Range		
GestureIconUp	~lamp3on	~lamp3on	.bmp	[0-9]		
GestureIconDown	lamp3off	lamp3off	.bmp	[0-9]		
GestureIconLeft	minus	minus	.bmp	[0-9]		
GestureIconRight	plus	plus	.bmp	[0-9]		
ProximitySens	3	3		[2-100]		
ProximityTimeout	5000	5000	ms	[1000-60000]		
ProximityValue	373		-			
BuzzerValue	1	On 🗸		0,1		
🛛 Auto refresh 🧑				O Refresh		
				OK Cancel		

The use of icons will be possible when they will be loaded onto a microSD card with the extension *.bmp*.

• Confirm the configuration window with OK;

• Send the configuration to the CLU.

4.4 Configuration of the proximity sensor

To set the proximity sensor parameters:

- Open by double click object Panel;
- Go to the embedded features tab, where there are 3 features related to the proximity sensor:
 - ProximitySens defines the sensitivity of the sensor;
 - ProximityTimeout defines the time after which the display is blanked when motion is
 not detected;
 - ProximityValue returns the approximate distance in centimeters from the panel to the object:

0				×		
CLU_220001205->x250000863_PANEL1						
Name: x250000863_PANE	EL1	Source/Re	eceiver:	~		
Identification: 250000863	5	Туре:	PANEL			
🔗 Control 🔡 User schem	es 🔖 Events 😭 Embedo	led features Statistics				
Feature name	Current value	Initial value	Unit	Range		
GestureIconUp	~lamp3on	~lamp3on	.bmp	[0-9]		
GestureIconDown	lamp3off	lamp3off	.bmp	[0-9]		
GestureIconLeft	minus	minus	.bmp	[0-9]		
GestureIconRight	plus	plus	.bmp	[0-9]		
ProximitySens	3	3]	[2-100]		
ProximityTimeout	5000	5000	ms	[1000-60000]		
ProximityValue	386		-			
BuzzerValue	1	On 🗸		0,1		
🗹 Auto refresh 🧲				O Refresh		
				OK Cancel		

The above features can be set both in the tab *Built-in features*, as well as using the methods: SetProximitySens and SetProximityTimeout (in the methods of the *Panel* object).

• The proximity sensor reaction generates the OnProximityDetect event to which additional methods can be added:

0				×
CLU_220001205->x250000863_P/	ANEL1			
		-		
Name: k250000863_PANEL1		Source/Receiver	:	~
Identification: 250000863	5	Type:	PANEL	
P Control 🔡 User schemes 💽 Ev	ents 🌪 Embedded feature:	s Statistics		
Event name	Assigned cor	mmands		Add command
OnGestureUp CLU_220001205->Heat	er->SwitchOn(500,500)	<u>م</u>	ssign command 💥	÷
OnGestureDown CLU_220001205->Heat	er->SwitchOff(500,500)	Α	Assign command 💥	÷
OnGestureLeft CLU_220001205->x250	000863_PANEL_BUTTON1->Shov	vOK()	ssign command 💥	÷
OnGestureRight CLU_220001205->x250	000863_PANEL_BUTTON1->Shov	vOK()	ssign command 💥	÷
OnProximityDete CLU_220001205->x250	000863_PANEL1->SetBuzzerValue	e(1) A	Assign command 💥	÷
			OK	Cancel

• Send the configuration to the CLU.

4.5 Creating a multi-panel configuration of the touch panel

If you want to start creating a multi-page panel configuration, create a *number* (determines the number of the start page) property on the CLU with the sample name *page* - double click on the CLU, go to the *User properties* tab and select the button:



In order for the panel to display the desired content on the screen, it is necessary to create a script (eg *Display*) with several pages - to do this select the button at the left edge of the Object Manager window:



Note!

The name of the script can not contain Polish characters!

PAGE WITH THE BUTTONS - Add a condition checking the current page number (value User features: page) to the script and for the given condition - for a specific page - add the icon allocation action for all 4 buttons (SetIconA methods for elements PANEL_BUTTON1-4) and the method ShowButtons displaying selected icons on the panel screen;

Note!

In addition to assigning icons to specific buttons, it is necessary to call the ShowButtons method, as simply assigning them will not cause them to appear on the display!

Note!

In the case of creating multiple pages, setting the button in the bistable mode - using the feature / method - will not correctly read the state of the relay (due to the different functionality of the buttons when changing pages)!

- **PAGE WITH GRAPHICS AND TEXTS** When designing a page containing graphics and texts, please add:
 - condition checking the page number (it can not be a page with buttons);
 - PANEL action -> ClearScreen ();
 - text and line setting actions (described below);
 - PANEL action -> DisplayContent ().
 - Text and line setting actions:
 - PANEL -> PrintText method that causes text or feature to be printed four parameters to call it: initial screen coordinates (x, y), text and font size (where 1 10 pts, 2 14 pts), 3 28 points);
 - PANEL -> PrintFloat method working in the same way as PrintText, with the difference that it has an additional parameter Precision, responsible for the number of decimal places of the number parameter;
 - PANEL -> DrawLine method drawing a line it is necessary to enter 5 parameters to call it: initial coordinates (x, y), final coordinates (xe, ye) and line color (where 0 black, 1 white);
 - PANEL -> DrawPoint method drawing a point you must specify 3 parameters to call it: coordinates (x, y) and color (the parameter works as when calling the DrawLine method);
 - PANEL -> DrawIcon method drawing the icon you must enter 3 parameters to call it: initial coordinates (x, y) and the name of the icon from the tray.
- **LOCKING THE SCRIPT** Add to the script the conditions that will cause that when the gesture is generated to the right on the last page, the panel will return to the first page (and vice versa) so that the loop works.

The implementation of all the methods described above is presented in the screen shot of the sample script:



The above script is placed at the end of the document in the text version (point 3).

The second page programmed in the script will look like this:

-	🌡 Kitchen	[°C]	-
	11:18:47 24	4.6	
-	Grento	n	-

• In the next step - to the panel gestures to the left and to the right - assign operations of increasing the user variable *page* and running the script *Display* as in the drawing below:

0						×
CLU_220001205-	>x250000863_PANEL	1				
Name: x25000 Identification: 250000	00863_PANEL1 0863	5	Source/Receiv Type:	PANEL		~
Event name OnGestureUp		Assigned co	mmands			Add command
OnGestureDown	CLU_220001205->Display() CLU_220001205->Page=1			Assign command Assign command	%	÷
OnGestureLeft	CLU_220001205->Page=CLU CLU_220001205->Display()	_220001205->Page-1		Assign command Assign command	%	÷
OnGestureRight	CLU_220001205->Page=CLU CLU_220001205->Display()	_220001205-> Page+ 1		Assign command Assign command	%	÷
OnProximityDete						÷
					ОК	Cancel

• Assign CLU -> OnInit to the script call Display:

0			×
CLU_220001205			
Name: CLU_220001205	ID:	220001205	
IP: 192.168.3.2	FW:	407	
Control Events Embedded features	User features		
Event name	Assigned commands		Add command
OnInit CLU_220001205->Display()		Assign command 💥	÷
		0	K Cancel

- Create a script (e.g. *ClickButton1*) to handle the <u>onClick</u> event of one selected button on each page create separate scripts for each button:
 - Add a condition checking the page number;
 - In order to implement the bistable mode function for a button, add another condition checking the current status of the icon and undertaking appropriate actions (switching on or off, eg lighting);
 - Add further conditions to check the page number.

The implementation is shown in the following screenshot:



The above script is placed at the end of the document in a text version (point 4)

Note!

The operation on variables used in the graphical mode of the panel does not refresh, therefore the action of re-generating the page was used in the above script!

 Finally, add additional scripts to all buttons and used events - respectively: script ClickButton1 to event PANEL_BUTTON1 -> OnClick

OnHold			÷
OnClick	CLU_220001205->ClickButton1()	Assign command 💥	÷

3. Script Display in text version:

```
if(not (CLU 220001205->Page==1)) then
   if(CLU 220001205->Page==2) then
   CLU 220001205->x250000863 PANEL1->ClearScreen()
   CLU 220001205->x250000863 PANEL1->PrintText(15,10,"Kitchen[°C]",2)
   CLU_220001205->x250000863_PANEL1->PrintFloat(80,38,CLU_220001205-
>x240000392 PANELSENSTEMP1->Value,1,2)
   CLU 220001205->x250000863 PANEL1->DrawLine(0,32,127,32,1)
   CLU 220001205->x250000863 PANEL1->DrawPoint(0,0,1)
   CLU_220001205->x250000863_PANEL1->DrawLine(70,32,70,63,1)
   CLU 220001205->x250000863 PANEL1->PrintText(15,40,CLU 220001205->Time,1)
   CLU 220001205->x250000863 PANEL1->DisplayContent()
   else
   if(CLU 220001205->Page==3) then
   CLU 220001205->x250000863 PANEL1->ClearScreen()
   CLU 220001205->x250000863 PANEL1->PrintText(63,31,"Hello!",2)
   CLU 220001205->x250000863 PANEL1->DrawIcon(0,0,"onoff")
   CLU 220001205->x250000863 PANEL1->DisplayContent()
   else
   if(CLU 220001205->Page>3) then
   CLU 220001205->Page=1
   CLU 220001205->Display()
   else
   if(CLU 220001205->Page<1) then
   CLU 220001205->Page=3
   CLU 220001205->Display()
   end
   end
   end
   end
   else
   CLU 220001205->x250000863 PANEL BUTTON1->SetIconA("lamploff")
   CLU 220001205->x250000863 PANEL BUTTON2->SetIconA("lamp2off")
   CLU 220001205->x250000863 PANEL BUTTON3->SetIconA("shclosed")
   CLU 220001205->x250000863 PANEL BUTTON4->SetIconA("winclose")
   CLU 220001205->x250000863 PANEL1->ShowButtons()
   end
```

4. *ClickButton1* script in text version:

```
if(CLU_220001205->Page==1) then
if(CLU_220001205->x250000863_PANEL_BUTTON1->IconA=="lamploff") then
```

```
CLU_220001205->Heater->SwitchOn(0,500)
CLU_220001205->x250000863_PANEL_BUTTON1->SetIconA("lamplon")
else
CLU 220001205->Heater->SwitchOff(0,500)
CLU_220001205->x250000863_PANEL_BUTTON1->SetIconA("lamploff")
end
else
if(CLU_220001205->Page==2) then
SYSTEM.Wait(1000)
CLU 220001205->x250000863 PANEL BUTTON1->ShowOK()
else
if(CLU_220001205->Page==3) then
SYSTEM.Wait(1000)
CLU_220001205->x250000863_PANEL_BUTTON1->ShowOK()
end
end
end
```

5. Configuration of the Smart Panel v4

Note!

Smart Panel in the v4 version is available for Object Manager in version 1.2.1.190201 and higher and for CLU with firmware 04.07.49-1912 and higher.

5.1. Configuration parameters

A. Panel

FEATURES

Name	Description
GestureIconUp	The name of the BMP file with the icon for the gesture Top (without extension)
GestureIconDown	The name of the BMP file with the icon for the Down gesture (no extension)
GestureIconLeft	The name of the BMP file with the icon for the Left gesture (no extension)
GestureIconRight	The name of the BMP file with the icon for the Right gesture (no extension)
ProximitySens	Sensitivity of the proximity sensor (lower value - higher sensitivity)
ProximityTimeout	The time after which the display will be turned off
ProximityValue	Proximity sensor signal (non-dimensional value)
BuzzerValue	Control of sound signaling: 0 - Off, 1 - On
GestureMode	<pre>Gesture orientation: 0 - Off, 1 - Vertical, 2 - Horizontal, 3 - Vert+Horiz</pre>
GestureSens	Gesture sensitivity: 1 - Low, 2 - Mid, 3 - High
PageNr	The number of the currently displayed page
PageDisplayMode	<pre>Information before changing the page: 0 - ShowImmediately, 1 - ShowIconOrName, 2 - ShowGesture</pre>
ButtonsLEDMode	<pre>The location of the buttons with low LED light: 0 - LocationLedOFF, 1 - LocationLedON, 2 - LocationLedONforActive</pre>
PageControlMode	The source that switches pages: 0 - Command (switching using the SetNextPage and SetPrevPage methods) 1 - Gesture/Command (switching using gestures and SetNextPage and SetPrevPage methods)

Name	Description
GestureDisplayMode	Display information about the currently executed gesture: 0 - Off, 1 - On

METHODS

Name	Description
SwitchOnDisplay	Wakes the display from sleep mode
ShowButtons	Changes the display mode to <i>buttons</i> . Clears the display and displays the icons (or text) again for all buttons
ClearScreen	Cleans the display content in <i>freedraw mode</i>
PrintText	<pre>Displays the text in freedraw mode using the parameters: x, y, txt, font size, where: x and y are the coordinates expressed in pixels, txt is a string, font size is the font size(1: 10p, 2: 14p, 3: 32p)</pre>
PrintFloat	Displays the number in <i>freedraw</i> mode using the parameters: x,y, number, precision, font size, where: x and y are coordinates expressed in pixels, number is the number, precision is the number of decimal places, font size is the font size (1:10p, 2:14p, 3:32p)
DrawLine	Draw lines in <i>freedraw</i> mode using the parameters: x, y, xe, ye, color, where: x and y are initial coordinates, xe and ye are final coordinates, color is the colour line (0 - black, 1 - white). The starting and ending coordinates are expressed in pixels
DrawPoint	Draws a point in the <i>freedraw</i> mode using the parameters: x, y, color, where: x and y are the coordinates expressed in pixels, color is the color of the point (0 - black, 1 - white)
DrawIcon	Draws the icon (bmp) in <i>freedraw</i> mode using the parameters: x,y, Filename, where: x and y are the coordinates expressed in pixels Filename is the name of the icon (without extension)
DisplayContent	Displays the contents of the graphical memory buffer. Changes the display mode to <i>freedraw</i>
SetGestureIconUp	Sets the icon to perform the up gesture
SetGestureIconDown	Sets the icon to perform the down gesture
SetGestureIconLeft	Sets the icon to perform the left gesture
SetGestureIconRight	Sets the icon to perform the right gesture
SetProximitySens	Sets the ProximitySens value
SetProximityTimeout	Sets the time in seconds after which the display goes out
SetBuzzerValue	Control of sound signaling (On / Off)

Name	Description
SetGestureMode	Choice of gesture orientation
SetGestureSens	Choice of gesture sensitivity
SetBeep	Generates sound at a given frequency [Hz], duration [ms] and volume
SetPageNr	Sets the number of the page displayed
SetPageDisplayMode	Sets the information display mode before changing the page
SetButtonsLEDMode	Sets the button location mode using the LEDs
SetPageControlMode	Sets the source that switches pages (commands / pages)
SetGestureDisplayMode	Sets the display mode of the information about the executed gesture
SetNextPage	Displays the next page
SetPrevPage	Displays the previous page
Draw	Triggers an OnDraw event when OLED is active

EVENTS

Name	Description
OnGestureUp	An event triggered when an up gesture is executed
OnGestureDown	An event triggered when a down gesture is executed
OnGestureLeft	An event triggered when a left gesture is executed
OnGestureRight	An event triggered when a right gesture is executed
OnProximityDetect	An event triggered when a person approaching the display is detected
OnPageChange	An event triggered when the page is changed in the panel

B. Buttons

FEATURES

Name	Description
Mode	Returns the set operation mode of the button: 0 - monostable, 1 - bistable, 2 - locked (locked)
HoldDelay	Time in milliseconds, after pressing and holding the button triggers the event <code>OnHold</code>
HoldInterval	The cyclic interval in milliseconds that the \fbox{OnHold} event triggers when the button is held
Value	Returns the state of the button as 0 or 1
Label	The text that describes the button (displayed instead of the icon)
IconA	File name of the icon assigned to the button in monostable and bistable mode in the <i>OFF</i> position; the name preceded by "~" will display the graphic in negative; IconA has priority over the Label feature
IconB	The file name of the icon assigned to the button in bistable mode in the ON position; the name preceded by "~" will display the graphic in negative

METHODS

Name	Description
SetMode	Sets the button operation mode: 0 - monostable, 1 '- bistable, 2 - locked (locked)
SetHoldDelay	Sets the value of HoldDelay
SetHoldInterval	Sets the value of HoldInterval
SetLabel	Sets the value of Label (text describing the button)
SetIconA	Sets the file name of the A icon (without extension)
SetIconB	Sets the file name of the B icon (without extension)
ShowOK	Blinks the green LED on the button for two seconds (frequency 500 ms). The red LED of the button remains off
ShowError	The red LED on the button flashes for two seconds (500 ms frequency). The green LED of the button remains off
LedSwitchOn	It turns on the green LED on the button
RedLedSwitchOn	Activates the red LED on the button
LedSwitchOff	Turns off all LEDs on the button

EVENTS

Name	Description
OnChange	An event that is triggered when the state changes to the opposite one
OnSwitchOn	An event that is triggered when the high state on input is set
OnSwitchOff	An event triggered when the low state on input is set
OnShortPress	An event triggered after pressing the button for 500 ms - 2000 ms
OnLongPress	An event is triggered after pressing the button for 2000 ms - 5000 ms
OnHold	An event triggered when the input is in the high state, the first time after the holdDelay time has elapsed, and then cyclically every HoldInterval value
OnClick	An event triggered after pressing the button for less than 500ms

C. Pages configuration (Panel_Page)

FEATURES

Name	Description
PageType	<pre>The type of page displayed on the Smart Panel: 0 - Inactive, 1 - Buttons, 2 - Thermostats, 3 - FreeDraw</pre>
PageName	Page name / name of the icon displayed on the Smart Panel (when switching between pages)
Object_1_Id	Thermostat object ID or button number depending on page type, e.g.: <i>Thermostats</i> page type: - for thermostat on local CLU: THE1325 - for remote thermostat CLU: CLU220000001-> THE4321 For the PageType feature set to <i>Buttons / FreeDraw</i> enter the number of the button (116)
Object_1_Name	The name of the thermostat displayed on the Smart Panel page. Applies only to page <i>Thermostats</i> (no name - inactive thermostat). In the case of the PageType feature set to <i>Buttons / FreeDraw</i> , the feature remains empty
Object_2_Id	Thermostat object ID or button number depending on page type, e.g.: <i>Thermostats</i> page type: - for thermostat on local CLU: THE1325 - for remote thermostat CLU: CLU220000001-> THE4321 For the PageType feature set to <i>Buttons / FreeDraw</i> enter the number of the button (116)
Object_2_Name	The name of the thermostat displayed on the Smart Panel page. Applies only to page <i>Thermostats</i> (no name - inactive thermostat). In the case of the PageType feature set to <i>Buttons / FreeDraw</i> , the feature remains empty
Object_3_Id	Thermostat object ID or button number depending on page type, e.g.: <i>Thermostats</i> page type: - for thermostat on local CLU: THE1325 - for remote thermostat CLU: CLU220000001-> THE4321 For the PageType feature set to <i>Buttons / FreeDraw</i> enter the number of the button (116)
Object_3_Name	The name of the thermostat displayed on the Smart Panel page. Applies only to page <i>Thermostats</i> (no name - inactive thermostat). In the case of the PageType feature set to <i>Buttons / FreeDraw</i> , the feature remains empty
Object_4_Id	Thermostat object ID or button number depending on page type, e.g.: <i>Thermostats</i> page type: - for thermostat on local CLU: THE1325 - for remote thermostat CLU: CLU220000001-> THE4321 For the PageType feature set to <i>Buttons / FreeDraw</i> enter the number of the button (116)
Object_4_Name	The name of the thermostat displayed on the Smart Panel page. Applies only to page <i>Thermostats</i> (no name - inactive thermostat). In the case of the PageType feature set to <i>Buttons / FreeDraw</i> , the feature remains empty

Name	Description
SetPageType	Sets the type of page displayed on the Smart Panel
SetPageName	Sets the page name / name of the icon displayed on the Smart Panel (when switching between pages)
SetObject_1_Id	Sets Object_1_Id value
SetObject_1_Name	Sets Object_1_Name value
SetObject_2_Id	Sets Object_2_Id value
SetObject_2_Name	Sets Object_2_Name value
SetObject_3_Id	Sets Object_3_Id value
SetObject_3_Name	Sets Object_3_Name value
SetObject_4_Id	Sets Object_4_Id value
SetObject_4_Name	Sets Object_4_Name value

EVENTS

Name	Description
OnPageOpen	An event triggered when the page is opened
OnPageClose	An event triggered when the page is closed
OnDraw	An event signaling the need for redrawing. Generation only in <i>freedraw</i> mode, after entering the given page or when calling the Draw method and wake up the screen

D. Temperature and lighting sensors

FEATURES

Name	Description
Threshold	Hysteresis size (accuracy 0.1 ° C / 0.1%) defining the sensitivity at which events are generated: OnChange, OnLowerValue, OnRaiseValue
Sensitivity	The period (in ms) at which the sampled values are averaged
MinValue	The minimum value of the Value feature, exceeded by the OnOutOfRange event
MaxValue	The maximum value of the Value feature ,exceeded by the OnOutOfRange event
Value	Input value: for a temperature sensor from 0.0 to 45.0 $^\circ$ C or for a light sensor 0 - 100%

Name	Description
OnChange	An event triggered when the Value attribute changes
OnRaiseValue	An event triggered when the value changes to a higher one (rising edge)
OnLowerValue	An event triggered when the value changes to a lower one (falling edge)
OnOutOfRange	An event triggered when the input value is outside the specified range (MinValue; MaxValue)

5.2. Creating a gesture sensor configuration

- To create a configuration for a gesture sensor:
 - Open by double click object Panel;
 - Go to the tab *Events*;
 - Assign methods to the events OnGestureUp, OnGestureDown, OnGestureLeft, OnGestureRight (clicking on the + on the right of each method):

0					×
Object	t properties				
Name: Id: Type:	k250000021_F null->PAN42 PANEL	ANEL1	Source/Receiver: Serial number:	25000021	~ [1]
Event r	Control [[l name stureUp	Jser schemes Events Embedded features Assigned o CLU220001006->x190000558 DOUT1->SwitchOn(0)	Statistics commands	Assign command 🐹	Add command
OnGes	tureDown	CLU220001006->x190000558_DOUT1->SwitchOff(0)]	Assign command	÷
OnGes OnGes	tureLeft	CLU220001006->x250000021_PANEL_BUTTON1->Re CLU220001006->x250000021_PANEL_BUTTON1->Let	dLedSwitchOn()	Assign command 💥	
OnPro	ximityDetect				÷
OnPag	eChange				÷
				ОК	Cancel

Note!

In the case of configurations containing the configuration of pages (Buttons / FreeDraw / Thermostats), the methods assigned to the OnGestureLeft and OnGestureRight events will not be executed. This is related to the predefined functionality of switching between pages. You can change the way pages scroll. To do this, change the setting of the PageControlMode feature to Command. After doing this, the methods assigned to the events will be executed.

SetPageControlMode	PageControlMode	Command	

It is also possible to substitute the default icons displayed when gesturing - go to the *Built-in features* and enter the names of the icons you want without a *.bmp* extension:

0					×
Object	properties				
Name	25000021 DANEL1		Source/Persiver		
Id.	PULLS PAN/218		Source/ Receiver:	250000001	· 1
Type:	PANE		Serial number:	230000021	
.jpc.					
Po	ontrol 🔡 User schem	es 🔖 Events 😭 Embedde	ed features Statistics		
Feature	name	Current value	Initial value	Unit	Range
Gestur	elconUp	~lamp3on	~lamp3on	.bmp	[0-9]
Gestur	elconDown	lamp3off	lamp3off	.bmp	[0-9]
Gestur	elconLeft	minus	minus	.bmp	[0-9]
Gestur	elconRight	plus	plus	.bmp	[0-9]
Proxim	itySens	3	3]	[2-100]
Proxim	ityTimeout	5000	5000	ms	[1000-60000]
Proxim	ityValue	130		-	
Buzzer	Value	1	On 🗸		0,1
Gestur	eMode	3	Vert+Horiz 🗸		0,1,2,3
Gestur	eSens	2	Mid V		1,2,3
PageN	r:	0	1		
PageDi	splayMode	0	ShowImmediately 🗸		0,1,2
Button	sLEDMode	1	LocationLedON V		0,1,2
PageCo	ontrolMode	1	Gesture/Command V		0,1
Gestur	eDisplayMode	1	On 🗸		0,1
🗹 Auto	o refresh 🧿				O Refresh
				0	K Cancel

The use of icons will be possible when they will be uploaded to the microSD card with the *.bmp* extension.

In addition, from version 04.03.04.1910 there is a possibility to choose the orientation of recognizable gestures and their sensitivity. To do this, go to the *Built-in features* tab and select the desired orientation and sensitivity of gesture recognition:

0					
Object	properties				
Name:	k250000021_PANEL1		Source/Receiver:		~
ld:	null->PAN4218		Serial number:	250000021	1
Туре:	PANEL				
🥐 c	ontrol 🔡 User scheme	es 📡 Events 🌪 Embedde	ed features E Statistics		
Feature	name	Current value	Initial value	Unit	Range
Gestur	elconUp	~lamp3on	~lamp3on	.bmp	[0-9]
Gestur	elconDown	lamp3off	lamp3off	.bmp	[0-9]
Gestur	elconLeft	minus	minus	.bmp	[0-9]
Gestur	elconRight	plus	plus	.bmp	[0-9]
Proxim	itySens	3	3		[2-100]
Proxim	ityTimeout	5000	5000	ms	[1000-60000]
Proxim	ityValue	130		-	
Buzzer	Value	1	On 🗸		0,1
Gestur	eMode	3	Vert+Horiz 🗸		0,1,2,3
Gestur	eSens	2	Mid V		1,2,3
PageN	r	0	1		
PageDi	splayMode	0	ShowImmediately ~		0,1,2
Button	sLEDMode	1	LocationLedON V		0,1,2
PageCo	ontrolMode	1	Gesture/Command V		0,1
Gestur	eDisplayMode	1	On ~		0,1
🗹 Auto	o refresh 🧿				O Refresh
				ок	Cancel

Embedded features, through which you can choose orientation and sensitivity:

- GestureMode possible change in the direction of gesture detection:
 - Off gestures are not recognized;
 - Vertical only up and down gestures are recognized;
 - Horizontal only gestures left and right are recognized;
 - Vert+Horiz gestures are recognized both up and down, as well as left and right.
- GestureSens possible change in gesture detection sensitivity:
 - Low gesture performed close to the device in an accurate manner;
 - Mid gesture performed both close to the device as well as from a short distance;
 - High gesture made from a further distance, it is possible to detect the wrong gesture.

The above features can be set both in the tab *Built-in features*, as well as using methods: SetGestureIconUp, SetGestureIconDown, SetGestureIconLeft, SetGestureIconRight, SetGestureMode, SetGestureSens (in the methods of the Panel object).

- Confirm the configuration window with OK;
- Send the configuration to the CLU Z-Wave.

5.3. Configuration of the proximity sensor

To set the proximity sensor parameters:

- Open by double-clicking the Panel object;
- Go to the *Embedded Features* tab, where there are 3 features related to the proximity sensor:
 - ProximitySens determines the sensitivity of the sensor;
 - ProximityTimeout defines the time after which the display is blanked when motion is
 not detected;
 - ProximityValue returns the approximate distance in centimeters from the panel to the
 object;

0					×		
Object prope	Object properties						
Name: k25000	0021 PANEL1		Source/Peceiver		~		
Id: null->	PAN4218		Serial number:	250000021	1		
Type: PANEL			Schurndingen	23000021	I.		
Control	User scheme	es 🌔 Events 🐑 Embedde	ed features Statistics				
Feature name		Current value	Initial value	Unit	Range		
GestureIconU	р	~lamp3on	~lamp3on	.bmp	[0-9]		
GestureIconD	own	lamp3off	lamp3off	.bmp	[0-9]		
GestureIconLe	eft	minus	minus	.bmp	[0-9]		
GestureIconR	ight	plus	plus	.bmp	[0-9]		
ProximitySens		3	3]	[2-100]		
ProximityTime	eout	5000	5000	ms	[1000-60000]		
ProximityValue	e	130					
BuzzerValue		1	On 🗸		0,1		
GestureMode		3	Vert+Horiz 🗸		0,1,2,3		
GestureSens		2	Mid 🗸		1,2,3		
PageNr		0	1				
PageDisplayMe	ode	0	ShowImmediately ~		0,1,2		
ButtonsLEDM	ode	1	LocationLedON V		0,1,2		
PageControlM	ode	1	Gesture/Command V		0,1		
GestureDispla	yMode	1	On 🗸		0,1		
Auto refres	sh 🧿				O Refresh		
				ОК	Cancel		

The above features can be set both in the tab *Built-in features*, as well as using the methods: SetProximitySens and SetProximityTimeout (in the methods of the Panel object).

• The proximity sensor reaction generates the OnProximityDetect event to which additional methods can be added:

0							×
Object	properties						
N	Lasooooaa p			1	<i>(</i>) .		
Name:	K230000021_P/] Sour	ce/Receiver:		~
Turner	DANIEL	8] Seria	l number:	250000021	1
туре:	PAINEL]			
1 CP C	ontrol 🚺 U	ser schemes 🚺 Even	ts 🌪 Embedded f	eatures Statistics			
Event n	iame		As	ssigned commands			Add command
OnGes	tureUp	CLU220001006->x1900	00558_DOUT1->Swite	chOn(0)		Assign command 💥	÷
OnGes	tureDown	CLU220001006->x1900	00558_DOUT1->Swite	chOff(0)		Assign command 💥	÷
OnGes	tureLeft	CLU220001006->x2500	00021_PANEL_BUTTC)N1->RedLedSwitchOn()		Assign command 🞇	÷
OnGes	tureRight	CLU220001006->x2500	00021_PANEL_BUTTC	0N1->LedSwitchOff()		Assign command 🐹	÷
OnProx	ximityDetect	CLU220001006->x2500	00021_PANEL_BUTTC)N1->ShowError()		Assign command 🐹	÷
OnPag	eChange						÷
						Oł	Cancel

• Send the configuration to the CLU Z-Wave.

5.4. Panel object - new functionality

In the latest version of the Smart Panel module (from 04.03.04.1910), the Panel facility has introduced a new functionality enabling, among other things:

- sound generation;
- management of LED button backlight;
- the ability to enable / disable notification of the detected gesture;
- page management mechanism, which will be described in detail in the next section.

The first of the introduced novelties is the ability to generate sound at a given frequency, length and volume. The SetBeep method is used for this purpose:

0					×
Object prop	erties				
Name: x2500 Id: null- Type: PANE	000021_PANEL1 >PAN4218 EL		Source/Receiver: 2500000	21	× 1
Control	User scheme	s 📡 Events 🌪 Embedded f	eatures Tatistics		
SetProximity	Sens	ProximitySens	number [2-100]	(
SetProximity	Timeout	ProximityTimeout	number [1000-60000]	(D
SetBuzzerVa	lue	BuzzerValue	Off 🗸	(D
SetGestureN	lode	GestureMode	Off 🗸	(\triangleright
SetGestureS	ens	GestureSens	Low V	(D
		Frequency	500 number [30-5700]		
CotPoop		Duration	1000 number [1-2000]		
зетвеер		Volume	16 number [0-16]		9
		Reserved	0 number [0]		
SetPageNr		Nr	number [1-4]	(
SetPageDisp	layMode	PageDisplayMode	ShowImmediately 🖌	(D
SetButtonsL	EDMode	ButtonsLEDMode	LocationLedOFF V	(
SetPageCont	trolMode	PageControlMode	Command 🗸	(
				ОК	Cancel

Another feature available from the latest version of the software is the ability to locate buttons using low LED light. To do this, go to the *Built-in features* tab and set the desired value of the ButtonsLEDMode feature:

- LocationLedOFF the buttons on the Smart Panel module are not illuminated;
- LocationLedOn the buttons on the SmartPanel module are slightly illuminated;
- LocationLedforActive only keys that are in one of the two operating modes *Monostable / Bistable are highlighted.* If the button is in *Locked* mode, its LED remains off.

In addition to the ability to manage the backlight buttons, it is possible to enable / disable informing about the detection of a gesture. To do this, in the *Embedded Features* tab, find the GestureDisplayMode feature by setting any value:

- Off information on the detection of a gesture is not displayed on the module screen;
- On information on the detection of a gesture is displayed on the module's screen.

The above built-in features can also be set using the methods: SetButtonsLEDMode and SetGestureDisplayMode.

5.5. Panel object - page management mechanism

• Smart Panel v4 introduces a new mechanism for page management. It consists of features, methods and events that were placed in the Panel object:

Methods / Features:

- SetPageNr / PageNr using this method / feature it is possible to directly transition between more pages at the same time. By entering the page number in the parameter and then calling the method, the desired page will be displayed on the screen (you may need to wake up the screen);
- SetPageDisplayMode / PageDisplayMode via the method / feature it is possible to set the method of switching between pages. There are three modes to choose from:
 - ShowImmediately (0) the transition between pages takes place immediately, it is not preceded by displaying a message / icon / name;
 - ShowIconOrName (1) the transition between pages precedes displaying the icon or name entered in the feature PageName;
 - ShowGesture (2) the transition between the pages is preceded by the display of the icon entered in the feature GestureIconLeft Or GestureIconRight, depending on the gesture made;
- SetPageControlMode / PageControlMode using the method / feature it is possible to change the source with which the page change is made:
 - Command (0) go to the previous / next page only using the methods SetPrevPage and SetNextPage. In addition, left and right gestures become active, which means that it is possible to assign OnGestureLeft and OnGestureRight events to the event;
 - Gesture / Command (1) the transition to the previous / next page is possible using gestures left and right, as well as using the methods SetPrevPage and SetNextPage. If this property value is set, the left and right gestures have a predefined functionality that has a higher priority over the actions assigned to the OnGestureLeft and OnGestureRight events. This means that actions assigned to these events will not be executed;
- SetNextPage the method allows you to go to the next page in the configuration;
- SetPrevPage the method allows you to go to the previous page in the configuration;
- Draw method used to generate the OnDraw event when the OLED is active;
- Happening:
 - OnPageChange an event generated when switching between pages

Note!

The page management mechanism is available only for the configuration of pages made through Panel_Page objects (Buttons / FreeDraw / Thermostats). In the case of a configuration that was created in the previous manner (section 4.5), the above features, methods and event are ignored.

5.6. Backward compatibility

When starting work with the new version of the Smart Panel module, the device is in the default configuration, which is backward compatible. All four Panel_Page objects have the built-in feature PageType set to *Inactive*. This allows you to work with the panel in the same way as before (in version v3). Only the first four buttons on the list of objects are available. Buttons 5 to 16 are inactive, despite the configuration options. The configuration of multiple pages is carried out in accordance with the procedure described in Section 4.5.

0				×
Object properties				
Name: k250000021_PANEL_PAG ld: null->PAN1557 Type: PANEL_PAGE	E1	Source/Receiver: Serial number:	250000021	× 1
🥐 Control 🚦 User schem	es 🔖 Events 🎓 Embedded fea	tures 🔠 Statistics		
Feature name	Current value	Initial value	Unit	Range
РадеТуре	0	Inactive 🗸		0,1,2,3
PageName]-	[0-15]
Object_1_ld	nil] -	[0-23]
Object_1_Name	(-)] -	[0-15]
Object_2_Id	nil] -	[0-23]
Object_2_Name	-		-	[0-15]
Object_3_Id	nil] -	[0-23]
Object_3_Name	-] -	[0-15]
Object_4_Id	nil] -	[0-23]
Object_4_Name	21-1] -	[0-15]

5.7. Creating a configuration using the Buttons page object

In the *Buttons* operating mode, there are 4 physical touch buttons and up to 16 virtual buttons spread over 4 pages, each of which can perform independent functions. It is also possible to combine / merge 2,3,4 objects into one button (described in more detail in subsection XII.5.10).



In the *Buttons* mode, drawing content on the display is blocked.



Page type "Buttons/FreeDraw"

• Creating a panel configuration that supports a page or pages *Buttons* is best to start with the configuration of the buttons to be used. In order to parametrize them:

- Open the *PANEL_BUTTONX* object (where X is the number of one of the 16 buttons) by double clicking on the list of modules;
- Go to the Events tab;
- Configure the operation of the button by assigning methods to specific events (by clicking "+" on the right side of the window):

0					×
Object	t properties				
Name:	xx250000021_P/	ANEL_BUTTON15	Source/Receiver		~
Type: PANEL_BUTTON			Serial number:	250000021	15
@ c	Control 🚺 Us	er schemes 🔀 Events 😭 Embedded fe	atures Statistics		
Event n	iame		igned commands		Add command
UnCha	nge	CL0220001006->x250000021_PANEL_B01101	NI->ShowOK()	Assign command	
OnSwi	tchOn	CLU220001006->x190000558_DOUT1->Switcl	hOn(0)	Assign command 🐹	
OnSwi	tchOff	CLU220001006->x190000558_DOUT1->Switc	hOff(0)	Assign command 💥	
OnSho	rtPress				÷
OnLon	gPress				÷
OnHole	d				÷
OnClic	k				÷
				ОК	Cancel

- Select the tab *Embedded features* and define the objects displayed on the screen of a given button:
 - Label a feature defining the text assigned to a given button;
 - IconA a feature that defines the name of the icon assigned to a given button when it is found in * Monostable * mode or * Bistable * mode for OFF position;
 - IconB a feature that defines the name of the icon assigned to a given button when it is in *Bistable* mode in the ON position. To assign the same icon, but with the inverted colors, precede the name of the pictogram with the "~" sign (eg ~ heaton):

0					×
Object	t properties				
Name:	k250000021_PANEL_BUTTON1	5	Source/Receiver		~
ld:	null->PAN1178		Serial number:	250000021	15
Туре:	PANEL_BUTTON				
@ c	Control 🔃 User schemes 🚺	Events 😭 Embedded fe	eatures E Statistics		
Feature	e name Currer	nt value	Initial value	Unit	Range
Mode	0		Monostable 🗸		0,1,2
HoldD	elay 1000		1000	ms	[1-5000]
HoldIn	nterval 100		50	ms	[1-2000]
Value	0			bool	0,1
Label	(Lamp3	string	[0-15]
IconA	-		lamp3off	string	[0-9]
IconB	-		~lamp3on	string	[0-9]
🗹 Aut	o refresh Ŭ				(3) Refresh
					K Cancel

The above built-in features can be set both in the tab *Built-in features*, as well as via the methods: SetLabel, SetIconA, SetIconB.

Note!

The SetIconA method has a higher priority in the system than the SetLabel method!

• Send the configuration to the CLU Z-Wave.

The next step in creating the configuration is configuring Panel_Page objects depending on the number of buttons. One Panel_Page object supports up to 4 buttons. To do this:

- Open the object PANEL_PAGEX (where X is the number of the next page) by double clicking on the list of modules;
- Go to the tab Events;
- Configure the operation of the site by assigning methods to specific events (by clicking "+" on the right side of the window):

0											>	×
Object	t prop	erties										
Name:	k2500	00021_P	ANEL_PAGE1				So	urce/Receiver				~
ld:	null->	PAN155	i7				Ser	ial number:	250000021		1	1
Туре:	PANE	L_PAGE										
1 CP 0	Control	1	ser schemes	Events	😭 Embed	ded features	Statistics	s				
Event r	name					Assigned	commands				Add comman	nd
OnPag	eOpen	н.	CLU22000	1006->x250000	021_PANEL_B	UTTON1->L	edSwitchOn()		Assign command	*	÷	
OnPag	eClose		CLU22000	1006->x250000	021_PANEL_B	UTTON1->L	edSwitchOff()		Assign command	*	÷	
OnDra	iw											
									E	OK	Cancel	

Note!

For page type *Buttons*, the OnDraw event is not generated.

- Select the tab *Built-in features* and define the supported page type and link the page objects to the buttons:
 - PageType a feature that specifies the page type, set it to Buttons (1);
 - PageName a feature that specifies the name of the page or icon that will be displayed when switching between pages (works only when the 'PageDisplayMode` feature is set to 1 (ShowIconOrName) in the Panel object);
 - Object_x_Id identifier / button number. In order to read the value in the field *Serial number* of the object *PANEL_BUTTONX*

Name:	k250000021_PANEL_BUTTON15	Source/Receiver:	_	\sim
ld:	null->PAN1178	Serial number:	250000021	15
Туре:	PANEL_BUTTON			

 Object_X_Name - name of the thermostat. For the page type *Buttons*, the feature should be left blank;

0						×
Object	t properties					
						10
Name:	x250000021_PANEL_PAGE	E1	Source/Receiver:			~
ld:	null->PAN1557		Serial number:	250000021		1
Туре:	PANEL_PAGE					
@ c	Control 🔚 User scheme	es 📡 Events 😭 Embedded feat	ures Statistics			
Feature	e name	Current value	Initial value	Unit	Range	
PageTy	ype	0	Buttons 🗸		0,1,2,3	
PageN	ame	-	Page1] -	[0-15]	
Object	_1_ld	nil	1] -	[0-23]	
Object	_1_Name				[0-15]	
Object	_2_ld	nil	2	-	[0-23]	
Object	_2_Name	-		-	[0-15]	
Object	_3_ld	nil	7]-	[0-23]	
Object	_3_Name	-		-	[0-15]	
Object	_4_ld	nil	8] -	[0-23]	
Object	_4_Name	-] -	[0-15]	
Auto	o refresh 🧿					O Refresh
					ок	Cancel

Note!

Sending the configuration only with the defined page type, without setting the binding of objects with the buttons is connected with starting the panel operation mode as *Buttons*. However, the buttons on the module will be inactive. This is related to the non-complementing of the Object_X_Id features.

• Send the configuration to the CLU Z-Wave.

5.8. Creating a configuration using the FreeDraw site object

In *FreeDraw* mode, as with *Buttons*, there are 4 physical touch buttons and up to 16 virtual buttons spread over 4 pages, each of which can perform independent functions. You can also combine / merge objects into a single button. The OLED display works in *FreeDraw* mode, i.e. it is fully available for user's LUA scripts. A drawing engine has also been created, in which drawing scripts are called by the <u>OnDraw</u> event generated by the panel when it is necessary. The system calls the <u>Draw</u> method at the moment when the content drawn on the module has changed.



Page type "Buttons/FreeDraw"

A. General rules for creating configurations

Creating a panel configuration that supports a page or pages *FreeDraw* is best to start with the configuration of the buttons to be used. Their parameterization is described in the previous subsection.

The next step in creating the configuration should be creating scripts that draw the content on the Smart Panel display. Their creation is analogous to the v3 version of the Smart Panel module (see chapter XII.4).

Example of a script that draws content on the display (*Page1*):

Example of a script that draws content on the display (*Page1*):

```
CLU220000260->x250000053_PANEL1->ClearScreen()

CLU220000260->x250000053_PANEL1->PrintText(15,10,"Kitchen [°C]:",2)

CLU220000260->x250000053_PANEL1->PrintFloat(80,38,CLU220000260-

>x240000659_PANELSENSTEMP1->Value,1,2)

CLU220000260->x250000053_PANEL1->DrawLine(0,32,127,32,1)

CLU220000260->x250000053_PANEL1->DrawPoint(0,0,1)

CLU220000260->x250000053_PANEL1->DrawLine(70,32,70,63,1)

CLU220000260->x250000053_PANEL1->PrintText(15,40,CLU220000260->Time,1)

CLU220000260->x250000053_PANEL1->DisplayContent()
```

Note!

A restriction has been introduced in the drawing mechanism. CLU Z-Wave expects 2 seconds to finish drawing with the DisplayContent method. Otherwise, the following message will be displayed on the screen:

"page: PageName

free draw

! TIMEOUT !"

The following figure shows the current drawing mechanism.



The next step in creating the configuration is configuring Panel_Page objects depending on the number of buttons. One Panel_Page object supports up to 4 buttons. To do this:

- Open the object *PANEL_PAGEX* (where X is the number of the next page) by double clicking on the list of modules;
- Go to the tab *Events*;
- Configure the operation of the site by assigning methods to specific events (by clicking "+" on the right side of the window):

0													×
Objec	t prope	erties											
Name	125000	0021 DA	NEL DAGE1			-		Source/Pacein					
Id:	null->	PAN155	7					Serial number	er:	5000021		 	
Туре:	PANEL	_PAGE				-		Senar Hamber	-	0000021			
		-			0		1						
000	Control	Us 🚺	er schemes	Events	😭 Embed	ded feature	es Stati	stics				 	
Event	name					Assigne	d commands				Ann	Add comr	nand
OnPag	geOpen		CLU220001	006->x250000	021_PANEL_B	UTTON1->	LedSwitchOn	0	Ass	sign comman	d 💥	÷.	
OnPag	geClose		CLU220001	006->x250000	021_PANEL_B	UTTON1->	LedSwitchOff	0	Ass	sign comman	в 💥	÷	
OnDra	w		CLU220001	006->Page1()					Ass	sign comman	d 💥		
										-	0	Cancel	
										L	U	Cancel	
N	ote!												

For the page type *FreeDraw*, complete the OnDraw event.

- Select the tab *Built-in features* and define the supported page type and link the page objects to the buttons:
 - PageType a feature that specifies the page type, set it to FreeDraw (3);
 - PageName a feature that specifies the name of the page or icon that will be displayed when switching between pages (works only when the PageDisplayMode feature is set to 1 (ShowlconOrName) in the Panel object);
 - Object_X_Id identifier / button number. To do this, read the value in the field *Serial number* of the object *PANEL_BUTTONX*

0				×
Objec	t properties			
Name:	k250000021_PANEL_BUTTON1	Source/Receiver:		
ld:	null->PAN3326	Serial number:	250000021	1

Object_X_Name - name of the thermostat. For the page type FreeDraw, leave the feature blank;
0					×
Objec	t properties				
Name:	250000021_PANEL_PAGE	1	Source/Receiver:		~
ld:	null->PAN1557		Serial number:	250000021	1
Туре:	PANEL_PAGE				
@ c	Control 😈 User scheme	s 💦 Events 😭 Embedded feat	ures Statistics		
Feature	e name	Current value	Initial value	Unit	Range
PageTy	ype	3	FreeDraw V		0,1,2,3
PageN	ame	Page1	Page1] -	[0-15]
Object	_1_ld	1	1	-	[0-23]
Object	_1_Name	-			[0-15]
Object	_2_ld	2	2]-	[0-23]
Object	_2_Name] -	[0-15]
Object	_3_ld	1	1]-	[0-23]
Object	:_3_Name	-		-	[0-15]
Object	_4_ld	1	1	-	[0-23]
Object	_4_Name	-] -	[0-15]
Aut	o refresh 🔮				() Refresh
					OK Cancel

Note!

Sending the configuration only with the defined page type, without setting the binding of objects with the buttons is connected with starting the panel operation mode as *FreeDraw*. However, the buttons on the module will be inactive. This is related to the non-complementing of the Object_X_Id features.

• Send the configuration to the CLU Z-Wave.

Note!

It is possible to overwrite the display content by calling drawing methods from the Object Manager application or through other scripts that are not assigned to the <code>OnDraw</code> event. However, the overwritten content will be cleared when you move to another page or call the <code>Draw</code> method and wake up the screen.

B. Set up the site as a clock

To configure the site as a clock:

• Create a script displaying the current time (Clock);

🚽 Clock 🔀								
Text mode	Script parameters	Run script	START					
			CLU220001006->x25	0000021_PANEL1-> ClearSo	creen()			
		cı	U220001006->x250000021_PANE	EL1->PrintText(25,25,CLU2	20001006->Time,1)			
				Ţ				
			CLU220001006->x250000	021_PANEL1->DisplayCon	tent()			

- • Create a virtual object Timer:
 - Go to the tab *Events*;
 - Configure the operation of the virtual object by assigning the Draw method of the Panel object to the OnTimer event:

0		×
Object properties		
Name: Timer Id: null->TIM13	Type: Timer 13 Events Sembedded features	
Event name	Assigned commands	Add command
OnTimer	CLU220001006->x250000021_PANEL1->Draw() Assign command X	
OnStart		÷
OnStop		.
Unrause		
	ОК	Cancel

• Select the Embedded features tab and define the configuration parameters of the object:

0				×
Object properties				
Name: Timer		Type: Tim	her	
ld: null->TIM1313				
Control Nevents	Embedded features			
Feature name	Current value	Initial value	Unit	Range
Time	1000	1000	ms	
Mode	1	Interval 🗸 🗸		0,1
State	0			0,1,2
Value	0		ms	
Auto refresh 🧑				Refresh
			E	OK Cancel

- Open the *PANEL_PAGEX* object (where X is the page number) by double-clicking on the list of objects:
 - Go to the tab *Events*
 - Configure the operation of the website by assigning methods to specific events (by clicking "+" on the right side of the window):

0						×
Object	t properties					
Name:	k250000021 P	PANEL PAGE1	Source/Receive	r		~
ld:	null->PAN15	57	Serial number:	250000021		1
Туре:	PANEL_PAGE]	<u>h</u>		
@ c	Control 🔡 l	User schemes 🔖 Events 🎓 Embedded fe	eatures Statistics			
Event r	name	As	signed commands			Add command
OnPag	eOpen	CLU220001006->Timer->Start()		Assign command	*	÷
OnPag	eClose	CLU220001006->Timer->Stop()		Assign command	※	÷
OnDra	w	CLU220001006->Clock()		Assign command	*	+

• Select the tab *Built-in features* and define the configuration parameters of the object;

• Send the configuration to the CLU Z-Wave.

Script *Clock* in text version:

```
CLU220000260->x250000053_PANEL1->ClearScreen()
CLU220000260->x250000053_PANEL1->PrintText(25,25,CLU220000260->Time,1)
CLU220000260->x250000053_PANEL1->DisplayContent()
```

5.9. Creating a configuration using the Thermostats page object

In the *Thermostats* mode, a page consisting of 4 objects (including support for up to 16 objects on 4 pages) is available for which thermostat objects defined in the system are assigned. It is possible to change the parameters of thermostats such as set temperature or operating mode. It is also possible to switch the thermostat on or off.

Note!

In the *Thermostats* mode, the buttons as well as the drawing of content on the display are blocked.



Page type "Thermostats"

Creating a panel configuration that supports a page or pages of type *Thermostats* is best started by creating thermostats to be used in the configuration. Description of creation and operation of the virtual object *Thermostat* is described in subsection IX.5.

The v4 version of the Smart Panel module supports two types of thermostats:

- Local thermostat it is a virtual object type *Thermostat* created on the CLU Z-Wave module, to which the Smart Panel module is connected with the currently created configuration;
- Remote thermostat it is a virtual object of type *Thermostat* created on another CLU Z-Wave module;

Through the Smart Panel module it is possible to change such parameters of a virtual object *Thermostat* as:

- PointValue preset temperature, the ability to read the currently set temperature as well as
 the change to a new value;
- Mode thermostat mode:
 - In automatic mode Auto (2) the temperature value is read from the schedule. It is not possible to change this temperature via the Smart Panel module;
 - In manual mode Manual (0), the temperature value is read from the PointValue feature. Through the Smart Panel module, it is possible to change this temperature;
- State current thermostat status: off (Off (0)) / on (On (1)).

A. Creating a configuration with a local thermostat

To create a configuration using a local thermostat you should:

- Create a thermostat on the Z-Wave CLU, to which the Smart Panel module is connected;
- Configure the virtual object as intended;
- Open object *PANEL_PAGEX* (where X is the number of one of 4 pages) by double clicking on the list of objects
- Select the tab *Embedded features* and define the objects displayed on the screen:
 - PageType a feature that specifies the page type, set it to *Thermostats (2)*;
 - PageName a feature that specifies the name of the page or icon that will be displayed when switching between pages (works only when the 'PageDisplayMode` feature is set to 1

(ShowIconOrName) in the Panel object);

• Object_x_Id - thermostat identifier. To do this, read the value in the field *Id* of the virtual object *Thermostat*. The local thermostat ID is not preceded by the CLU ID:

0			<
Object	t properties		
Name:	LocalThermostat	Type: Thermostat	
ld:	CLU220000260->THE3749		

• Object_X_Name - name of the thermostat. The lack of a thermostat name in the parameter causes that the thermostat is not displayed;

0							×
Object	t prope	erties					
Name	k25000	0021 PANEL PAGE1			Source/Receiver		×
Id:	null->	PAN1557			Serial number	250000021	1
Туре:	PANEL	_PAGE			Scharnsen	LINGUOULI	
30	ontrol	User schemes	Events	Embedded featu	res Statistics		
Feature	e name	(Current value	1	nitial value	Unit	Range
PageTy	ype	2	2		Thermostats 🗸		0,1,2,3
PageN	ame	F	Page1		Page1	-	[0-15]
Object	t_1_ld	T	ГНЕ3749		THE3749	-	[0-23]
Object	t_1_Nam	ie k	Kitchen		Kitchen] -	[0-15]
Object	_2_ld	T	rhe5081		THE5081] -	[0-23]
Object	t_2_Nam	ne L	ivingRoom		LivingRoom] -	[0-15]
Object	t_3_ld	I	FHE4059		THE4059]-	[0-23]
Object	t_3_Nam	ne H	Hall		Hall] -	[0-15]
Object	t_4_ld	T	FHE2718		THE2718] -	[0-23]
Object	t_4_Nam	ne E	Bathroom		Bathroom] -	[0-15]
Aut	o refres	sh ህ					(3) Refresh
							OK Cancel

Note!

Sending the configuration only with the defined page type, without setting the binding of objects with the buttons, is connected with starting the panel operation mode as *Thermostats*. The display will show dots ("..."). This is related to the non-complementing of the features $Object_x_Id$ and $Object_x_Name$.

• Send the configuration to the CLU Z-Wave.

B. Creating a configuration with a remote thermostat

To create a configuration using a remote thermostat you should:

- Create a thermostat on the Z-Wave CLU, to which the Smart Panel module with the current configuration is not connected;
- Configure the virtual object as intended;
- Open object *PANEL_PAGEX* (where X is the number of one of 4 pages) by double clicking on the list of objects
- Select the tab *Embedded features* and define the objects displayed on the screen:
 - PageType a feature that specifies the page type, set it to *Thermostats (2)*;
 - PageName a feature that specifies the name of the page or icon that will be displayed when switching between pages (works only when the PageDisplayMode feature is set to 1 (ShowlconOrName) in the Panel object);
 - Object_x_Id thermostat identifier. To do this, read the value in the field *Id* of the virtual object *Thermostat*. The remote thermostat ID must be preceded by the CLU ID:

Name:	RemoteThermostat	Туре:	Thermostat
ld:	CLU220000331->THE5372		

• Object_X_Name - name of the thermostat. The lack of a thermostat name in the parameter causes that the thermostat is not displayed;

0					×
Object	t properties				
Name:	k250000021_PANEL_PAGE	:1	Source/Receiver:		~
ld: Type:	CLU220000260->PAN019	0	Serial number:	250000021	1
iype.	Control User scheme	es 🔖 Events 😭 Embedded feat	tures Statistics		
Feature	e name	Current value	Initial value	Unit	Range
PageTy	ype	2	Thermostats ~		0,1,2,3
PageN	ame	Page1	Page1	-	[0-15]
Object	_1_ld	CLU220000331->THE5372	CLU220000331->THE5372] -	[0-23]
Object	_1_Name	Kitchen	Kitchen	-	[0-15]
Object	_2_ld	CLU220000331->THE6721	CLU220000331->THE6721] -	[0-23]
Object	2_Name	LivingRoom	LivingRoom	-	[0-15]
Object	_3_ld	CLU220000331->THE9021	CLU220000331->THE9021	-	[0-23]
Object	_3_Name	Hall	Hall	-	[0-15]
Object	:_4_ld	CLU220000331->THE5542	CLU220000331->THE5542	-	[0-23]
Object	_4_Name	Bathroom	Bathroom	-	[0-15]
🗹 Aut	o refresh 🧑				() Refresh

Note!

Sending the configuration only with the defined page type, without setting the binding of objects with the buttons, is connected with starting the panel operation mode as *Thermostats*. The display will show dots ("..."). This is related to the non-complementing of the features $Object_X_Id$ and $Object_X_Name$.

• Send the configuration to the CLU Z-Wave.

The diagram below shows an overview of the thermostat on the Smart Panel screen. Via the arrow, the user can go to the next thermostat on the page. However, you can change the set temperature using "- " / "+".



C. Predefined button behavior

Button	Short / long press	Description of behavior
Top left	Short press (click)	Changing the thermostat operating mode: Manual / Auto
Top left	Long press (hold)	Change the state of thermostat: Off/On
Top right	Short press (click)	Go to the next thermostat on the page
Top right	Long press (hold)	No defined functionality
Lower left	Short press (click)	Reduction of the set temperature (<code>PointValue</code>) by 0.1 ° C
Lower left	Long press (hold)	Reducition of the set temperature (PointValue) - as long as the button is held down
Lower right	Short press (click)	Increasement of the set temperature (${\tt PointValue}$) by 0.1 ° C
Lower right	Long press (hold)	Increasement of the set temperature (<pre>PointValue</pre>) - as long as the button is held down

5.10. Connecting objects to larger buttons

The new version of Smart Panel also introduces the ability to combine / merge 2, 3 or 4 objects into one larger button. The functionality is available only in the *Buttons* and *FreeDraw* page mode. In order to create a bigger button you should:

- Configure PANEL_BUTTOX objects (where X is the button number):
 - In the *Events tab* configure the operation of the button by assigning methods to specific events;
 - In the Built-in features, define objects displayed on the screen of a given button;
- Open object PANEL_PAGEX (where X is page number);
- Go to the tab Events;
- Set up the website by assigning methods to specific events;
- Go to the tab Embedded features;
- Set the PageType feature to Buttons or FreeDraw;
- Set the <code>Object_X_Id</code> features according to any version of the join:
 - Merging 2 objects into one horizontal button the icon set for the button is displayed in the middle at the top of the screen (for objects Object_1_Id and Object_2_Id) or lower part of the screen (for objects Object_3_Id and Object_4_Id);
 - merging 2 objects into one button vertically the icon set for the button is displayed in the middle on the left part of the screen (for objects Object_1_Id and Object_3_Id) or on the right part of the screen (for objects Object_2_Id and Object_4_Id);
 - Merging 3 objects into one button two identical icons are displayed, depending on how the objects are connected;

• Merging 4 objects into one button - the icon set for the button is displayed in the center of the screen

6. Configuration of the Smart Panel v6

Note!

Smart Panel in the v6 version is available for Object Manager in version 1.4.1 and higher and for CLU with firmware 5.08.01 and higher.

6.1. Configuration parameters

In the latest version of the Smart Panel v6 module, new configuration parameters have been introduced for such objects as:

- PANEL,
- PANEL_PAGE,
- PANELSENSTEMP.

The full list of changes introduced in the V6 version can be found in the release notes of the given version: <u>Release Notes - Smart Panel module</u>

6.2. New functionality

A. The mechanism of informing about incorrect configuration / entering to the Distributed Logic mode

A new functionality introduced with the v6 version is the mechanism of informing the user about a wrong configuration or entering to the Distributed Logic mode. This mechanism is based on the fact that the module waits about 10 seconds for receiving the configuration after sending it or restarting the system. After this time, the waiting period for configuration ends and the user will be informed about a misconfiguration or switching to Distributed Logic mode by one short and low beep.

B. Distributed Logic mode

Another functionality added to the latest version of the Smart Panel module is the Distributed Logic mode. It is available from version 6.1.8-2115 and higher. Detailed information on the configuration and operation of Distributed Logic - <u>see XIX.</u>

6.3. Changing the UI and the mechanism of operation of Thermostats pages

The Smart Panel module in version v6 offers a refreshed UI of Thermostats websites, as well as new functions. The method of creating and configuring a page with the use of Thermostats type objects is the same as for the previous versions - <u>see XII.5.9.</u>

A. Thermostat UI change

The diagram below shows an overview the appearance of the refreshed thermostat on the Smart Panel screen. Several elements have changed:

 entering the icon in the upper left corner - by default, the "chmode" icon on the SD card is displayed (the icon is shown in the diagram). However, if this icon is not present on the SD card, the word "mode" will be displayed. Additionally, the user can enter his own icon using the SetObject_X_CustomIcon method or the feature Object_X_CustomIcon,

- using the arrow, the user can go to the next thermostat on the page (short press of the button in case of more than one thermostat on the page) or go to the next page (short press in case of one thermostat on the page, longer press of the button in case of more than one thermostat on the page),
- dots have been introduced next to the arrow, which indicate the number of the currently displayed thermostat (one dot - Object_1_ld, two dots - Object_2_ld, etc.). If there is only one thermostat on the website, the dots are not displayed,
- using "-" / "+" it is possible to change the set temperature and the operating mode of the thermostat from Auto to Manual,
- a longer pressing of the upper left button (hereinafter referred to as 'mode') turns the thermostat off / on or changing from Manual mode to Auto mode,
- when the thermostat is turned off, the set temperature disappears and the word "Off" appears, which is located centrally,
- the display of temperature read from the source has also changed now the temperature value before the decimal point is displayed in larger font, while the value after the decimal point and the unit are displayed in a smaller font. Additionally, the display of this temperature depends on the size of the entered icon - more on this subject in the next section.



B. New features on the Thermostats page

From version v6 of the Smart Panel module, new functionalities are available on the Thermostats page. It is related to the changes made to the UI of the thermostat.

1. Possibility to set your own icons

The first new functionality is the aforementioned possibility for the user to set their own icons in the upper left corner of the display. Their change is possible both through the $stobject_x_customIcon$ method as well as through the feature $object_x_customIcon$. The width of the entered icon affects the "x" coordinate of the current temperature. The 64 x 32

pixel icons are allowed. If the icon width x > 64 is exceeded, only the icon itself will be drawn on the display - the UI of the thermostat will not be displayed - it is the so-called "big icon" mode. To go back to the thermostat interface, set an icon whose width does not exceed 64 pixels.

2. Ability to assign actions to new events

Another functionality introduced in the new version of the module is the ability to assign actions to new events OnThermXModeButtonClick, where X is the number of the thermostat on the page. This event is generated when the 'mode' button (upper left button) is clicked.

0				×
Object properties				
Name: x250002161_PANEL_PAGE1		Device type:		~
Id: CLU221000454->PAN6487		Serial number: 250002	161	1
Type: PANEL_PAGE				
Control	Events Embedded features	Statistics		
Event name	Assigned c	commands		Add command
OnPageOpen				
OnPageClose				÷
OnDraw				đ.
OnTherm1ModeButtonClick	CLU221000454->test_1()		Assign command 💥	
OnTherm2ModeButtonClick	CLU221000454->x201000007_D	OUT1->Switch(0)	Assign command 💥	
OnTherm3ModeButtonClick	CLU221000454->x461000006_A	nalogOUT1->Switch(0,0)	Assign command 💥	
OnTherm4ModeButtonClick	CLU221000454->test_4()		Assign command 💥	÷
			ОК	Cancel

3. An example of configuration of new functionalities

1. Local thermostat configuration with operation change (heating / cooling)

The following objects are used to create this configuration:

- Thermostat virtual object,
- DOUT1 object (e.g. Relay module) responsible for heating / cooling activation used in the Thermostat virtual object,
- DOUT2 object (e.g. Relay module) selection of what is to be switched on: heating or cooling - used in scripts.

The following screenshot shows the configuration of the PANEL_PAGE object and the Thermostat virtual object in the default setting, which is heating.

٥						×
Object properties						- / -
Name: x250002161 DANEL	PAGE1		Device trace			
Id: CLU221000454->PA	N6487		Serial number:	250002161		1
Type: PANEL_PAGE				250002101		
Control User sc	hemes tevents	Embedded features	Statistics			
Feature name	Current value	In	itial value	Unit	Range	
РадеТуре	2	Т	hermostats ~		0,1,2,3	_
PageName	Thermostats	1	hermostats	-	[0-15]	
Object_1_Id	THE5235	1	HE5235	-	[0-23]	
Object_1_Name	Living room	L	iving room	-	[0-15]	
Dbject_1_CustomIcon	sun	s	un		[0-9]	
DistributedLogicGroup_1	0	C)		[0-10000]	
Object_2_ld	-			-	[0-23]	
Object_2_Name	-			-	[0-15]	~
🗹 Auto refresh 벬						🔇 Refresh
<u>.</u>						
					OK	Cancel
0						×
0 Object properties						×
Object properties						×
Object properties						×
Object properties Name: Thermostat	155325		Type: Thermo	istat		×
Object properties Name: Thermostat Id: CLU221000454->TH	IE5235] Type: Thermo	stat		×
Object properties Name: Thermostat Id: CLU221000454->Thermostat Id: CLU221000454->Thermostat Id: CLU221000454->Thermostat	IE5235	Scheduler] Type: Thermo	stat		×
Object properties Name: Thermostat Id: CLU221000454->TH Control Events Feature name Feature name	IE5235	Scheduler Initial value] Type: Thermo	istat	Unit Rang	×
Object properties Name: Thermostat Id: CLU221000454->TH Control Events Feature name Source	IE5235 Embedded features Current value 27.50	Scheduler Initial value CLU221000454-] Type: Thermo	istat IELSENSTEMP1	Unit Rang	×
Object properties Name: Thermostat Id: CLU221000454->TH Control Events Feature name Source Control	IE5235 Embedded features Current value 27.50 0	Scheduler Initial value CLU221000454- CLU221000454-] Type: [Thermo] >×250002161 PAN >×191000012 DOL	istat IELSENSTEMP1 JT1	Unit Rang	×
Object properties Name: Thermostat Id: CLU221000454->TH Id: Control OutputType Id:	IE5235 Embedded features Current value 27.50 0 0	Scheduler Initial value CLU221000454- CLU221000454-] Type: Thermo] >x250002161 PAN >x191000012 DOU	istat IELSENSTEMP1 JT1	Unit Rang -1,0,1	e ^
Object properties Name: Thermostat Id: CLU221000454->TH COntrol Control OutputType PointValue	Es235 Embedded features Current value 27.50 0 0 20.0	Scheduler Initial value CLU221000454- CLU221000454- 20.0] Type: [Thermo] >x250002161 PAN >x191000012 DOL	istat IELSENSTEMP1 JT1	Unit Rang -1,0,1	e ^
Object properties Name: Thermostat Id: CLU221000454->TH Control Image: Events Feature name Source Control OutputType PointValue HolidayModeValue	IE5235 Embedded features Current value 27.50 0 0 20.0 17	Scheduler Initial value CLU221000454- CLU221000454- 20.0 17] Type: [Thermo] >x250002161 PAN >x191000012 DOU	istat IELSENSTEMP1 JT1	Unit Rang -1,0,1	e ^
Object properties Object properties Name: Thermostat Id: CLU221000454->Thermostat Id: CLU221000454->Thermostat Id: CLU221000454->Thermostat Id: CLU221000454->Thermostat Id: Control Source Control OutputType PointValue HolidayModeValue Hysteresis	E5235 Embedded features Current value 27.50 0 0 20.0 17 2	Scheduler Initial value CLU221000454- CLU221000454- 20.0 17 2] Type: [Thermo] >×250002161 PAN >×191000012 DOL	istat IELSENSTEMP1 JT1	Unit Rang -1,0,1	e ^
Object properties Name: Thermostat Id: CLU221000454->TH Control Image: Events Feature name Source Control OutputType PointValue HolidayModeValue Hysteresis State	165235 Embedded features Current value 27.50 0 0 20.0 17 2 1	Scheduler Initial value CLU221000454- CLU221000454- 20.0 17 2] Type: [Thermo] >×250002161 PAN >×191000012 DOU	istat	Unit Rang -1,0,1	e ^
Object properties Name: Thermostat Id: CLU221000454->TH Id: CLU221000454->TH Id: CLU221000454->TH Id: Control Id: Control Source Control OutputType PointValue HolidayModeValue Hysteresis State ControlDirection	IE5235 Embedded features Current value 27.50 0 0 20.0 17 2 1 0 0	Scheduler Initial value CLU221000454- CLU221000454- 20.0 17 2 2 Normal V] Type: [Thermo] >×250002161 PAN >×191000012 DOL	istat	Unit Rang -1,0,1	e ^
Object properties Object properties Name: Thermostat Id: CLU221000454->Thermostat Id: CLU221000454->Thermostat Id: CLU221000454->Thermostat Id: CLU221000454->Thermostat Id: CLU221000454->Thermostat Id: CLU221000454->Thermostat Version Events Feature name Source Control OutputType PointValue HolidayModeValue Hysteresis State ControlDirection Mode	E5235 Embedded features Current value 27.50 0 0 20.0 17 2 1 0 0 0 0 0 0 0 0 0 0 0 0 0	Scheduler Initial value CLU221000454- CLU221000454- 20.0 17 2 2 Normal V] Type: Thermo >×250002161 PAN >×191000012 DOL	stat	Unit Rang -1,0,1 0,1 0,1,2,	e ^
Object properties Name: Thermostat Id: CLU221000454->TH Id: CLU221000454->TH Id: CLU221000454->TH Id: Control Source Control Control OutputType PointValue HolidayModeValue Hysteresis State ControlDirection Mode Image: Auto refresh () ()	IE5235 Embedded features Current value 27.50 0 0 20.0 17 2 1 0 0 0 0	Scheduler Initial value CLU221000454- CLU221000454- 20.0 17 2 Normal V] Type: [Thermo] >×250002161 PAN >×191000012 DOU	istat	Unit Rang -1,0,1 0,1 0,1,2,-	e ^
Object properties Name: Thermostat Id: CLU221000454->TH Id: CLU221000454->TH Id: CLU221000454->TH Id: CLU221000454->TH Id: Control Source Control OutputType PointValue HolidayModeValue Hysteresis State ControlDirection Mode Quarto refresh (Quarto control Cont	IE5235 Embedded features Current value 27.50 0 0 20.0 17 2 1 0 0 0 0 0 17 2 1 0 0 0 0 0 17 2 1 0 0 0 0 0 0 0 0 0 0 0 0 0	Scheduler Initial value CLU221000454- CLU221000454- 20.0 17 2 2 Normal V	Type: Thermo >x250002161 PAN >x191000012 DOL	istat	Unit Rang -1,0,1 0,1 0,1,2;	e

 $Configuration \ of \ the \ On Therm \texttt{1} ModeButton Click \ event:$

0						×
Object	properties					
Name:	x250002161_PANEL_PAGE1		Device type:			~
Tune:	DANIEL PAGE		Serial number:	250002161		1
C C	ontrol	Events 🎓 Embedded features	Statistics			
Event n	ame	Assigned co	ommands			Add command
OnPage	eOpen					
OnPage	eClose					÷
OnDrav	w					
OnThe	rm1ModeButtonClick	CLU221000454->script_change	_mode()	Assign comma	and 💥	÷
OnThe	rm2ModeButtonClick					4
OnThe	rm3ModeButtonClick					÷
OnThe	rm4ModeButtonClick					÷
					ОК	Cancel

Script *script_change_mode()* that changes the operating mode of the thermostat from heating to cooling and vice versa:





```
if(CLU221000454->Thermostat->ControlDirection==0) then
CLU221000454->script_cooling()
else
CLU221000454->script_heating()
end
```

Script *script_heating()* for changing the ControlDirection feature to a value responsible for heating, as well as changing the icon and selecting heating / cooling:





Script *script_cooling()* for changing the ControlDirection feature to the value responsible for cooling, as well as changing the icon and selecting heating / cooling:

CLU221000454->Termostat->SetControlDirection(1) CLU221000454->x20100007_DOUT2->SwitchOff(1) CLU221000454->x250002161_PANEL_PAGE1->SetObject_1_CustomIcon("cold")



C. Predefined button behavior

Button	Short / long press	Description of behavior
Top left	Short press (click)	Generating an OnThermXModeButtonClick event, where X is the number of the thermostat on the page
Top left	Long press (hold)	Change of the thermostat status: Off/On. In addition, it allows to switch from Manual mode to Auto mode
Top right	Short press (click)	Go to the next thermostat on the page if there is more than one thermostat on the page Go to the next page if there is only one thermostat on the page
Top right	Long press (hold)	Go to the next page
Lower left	Short press (click)	Reduction of the set temperature ($\ensuremath{\texttt{PointValue}}$) by 0.1 ° C, as well as changing the operating mode from Auto to Manual
Lower left	Long press (hold)	Reducition of the set temperature (PointValue) - as long as the button is held down, as well as changing the operating mode from Auto to Manual
Lower right	Short press (click)	Increasement of the set temperature (${\tt PointValue}$) by 0.1 ° C, as well as changing the operating mode from Auto to Manual
Lower right	Long press (hold)	Increasement of the set temperature (<pre>PointValue</pre>) - as long as the button is held down, as well as changing the operating mode from Auto to Manual

XIII. GATE ALARM Module

Note!

The described functionality and integration with the mentioned alarm control panels is available for **GRENTON GATE ALARM, DIN, Eth (INT-221-E-01)** with **firmware 1.1.20-2219 or higher!**

1. General information

The module is used to integrate the Grenton Smart Home system with 3rd party alarm systems. Grenton GATE ALARM allows integration with Satel and Jablotron alarm systems.

2. Module configuration

Note!

Before starting any work with the GATE Alarm module, it is necessary to update the interface database!

Time setting via NTP server

The GATE Alarm module allows you to set the time using the NTP server, taking into account the time zone and changing the time (winter / summer). The time is taken automatically from the NTP server (*pool.ntp.org*).

There are three features for configuration:

- UseNTP determines whether GATE uses NTP,
- NTPTimeout waiting time for a response from the NTP server,
- TimeZone setting the GATE time zone 22 zones are available.

Note!

Getting the time from an NTP server requires that GATE be in a network that has an internet connection.

Note!

When the UseCloud feature is set to true, the UseNTP feature is automatically set to true.

3. Integration with the Satel alarm control panel

3.1. General information

Integration of the Grenton system with the Satel alarm control panel is possible via the ETHM-1 module. You can create virtual objects of the type: *SatelZone, SatelInput, SatelOutput*. It is also possible to use the integration coding offered by Satel.

Note!

There is no limit to the number of objects for the created virtual objects - the limitation is the device memory, which is influenced by e.g. level of logic expansion on the module. The **Satel** object is an exception - only one can be created.

The configuration structure is as follows:



Virtual objects:

- **Satel** allows you to perform a configuration that allows you to integrate the system with the Grenton alarm panel;
- **SatelZone** allows to create a zone to which access will be possible after entering the password of one of the users or the password of the administrator himself;
- **Satelinput** gives the ability to monitor the status of the selected input;
- **SatelOutput** allows you to monitor and set the status of the selected output after entering the user or administrator password.

3.2. Configuration for the Satel system

Note!

An interface database update is required before any work with the GATE Alarm module!

Note!

All required information can be found in the ETHM module configuration - using the keypad connected to the Satel panel or using a dedicated DLOADX program.

Before starting the configuration you should have information about the Satel central unit and the ETHM-1 module:

- IP address of the ETHM module (Satel) available in the Satel configuration (DLOADX -> Data -> Structure and Hardware -> Equipment tab -> Keypads -> ETHM-1 -> section Server IP address);
- ETHM integration port available in the Satel configuration (DLOADX -> Data -> Structure and Hardware -> Equipment tab -> Keypads -> ETHM-1 -> Integration section);

Integration		
✓ Integration	Encrypted integration	Port: 7094 🚖

- Administrator / users password the default password in the Satel configuration for the administrator is: 1111 (DLOADX -> Users -> Users);
- Integration on the side of the ETHM module must be enabled (DLOADX -> Data -> Structure and Hardware -> Equipment tab -> Keypads -> ETHM-1 -> Integration section);

Integration		
Integration	Encrypted integration	Port: 7094 🚖

 In case when encryption - Integration Encoding is enabled, you should also know the encryption key (DLOADX -> Data -> Structure and Hardware -> Equipment tab -> Keypads -> ETHM-1 -> Integration section);

Integration			
✓ Integration	Encrypted integration	Port:	7094 🚖

 The coding key can be found in the Satel configuration (DLOADX -> Data -> Structure and Hardware -> Equipment tab -> Keypads) or read it using the keypad (Keypad -> Service mode -> Options -> Key integration).

V Structure	-	×
System Hardware		
System Hardware INTEGRA mainboard Structure (Second Second Seco	LCD keypad bus Bus short-circuit Triggers alarm in partition: Tamper alarm Always loud signaling Identification ETHM modules PING test Address to test:	
	Period: 0 🚖 sec. Tries no. before trouble: 0 🛨 Integration encryption key: 22222	
Add Delete Print		

3.3. Virtual Objects

A. Satel

To perform the correct configuration of the GATE Alarm module it is necessary to:

• Create a virtual object Satel:

0		×
Select object		
Choose CLU:		
CLU_12345678		
Object:		
Satel		~
	ОК	Cancel

- Go to configuration tab Embedded features and enter:
 - IP IP address of the ETHM module (Satel);
 - Port ETHM integration port;
 - AdminPassword administrator password;
 - **EncryptionEnabled** enable encoding set if the integration on the ETHM module is marked with *Integration Encoding*;
 - Encryption Key integration key (for attached encoding):

0				×
CLU_12345678->Satel1				
			-	
Name: Satel1		Туре:	Satel	
Control 🏠 Events 😭 Emi	pedded features			
Feature name	Current value	Initial value	Unit	Range
State	0		bool	0,1
LastError	0			
IP	192.168.1.10	192.168.1.10	string	
Port	7094	7094		[1-65535]
AdminPassword	1111	1111	string	
UpdateTime	1000	1000		[1000-20000]
EncryptionEnabled	true	True 🗸	bool	0,1
EncryptionKey	22222	22222	string	
Muto refresh ♥				3 Refresh
				OK Cancel

Information on where to find the information you need can be found in the second section - <u>look up</u> <u>XIII.1.2</u>.

• Send configuration and verify connection - tab *Embedded features*, 'State' feature (1 - correctly connected to the control panel, 0 - no connection):

0				×
CLU_12345678->Satel1				
Name: Satel1		Тур	e: Satel	
Control Networks	Embedded features			
Feature name	Current value	Initial value	Unit	Range
State	1		bool	0,1
LastError	0			

B. Zone

The GATE Alarm module allows you to add a virtual object *Zone*:

• Create an object *SatelZone*:

0	×
Select object	
Choose CLU:	
CLU_12345678	
Object:	
SatelZone	~
ок	Cancel

• Define the No. (number of the selected zone) and enter the user's password:

0					×
CLU_12345678->Zone1					
Name: Zone1		7	Type: SatelZone		
Control 💦 Events 😭 Err	nbedded features	_			
Feature name	Current value	Initial value		Unit	Range
Value	0			-	
Nr	1	1		number	[1-32]
UserPassword	22222	22222		number	
🗹 Auto refresh \\ 🖉					(3) Refresh
					OK Cancel

- Send configuration and verify the connection tab *Built-in features*, the Value feature (-1 means no connection to the control panel, the others mean a correct connection and the state of the zone is returned: 0 or 1);
- Arm / disarm the zone the ArmZone and DisarmZone methods.

C. Output

GATE Alarm allows adding a virtual object *Output*:

• Create an SatelOutput object:

0		×
Select object		
Choose CLU:		
CLU_12345678		
Object:		
SatelOutput		~
	ОК	Cancel

• Define the No. (number of the selected output on the Satel board) and enter the user's password:

Ο				×
CLU_12345678->Output1				
Name: Dutput1		Type: SatelOut	put	
Control 💽 Events 😭 E	mbedded features			
Feature name	Current value	Initial value	Unit	Range
Value	0		bool	[0-1]
Nr	1	1	number	[1-256]
UserPassword	1234	1234	number	[0-99999]
🗹 Auto refresh 🧿				Refresh OK Cancel

- Send configuration and verify the connection tab *Embedded features*, the value feature (-1 means no connection to the central unit, the others mean a correct connection and the status of the zone is returned: 0 or 1);
- Switch on / off the output methods SwitchOn and SwitchOff.

GATE Alarm allows adding a virtual object *Input*:

• Create an *SatelInput* object:

0		×
Select object		
Choose CLU:		
CLU_12345678		\sim
Object:		
SatelInput		~
	ОК	Cancel

• Define No. (number of the selected input on the Satel):

0				×
CLU_12345678->Inp	out1			
Name: nput1		Туре	: SatelInput	
Control Notes	s 👚 Embedded features			
Feature name	Current value	Initial value	Unit	Range
Value	0		bool	0,1
Nr	1	1	number	[1-256]
Muto refresh 🥨				3 Refresh
				OK Cancel

• Send configuration and verify the connection - tab *Embedded features*, the value feature (-1 means no connection to the control panel, the others mean a correct connection and the status of the zone is returned: 0 or 1).

4. Integration with the Jablotron control panel

4.1. General information

Note!

The described functionality and integration with the mentioned alarm control panels is available for **GRENTON GATE ALARM, DIN, Eth (INT-221-E-01)** with **firmware 1.1.20-2219 or higher!**

Note!

Integration of the Grenton system concerns the control panels:

- Jablotron JA-100K,
- Jablotron JA-101K,
- Jablotron JA-103K,
- Jablotron JA-107K.

Integration of the Grenton system with the Jablotron control panel is possible via the JA-121T module. It is possible to create virtual objects of the type: *JablotronSection, JablotronOutput, JablotronDevice.*

Note!

There is no limit to the number of objects for the created virtual objects - the limitation is the device memory, which is influenced by e.g. level of logic expansion on the module. The **Jablotron** object is an exception - only one can be created.

The configuration structure looks like this:



- Jablotron allows configuration to be made to integrate the system with the Jablotron alarm control panel;
- **JablotronSection** allows creating a zone to which access will be possible after entering the password of one of the users or the password of the administrator himself;
- **JablotronDevice** gives the ability to monitor the status of the selected input / device;
- JablotronOutput allows to monitor and set the status of the selected output after entering the user or administrator password.

4.2. Configuration for the Jablotron system

Note!

An interface database update is required before any work with the GATE Alarm module!

For integration between the Gate module and the Jablotron control panel, the **JA-121T** module is used. The JA-121T module must be connected to the Jablotron control panel system and added to the system list. Information on adding / using individual Jablotron modules can be found in the manufacturer's documentation.

Communication between the Gate and the JA-121T module takes place via the RS485 interface - connection between the screw terminals A (D +), B (D-) on both modules.

Note! The JA-121T module must be enabled in the Passive mode.

Terminal console	~	Device basic mode
Disabled	~	TMP terminal
Enrolling	~	Motherboard button
0		Period [min]after which a fault is triggered
every 10 s	~	Connection confirmed

Note!

Information on the remaining settings and their application can be found in the documentation of the JA-121T module on the manufacturer's website.

After connecting the modules and correctly configuring the JA-121T device, you can proceed to creating and configuring virtual objects of the GATE Alarm module.

4.3. Virtual objects

A. Jablotron

In order to properly configure the GATE Alarm module, you must create the virtual **Jablotron** object:

Calast abject	
Select object	
Choose CLU:	
CLU12345678	
Object:	
Jablotron	~

Then go to configuration - Built-in Features tab and enter

- AdminCode administrator access code;
- UpdatePeriod Control panel status update period;

0					×
Object	properties				
Name: Id:	Jablotron_Main CLU12345678->JABS	9758	Туре:	Jablotron	
Feature		Current value	Initial value	Unit	Range
Admin(Code	1*1234	1*1234	string	
Update	Period	1000	1000		[1000-25000]
⊡ Auto	o refresh 🧑				Refresh
					OK Cancel

B. Section / zone

GATE Alarm allows you to add a virtual **JablotronSection** object:

Creating the *JablotronSection* object:

-	,
Select object	
Choose CLU:	
CLU12345678	
Object:	
JablotronSection	

Then go to configuration - Built-in Features tab and enter:

• Nr - parameter defining to which section the object refers;

• UpdatePeriod - The access code will use the admin code for '*';

0				×
Object properties				
Name: JablotronSecti	on1	Type: Jabl	otronSection	
Id: CLU12345678-	> JAB5764 vents 🛞 Embedded features			
Feature name	Current value	Initial value	Unit	Range
State	1.00		number	
Nr	1	1	number	[1-15]
AccessCode	*	*	string	
🗹 Auto refresh 🧔				O Refresh
				OK Cancel

C. Output

GATE Alarm allows you to add a virtual object **JablotronOutput**

Creating the *JablotronOutput* object:

	×
Select object	
Choose CLU:	
CLU12345678	
Object:	
JablotronOutput	~

Then go to configuration - Built-in Features tab and enter:

- Nr parameter defining to which output the object relates;
- AccessCode The access code will use the admin code for '*';

0					×
Object	t properties				
Name: Id:	JablotronOutput1 CLU12345678->JAB2 Control	944	Туре:	JablotronOutput	
Feature	e name	Current value	Initial value	Unit	Range
State		0		bool	[0-1]
Nr		1	1	number	[1-32]
Access	sCode	*	*	string	
<mark>⊿ Aut</mark>	o refresh 🧔				Refresh
					OK Cancel

D. Input / Device

GATE Alarm allows you to add a virtual object **JablotronDevice**

Creating the *JablotronDevice* object:

•	×
Select object	
Choose CLU:	
CLU12345678	
Object:	
JablotronDevice	~

Then go to configuration - Built-in Features tab and enter:

• **Nr** - parameter defining to which input the object refers;

0							×
Object	t properties						
Name: Id:	JablotronDevice1 CLU12345678->JAB Control	3045		Туре: Ја	ablotronDevice		
Feature	e name	Current value	Initial value		Unit	Range	
Value		0			bool	0,1	
Nr		1	1		number	[1-256]	
Aut	o refresh 🔮						Refresh
						ОК	Cancel

5. Virtual object - Timer

Timers are virtual objects created as part of a given GATE module. Timers can be used wherever it is necessary to call a method after a specified time or also to call it cyclically.

The timer can operate in two modes:

• Countdown

After starting, it counts down the set time. At the end of the countdown, the method associated with the OnTimer event is started, and the timer stops and does not count down until the next start using the Start method.

• Interval

Cyclic timer - after the start, it starts counting down the set time. After its expiry, the timer calls the method associated with the OnTimer event, and the timer itself again begins to count down the set time. The situation is repeated until it is stopped by the Stop method.

6. Restoring factory settings - Hard Reset

Running the Hard Reset function on the GATE Alarm module causes:

- Removal of the saved configuration;
- Formatting the flash memory partition;
- Removal of all created LUA objects;
- Loss of communication between OM / HM and Gate module.

In order to restore the factory settings with the *Hard Reset* function, perform the following steps (in accordance with the given order):

• Disconnect power from the Gate module

- Press and hold the *Reset* button on the module (the button is located under the bottom end of the module)
- Connect the power supply to the Gate module
- Keep the *Reset* button pressed for at least 10 seconds during the reset the green LED will be on steady. Correct completion of the reset will be confirmed by three blinks of the green LED
- Release the *Reset* button after 10 seconds
- Wait about 60 seconds until the LED module green and red blink alternately (*Emergency* mode).

After the procedure the module will be cleared, but the module will no longer be visible (no response to *Keep-Alive*) in the project from the Object Manager level. To restore the module again, perform CLU Discovery and then send the configuration.

7. Configuration parameters

Note!

The described functionality and integration with these alarm control panels is available for **GRENTON GATE ALARM, DIN, Eth (INT-221-E-01)** with **firmware 1.1.20-2219 or higher!**

A. GATE

FEATURES

Name	Description
Uptime	Operation time of the device since the last reset (in seconds)
ClientReportInterval	Reporting period about changes in features
Date	Current date
Time	Current time (hh: mm: ss)
Local Time	Current local time stamp
Time Zone	Time zone
UnixTime	Current Unix time stamp
FirmwareVersion	Gate software version
UseCloud	Specifies whether GATE connects to the cloud
CloudConnection	Specifies the status of the GATE connection to the cloud
NTPTimeout	Waiting time for response from NTP server
UseNTP	Specifies whether GATE uses NTP
PrimaryDNS	Preferred DNS server
SecondaryDNS	Alternate DNS server

METHODS

Name	Description
SetDateTime	Sets the date and time
StartConsole	Launches the Lua console
StartConsoleOnReboot	Starts the Lua console on restart
SetClientReportInterval	Sets the reporting period for feature changes
SetPrimaryDNS	Sets the PrimaryDNS feature
SetSecondaryDNS	Sets the SecondaryDNS feature

EVENTS

Name	Description
OnInit	An event dispatched when the device initializes

B. Satel

FEATURES

Name	Description
State	Central status: 0 - no connection to the control panel, 1 - connected to the control panel
LastError	Last ETHM module error code: 0 - ok, 1 - incorrect password
IP	ETHM module IP address (Satel)
Port	ETHM module port (Satel)
AdminPassword	Satel administrator password
UpdateTime	Control panel status update period
EncryptionEnabled	Encryption status (<i>true</i> - enabled, <i>false</i> - disabled)
EncryptionKey	Satel encryption key
Value	Returns the current status: 1 - for armed zone, violated input, output enabled; 0 - for disarmed zone, normal input, output disabled; -1 - no information about the state due to no connection
Nr	Parameter defining the zone, input or output to which the object refers
UserPassword	User password (will use the administrator password for)

METHODS

Name	Description
SetIP	Sets the IP address of the ETHM module (Satel)
SetPort	Sets the ETHM module port (Satel)
SetAdminPassword	Sets an administrator password
SetEncryptionEnabled	Enables / disables encryption
SetEncryptionKey	Sets the Satel encryption key
ArmZone	Arms the zone
DisarmZone	Disarms the zone
SetNr	Sets a parameter that defines which zone, zone or output the object refers to
SetUserPassword	Sets the user password (will use the administrator password for)
SwitchOn	Turns on the output
SwitchOff	Turns off the output

EVENTS

Name	Description
OnConnected	Event triggered after establishing connection with the control panel
OnDisconnected	Event triggered when the connection with the control panel is lost
OnError	Event triggered after a control panel error (LastError)
OnChange	Event dispatched when the status changes (regardless of the value)
OnSwitchOn	Event triggered when the output is switched on or the zone is violated
OnSwitchOff	Event triggered when the output is turned off or the input is set to normal
OnArm	An event dispatched when the zone is armed
OnDisarm	An event dispatched when the area was disarmed

C. Jablotron

FEATURES

Name	Description
AdminCode	Administrator access code
State	JablotronSection: READY - normal operation mode, ARMED_PART - partial arming of the section, ARMED - armed section, SERVICE - service mode included , BLOCKED - section blocked, OFF - section switched off JablotronOutput: Output switched on Output switched off
Nr	Parameter defining which input / output / section the object refers to
AccessCode	The access code will use the admin code for \star
Value	Returns the current status: 1 - for armed zone, violated input, output enabled; 0 - for disarmed zone, normal input, output disabled; -1 - no status information due to lack of connection

METHODS

Name	Description
SetAccessCode	Sets the access code, uses 'admin' for $*$
Arm	Arms the zone / section
ArmPartially	Partially arm section (Jablotron)
Disarm	Disarms the zone / section
SetNr	Sets a parameter that defines which zone, zone or output the object refers to
SwitchOn	Turns on the output
SwitchOff	Turns off the output

EVENTS

Name	Description
OnStateChange	Event dispatched when the status changes (regardless of the value)
OnArm	An event dispatched when the section is armed
OnDisarm	An event dispatched when the section is disarmed
OnChange	Event dispatched when the status changes (regardless of the value)
OnSwitchOn	Event triggered when the output is switched on or the zone is violated
OnSwitchOff	Event triggered when the output is turned off or the input is set to normal
OnArm	An event dispatched when the section is armed
OnDisarm	An event dispatched when the section is disarmed

D. Timer

FEATURES

Name	Description
Time	Counted time (in ms)
Mode	Timer mode: o - countdown, 1 - cyclical (interval)
State	Current timer status: • - stopped, • - counting

METHODS

Name	Description
SetTime	Sets the timer time (in ms)
SetMode	Sets the operating mode: o - count down (countdown), 1 - cyclical (interval)
Start	Starts the timer
Stop	Stops the timer

EVENTS

Name	Description
OnTimer	An event triggered when the timer is counted
OnStart	An event triggered when the timer is started
OnStop	An event triggered when the timer is stopped

XIV. GATE MODBUS Module

Note!

The described functionality and integration is available for **GRENTON GATE MODBUS MASTER**, **DIN, Eth (INT-201-E-01)** with **firmware 1.1.0-2034C or higher**!

1. General information

The GATE Modbus module enables the integration of the Grenton system with all devices supporting the MODBUS RTU standard.

Note!

There is no limit to the number of objects for the created virtual objects - the limitation is the device memory, which is influenced by e.g. level of logic expansion on the module.

Before starting the configuration one must obtain information about the selected Slave device supporting the MODBUS RTU standard - it will be necessary to know, among other things: device address, type and address of registers, as well as transmission speed.

2. Module configuration

Note!

Before starting any work with the GATE Modbus module, it is necessary to update the interface database!

2.1. Time setting via NTP server

The GATE Modbus module allows you to set the time using the NTP server, taking into account the time zone and changing the time (winter / summer). The time is taken automatically from the NTP server (*pool.ntp.org*).

There are three features for configuration:

- UseNTP determines whether GATE uses NTP,
- NTPTimeout waiting time for a response from the NTP server,
- TimeZone setting the GATE time zone 22 zones are available.

```
Note!
```

Getting the time from an NTP server requires that GATE be in a network that has an internet connection.

```
Note!
```

When the UseCloud feature is set to true, the UseNTP feature is automatically set to true.

2.2. Modbus virtual object configuration

To perform the correct configuration of the GATE Modbus module it is necessary to:
• Create a virtual object *Modbus* and name it:

0		×
Select object		
Choose CLU:		
CLU501000199		\sim
Object:		
Modbus		~
	ОК	Cancel

- Go to *Embedded features* tab and enter:
 - **DeviceAddress** address of the slave device;
 - **AccessRights** operating mode (*Read* reading the value from the register; *ReadWrite* allows saving the value to the set register);
 - **RegisterAddress** address of the supported registry;
 - TransmissionSpeed transmission speed;
 - Refreshinterval the period of polling the slave device register by GATE Modbus;
 - **ResponseTimeout** Slave device time for response (if it is exceeded, ErrorCode = -2 is returned);
 - **Divisor** divisor (for ValueType = Number / Float);
 - parameters appropriate for the selected slave device type look up 3.1.
 - **StopBits** sets the number of stop bits:
 - 0 1 stop bit
 - 1 1.5 stop bits
 - 2 2 stop bits
- **Parity** sets the parity check:
 - 0 None
 - 1 Odd
 - 2 Even

Ο						×
Object proper	ties					
Name: Modbu	s1			Type: Modbus		
Id: CLU501	000199->MOD2256]		
🔗 Control	≽ Events 余 Embe	edded features				
Feature name	Current value	Initial value	Unit		Range	
DeviceAddress	111	111	number		[0-255]	
AccessRights	0	Read \sim	-		0,1	
RegisterAddres	ss 141	141	number		[0-65535]	
TransmisionSpe	eed 9600	9600 ~	bps		1200,2400,4800,9600,19200	0,38400,57600,115200
ValueType	1	Number 🗸			1,2,3	
BitPosition	0	0	number		[0-15]	
BitCount	16	16	number		[1-32]	
RefreshInterva	il 1000	1000	number		[0-65535]	
ResponseTime	out 100	100	number		[10-65535]	
Divisor	1	1	number		[1-65535]	
Endianess	3	SwapWords \sim	-		0,1,2,3	
RegisterType	2	HoldingRegisters $\ \lor$	-		0,1,2,3	
ErrorCode	0		number			
Value	639	0	number			
RegisterValue	639		number			
StopBits	0	1 ~	-		0,1,2	
Parity	0	None 🗸	-		0,1,2	
🗹 Auto refresh	ວ					(3) Refresh
					ОК	Cancel

_

Send configuration and verify connection - tab *Embedded features*, feature *ErrorCode* = 0 (correct read / write):

0							×
Object	properties						
Name:	Modbus1				Type: Modbus		
ld:	CLU5010001	99->MOD2256]		
					-		
cې 🕐 د	ontrol 🏠	Events 🌪 Embedd	ed features				
Feature	name	Current value	Initial value	Unit		Range	
Device	Address	111	111	number		[0-255]	
Access	Rights	0	Read ~	-		0,1	
Registe	erAddress	141	141	number		[0-65535]	
Transm	isionSpeed	9600	9600 ~	bps		1200,2400,4800,9600,19200,38400,57600,1152	.00
ValueTy	ype	1	Number 🗸			1,2,3	
BitPosi	tion	0	0	number		[0-15]	
BitCou	nt	16	16	number		[1-32]	
Refres	hinterval	1000	1000	number		[0-65535]	
Respor	seTimeout	100	100	number		[10-65535]	
Divisor		1	1	number		[1-65535]	
Endiane	ess	3	SwapWords ~	-		0,1,2,3	
Registe	erType	2	HoldingRegisters $$	-		0,1,2,3	
ErrorCo	ode	0		number			
Value		639	0	number			
Registe	erValue	639		number			
StopBi	ts	0	1 ~	-		0,1,2	
Parity		0	None 🗸	-		0,1,2	
Auto	o refresh 🔰					③ Refr	resh
						OK Cancel	

2.3. ModbusValue virtual object configuration

Note!

The described virtual object is available for **GRENTON GATE MODBUS MASTER**, **DIN**, **Eth (INT-201-E-01)** with **firmware 1.1.10-2140 or higher!**

To use the ModbusValue virtual object:

• Create a virtual object *ModbusValue* and name it:

0		×
Select object		
Choose CLU:		
CLU501000759		\sim
Object:		
ModbusValue		~
	ОК	Cancel

- Go to *Embedded features* tab and enter:
 - TransmissionSpeed transmission speed;
 - **Parity** sets the parity check:
 - 0 None
 - 1 Odd
 - 2 Even
 - StopBits sets the number of stop bits:
 - 0 1 stop bit
 - 1 1.5 stop bits
 - 2 2 stop bits
 - DeviceAddress address of the slave device;
 - ResponseTimeout response timeout in 25ms steps;
 - RefreshPeriod minimum refresh period in 5ms steps 0 means automatic refresh is disabled;
 - RegisterAddress address of the supported registry;
 - RegisterType type of the register set:
 - 0 Discrete outputs / coils
 - 1 Discrete inputs
 - 2 Holding registers
 - 3 Input registers
 - Divisor value divisor (scale);
 - InitialValueAccess initial Value access method:
 - 0 The initial Value and SetValue parameter are sent to the device;

1 - The initial Value and SetValue parameter are ignored the method of first accessing to the value;

Note!

Entering a value in value field when setting the InitialValueAccess = 1 feature causes saving the value (sending the appropriate frame) after sending the configuration to the CLU. If the value of the InitialValueAccess = 0 feature, the entered value in value field is ignored.

• parameters appropriate for the selected slave device type - <u>look up 3.2.</u>

0					×
Object propert	ies				
Name: Modbus	Val			Type: ModbusValue	
Id: CLU5010	00759->MOD1881]	
Control	Events 😭 Er	nbedded features			
Feature name	Current value	Initial value	Unit		Range
TransmisionSpec	er 9600	9600 ~	bps		1200,2400,4800,9600,19200,38400,57600,1152
Parity	0	None 🗸			0,1,2
StopBits	0	1 ~	bits		0,1,2
DeviceAddress	111	111			[0-255]
ResponseTimeo	u [.] 1000	1000	ms		[25-6400]
RefreshPeriod	1000	1000	ms		[0-300000]
RegisterAddress	122	122]		[0-65535]
RegisterType	2	Holding registers	~		0,1,2,3
InputOutputCou	un 0	1			[1-64]
DataType	0	Unsigned Integer $$			0,1,2
DataWidth	16	16 ~	bits		16,32,48,64
Endianness	0	Big Endian 🗸 🗸			0,1,2,3
BitFieldWidth	16	0	bits		[0-64]
BitFieldPosition	0	0	bit		[0-63]
Divisor	1	1			
InitialValueAcce	s s 0	Read 🗸			0,1
Value	192	0]		
RawValue	49152				
IsValueValid	true		bool		
ErrorCode	0				
Auto refresh	ର				Refresh
					OK Cancel

• Send configuration and verify connection - tab *Embedded features*, feature **ErrorCode** = 0 (correct read / write):

0								×
Object	t propertie	25						
Name:	ModbusVa	al			Type:	ModbusValue		
ld:	CLU50100	0759->MOD1881						
0000	ontrol	Events 💓 Em	nbedded features					
Feature	e name	Current value	Initial value	Unit			Range	
Transm	nisionSpeed	9600	9600 ~	bps			1200,2400,4800,9600,19200,3	8400,57600,1152
Parity		0	None 🗸				0,1,2	
StopBi	ts	0	1 ~	bits			0,1,2	
Device	Address	111	111				[0-255]	
Respo	nseTimeou	1000	1000	ms			[25-6400]	
Refres	hPeriod	1000	1000	ms			[0-300000]	
Regist	erAddress	122	122]			[0-65535]	
Regist	erType	2	Holding registers	v			0,1,2,3	
InputO	utputCour	0	1				[1-64]	
DataTy	pe	0	Unsigned Integer \sim				0,1,2	
DataW	ïdth	16	16 🗸	bits			16,32,48,64	
Endian	ness	0	Big Endian \sim				0,1,2,3	
BitFiel	dWidth	16	0	bits			[0-64]	
BitFiel	dPosition	0	0	bit			[0-63]	
Divisor	г	1	1					
InitialV	/alueAccess	0	Read ~				0,1	
Value		192	0					
RawVa	lue	49152						
IsValue	Valid	true		bool				
ErrorCo	ode	0						
<mark>∕ Aut</mark>	o refresh 存	2						Refresh
							ОК	Cancel

3. Parameters of registers

Depending on the type of Slave register, the next available parameters must be set accordingly.

3.1. Virtual object Modbus

A. 16-bit registers

Г

Reading 16-bit holding registers (Read Holding Registers, FunctionCode = 03):

- AccessRights : *Read;*
- ValueType : Number;
- BitPosition : default value;
- BitCount:16;
- Endianness : default value;

• RegisterType : HoldingRegisters.

0					×
Object properties	;				
Name: Modbus1				Type: Modbus	
Id: CLU501000	199->MOD2256]	
Control 📎	Events 😭 Embed	ded features			
Feature name	Current value	Initial value	Unit		Range
DeviceAddress	1	1	number		[0-255]
AccessRights	0	Read \sim	-		0,1
RegisterAddress	1	1	number		[0-65535]
TransmisionSpeed	115200	115200 ~	bps		1200,2400,4800,9600,19200,38400,57600,115200
ValueType	1	Number ~			1,2,3
BitPosition	0	0	number		[0-15]
BitCount	16	16	number		[1-32]
RefreshInterval	5000	5000	number		[0-65535]
ResponseTimeout	1000	1000	number		[10-65535]
Divisor	1	1	number		[1-65535]
Endianess	0	NoSwap \checkmark] -		0,1,2,3
RegisterType	2	HoldingRegisters $\ \lor$	-		0,1,2,3
ErrorCode	0		number		
Value	55555	0	number		
RegisterValue	55555		number		
StopBits	0	1 ~	-		0,1,2
Parity	0	None 🗸	-		0,1,2
🗹 Auto refresh 🔰)				Refresh
					OK Cancel

Reading 16-bit input registers (Read Input Registers, FunctionCode = 04):

- AccessRights : *Read*;
- ValueType : Number,
- BitPosition : default value;
- BitCount:16;
- Endianness : default value;
- RegisterType: InputRegisters.

Records of 16-bit holding registers (Preset / Write Single Holding Register, FunctionCode = 06):

- AccessRights : *ReadWrite*;
- ValueType : Number;
- BitPosition : default value;
- BitCount:16;
- Endianness : default value;
- RegisterType : HoldingRegisters.

B. Fields in 16-bit registers

Reading of bit fields in a 16-bit remembering register (Read Holding Registers, FunctionCode = 03):

- AccessRights : Read;
- ValueType : Bit;
- BitPosition: 0-15 (position of the first interesting bit);
- BitCount : 1-16 (number of bits read sequentially);
- Endianness : default value;
- RegisterType : HoldingRegisters.

0					×			
Object properties								
Name: Modbus1				Type: Modbus				
Id: CLU5010001	99->MOD2256							
Control 🍾	Events 😭 Embede	ded features						
Feature name	Current value	Initial value	Unit		Range			
DeviceAddress	2	2	number		[0-255]			
AccessRights	0	Read \checkmark	-		0,1			
RegisterAddress	1	1	number		[0-65535]			
TransmisionSpeed	115200	115200 🗸	bps		1200,2400,4800,9600,19200,38400,57600,115200			
ValueType	3	Bit ~			1,2,3			
BitPosition	2	2	number		[0-15]			
BitCount	1	1	number		[1-32]			
RefreshInterval	10000	10000	number		[0-65535]			
ResponseTimeout	1000	1000	number		[10-65535]			
Divisor	1	1	number		[1-65535]			
Endianess	0	NoSwap ~] -		0,1,2,3			
RegisterType	2	HoldingRegisters $~\sim~$	-		0,1,2,3			
ErrorCode	0		number					
Value	1	0	number					
RegisterValue	4		number					
StopBits	0	1 ~	-		0,1,2			
Parity	0	None 🗸	-		0,1,2			
🗹 Auto refresh 🔰					3 Refresh			
					OK Cancel			

Reading of bit fields in a 16-bit input register (Read Input Registers, FunctionCode = 04):

- AccessRights : Read;
- ValueType : Bit;
- BitPosition : 0-15 (position of the first interesting bit);
- BitCount : 1-16 (number of bits read sequentially);
- Endianness : default value;
- RegisterType: InputRegisters.

Writing bit fields in a 16-bit reminder register (Preset / Write Single Holding Register ,
FunctionCode = 06):

• AccessRights : *ReadWrite*;

- ValueType : Bit,
- BitPosition : 0-15 (position of the first interesting bit);
- BitCount: 1-16 (number of bits read sequentially);
- Endianness : default value;
- RegisterType : *HoldingRegisters*.

C. 32-bit integer values of registers

Reading 32-bit integer values of the retaining register (Read Holding Registers, FunctionCode = 03):

- AccessRights : read;
- ValueType : number;
- BitPosition : default value;
- BitCount: 32;
- Endianness: in the case of 32-bit registers, Slaves usually require reordering of bytes and words *SwapBytesAndWords*; detailed information should be found in the slave device card;
- RegisterType : HoldingRegisters.

0						×
Object prop	oerties					
Name: Mode	bus1				Type: Modbus	
Id: CLU5	50100019	9->MOD2256				
Control		Events 😭 Embed	ded features			
Feature name	2	Current value	Initial value	Unit		Range
DeviceAddre	255	3	3	number		[0-255]
AccessRights	5	0	Read \sim	-		0,1
RegisterAddr	ress	1	1	number		[0-65535]
TransmisionS	peed	115200	115200 ~	bps		1200,2400,4800,9600,19200,38400,57600,115200
ValueType		1	Number ~			1,2,3
BitPosition		0	0	number		[0-15]
BitCount		32	32	number		[1-32]
RefreshInter	rval	10000	10000	number		[0-65535]
ResponseTim	neout	1000	1000	number		[10-65535]
Divisor		1	1	number		[1-65535]
Endianess		1	SwapBytesAndWords $$	-		0,1,2,3
RegisterType	•	2	HoldingRegisters \checkmark	-		0,1,2,3
ErrorCode		0		number		
Value		20000000	0	number		
RegisterValue	e	20000000		number		
StopBits		0	1 ~	-		0,1,2
Parity		0	None \vee	-		0,1,2
Auto refres	sh 🗊					3 Refresh
						OK Cancel

Reading 32-bit integer values of the input register (Read Input Registers, FunctionCode = 04):

• AccessRights : *Read*;

- ValueType: Number,
- BitPosition : default value;
- BitCount: 32;
- Endianness: in the case of 32-bit registers, Slaves usually require reordering of bytes and words *SwapBytesAndWords*; detailed information should be found in the slave device card;
- RegisterType: InputRegisters.

Writing of 32-bit integers in the remembering register (Preset / Write Multiple Holding Registers, FunctionCode = 16):

- AccessRights : *ReadWrite*;
- ValueType : Number;
- BitPosition : default value;
- BitCount: 32;
- Endianness : in the case of 32-bit registers, Slaves usually require reordering of bytes and words *SwapBytesAndWords*; detailed information should be found in the slave device card;
- RegisterType : HoldingRegisters.

D. 32-bit floating point values of registers

Reading of the 32-bit floating point values of the remembering register (Read Holding Registers, FunctionCode = 03):

- AccessRights : *Read*;
- ValueType : *Float*;
- BitPosition : default value;
- BitCount: 32;
- Endianness: in the case of 32-bit registers, Slaves usually require reordering of bytes and words *SwapBytesAndWords*; detailed information should be found in the slave device card;
- RegisterType : *HoldingRegisters*.

0									×
Object	properties								
Name:	Modbus1				Type: Mo	ibus			
ld:	CLU50100019	99->MOD2256]				
🔗 Ca	ontrol 💽	Events 😭 Embedo	ded features						
Feature	name	Current value	Initial value	Unit			Range		
Device/	Address	4	4	number			[0-255]		
Access	Rights	0	Read ~	-			0,1		
Registe	rAddress	1	1	number			[0-65535]		
Transmi	isionSpeed	115200	115200 ~	bps			1200,2400,	,4800,9600,19200,38400,57	600,115200
ValueTy	pe	2	Float ~				1,2,3		
BitPosit	tion	0	0	number			[0-15]		
BitCour	nt	32	32	number			[1-32]		
Refresh	nInterval	10000	10000	number			[0-65535]		
Respon	seTimeout	1000	1000	number			[10-65535]]	
Divisor		1	1	number			[1-65535]		
Endiane	255	1	SwapBytesAndWords $\ \!$	-			0,1,2,3		
Registe	erType	2	HoldingRegisters $\ \lor$	-			0,1,2,3		
ErrorCo	de	0		number					
Value		100.00	0	number					
Registe	rValue	1120403453		number					
StopBit	s	0	1 ~	-			0,1,2		
Parity		0	None 🗸	-			0,1,2		
🗹 Auto	refresh 🗊								Refresh
								ОК	Cancel

Reading of 32-bit floating point register values (Read Input Registers, FunctionCode = 04):

- AccessRights : Read;
- ValueType : Float;
- BitPosition : default value;
- BitCount: 32;
- Endianness: in the case of 32-bit registers, slaves usually require reordering of bytes and words *SwapBytesAndWords*; detailed information should be found in the slave device card;
- RegisterType: InputRegisters.

Record of 32-bit floating point values in the reminder register (Preset / Write Multiple Holding Registers, FunctionCode = 16):

- AccessRights : ReadWrite;
- ValueType : *Float*;
- BitPosition : default value;
- BitCount: 32;
- Endianness: in the case of 32-bit registers, slaves usually require reordering of bytes and words *SwapBytesAndWords*; detailed information should be found in the slave device card;
- RegisterType : HoldingRegisters.

E. Discrete inputs / outputs

Readout of discrete outputs / bit inputs (Read Coil Status , FunctionCode = 01):

- AccessRights : *Read*;
- ValueType : Number,
- BitPosition : default value;
- BitCount: 1-32;
- Endianness : default value;
- RegisterType : *BinaryInputs*.

0	0 ×							
Object properties								
Name: Modbus1				Type: Modbus				
Id: CLU5010001	99->MOD2256							
Control 🔖	Events 😭 Embed	ded features						
Feature name	Current value	Initial value	Unit		Range			
DeviceAddress	5	5	number		[0-255]			
AccessRights	0	Read ~	-		0,1			
RegisterAddress	1	1	number		[0-65535]			
TransmisionSpeed	115200	115200 ~	bps		1200,2400,4800,9600,19200,38400,57600,115200			
ValueType	1	Number ~			1,2,3			
BitPosition	0	0	number		[0-15]			
BitCount	8	8	number		[1-32]			
RefreshInterval	10000	10000	number		[0-65535]			
ResponseTimeout	1000	1000	number		[10-65535]			
Divisor	1	1	number		[1-65535]			
Endianess	0	NoSwap ~] -		0,1,2,3			
RegisterType	0	BitOutputsInputs ~	-		0,1,2,3			
ErrorCode	0		number					
Value	30	0	number					
RegisterValue	30		number					
StopBits	0	1 ~	-		0,1,2			
Parity	0	None 🗸	-		0,1,2			
🗹 Auto refresh 🔰					3 Refresh			
					OK Cancel			

Readout of discrete binary inputs (Read Discrete Inputs , FunctionCode = 02):

- AccessRights : *Read*;
- ValueType : Number;
- BitPosition : default value;
- BitCount : 1-32;
- Endianness: default value;
- RegisterType : *BinaryInputs*.

Writing of discrete outputs / bit inputs (Force / Write Single Coil, FunctionCode = 05; Force / Write Multiple Coils, FunctionCode = 15):

• AccessRights : *ReadWrite*;

- ValueType: Number,
- BitPosition : default value;
- BitCount: 1-32;
- Endianness : default value;
- RegisterType : *BitOutputsInputs*.

3.2. Virtual object ModbusValue

Note!

The described virtual object is available for **GRENTON GATE MODBUS MASTER**, **DIN**, **Eth (INT-201-E-01)** with **firmware 1.1.10-2140 or higher**!

A. 16-bit integer values of registers

Reading 16-bit holding registers (Read Holding Registers, FunctionCode = 03):

- RegisterType : Holding Registers;
- DataType : Unsigned Integer;
- DataWidth:16;
- Endianness : default value;
- BitFieldWidth : default value;
- BitFieldPosition : default value.

0					×
Object properties					
Name: ModbusVal				Type: ModbusValue	
Id: CLU5010007	759->MOD6348]	
🔗 Control 🍾	Events 😭 Embed	lded features			
Feature name	Current value	Initial value	Unit		Range
TransmisionSpeed	19200	19200 ~	bps		1200,2400,4800,9600,19200,38400,57600,115200
Parity	0	None 🗸			0,1,2
StopBits	0	1 ~	bits		0,1,2
DeviceAddress	1	1			[0-255]
ResponseTimeout	1000	1000	ms		[25-6400]
RefreshPeriod	1000	1000	ms		[0-300000]
RegisterAddress	1	1			[0-65535]
RegisterType	2	Holding registers $~~$ $~~$			0,1,2,3
InputOutputCount	0	8			[1-64]
DataType	0	Unsigned Integer $$			0,1,2
DataWidth	16	16 🗸	bits		16,32,48,64
Endianness	0	Big Endian \sim			0,1,2,3
BitFieldWidth	16	0	bits		[0-64]
BitFieldPosition	0	0	bit		[0-63]
Divisor	1	1			
InitialValueAccess	0	Read 🗸			0,1
Value	100	0			
RawValue	25600				
IsValueValid	true		bool		
ErrorCode	0				
🗹 Auto refresh 🔰					Refresh
					OK Cancel

Reading 16-bit input registers (Read Input Registers, FunctionCode = 04):

- RegisterType : Input Registers;
- DataType : Unsigned Integer;
- DataWidth: 16;
- Endianness : default value;
- BitFieldWidth : default value;
- BitFieldPosition : default value.

Records of 16-bit holding registers (Preset / Write Single Holding Register), FunctionCode = 06):

- RegisterType: Holding Registers;
- DataType : Unsigned Integer;
- DataWidth:16;
- Endianness : default value;
- BitFieldWidth : default value;
- BitFieldPosition : default value.

B. Fields in 16-bit registers

Reading of bit fields in a 16-bit remembering register (Read Holding Registers, FunctionCode = 03):

- RegisterType : Holding Registers;
- DataType : Unsigned Integer;
- DataWidth :16;
- Endianness : default value;
- BitFieldWidth: 0 16 (number of bits read sequentially);
- BitFieldPosition : 0-15 (position of the first interesting bit).

Note!

The range of the BitFieldWidth feature depends on the setting of the value of the DataWidth feature.

For DataWidth = 16, the range of the BitFieldWidth feature is [0-16].

At the moment of setting the BitFieldWidth feature to 0 and sending the configuration, the feature takes the maximum value for the currently set value of the DataWidth feature.

Note!

The range of the BitFieldPosition feature depends on the setting of the value of the DataWidth feature.

For DataWidth = 16, the range of the BitFieldWidth feature is [0-15].

Note!

```
The BitFieldWidth and BitFieldPosition features are dependent on the DataWidth feature according to the condition: BitFieldWidth + BitFieldPosition <= DataWidth
```

For example:

```
When setting DataWidth and BitFieldWidth = 16 and BitFieldPositon = 15, the BitFieldWidth will automatically be set to = 1.
```

For BitFieldWidth = 0, the BitFieldPosition attribute is always 0.

0					×
Object properties	i -				
Name: ModbusVal				Type: ModbusValue	
Id: CLU5010007	759->MOD6348				
🔗 Control 🍾	Events 😭 Embed	lded features			
Feature name	Current value	Initial value	Unit		Range
TransmisionSpeed	19200	19200 ~	bps		1200,2400,4800,9600,19200,38400,57600,115200
Parity	0	None 🗸			0,1,2
StopBits	0	1 ~	bits		0,1,2
DeviceAddress	1	1			[0-255]
ResponseTimeout	1000	1000	ms		[25-6400]
RefreshPeriod	1000	1000	ms		[0-300000]
RegisterAddress	1	1			[0-65535]
RegisterType	2	Holding registers $~~$ $~~$			0,1,2,3
InputOutputCount	0	8			[1-64]
DataType	0	Unsigned Integer \sim			0,1,2
DataWidth	16	16 ~	bits		16,32,48,64
Endianness	0	Big Endian \sim			0,1,2,3
BitFieldWidth	1	1	bits		[0-64]
BitFieldPosition	2	2	bit		[0-63]
Divisor	1	1			
InitialValueAccess	0	Read \checkmark			0,1
Value	1	0			
RawValue	25600				
IsValueValid	true		bool		
ErrorCode	0				
🗹 Auto refresh 🌔	1				Refresh
					OK Cancel

Reading of bit fields in a 16-bit input register (Read Input Registers, FunctionCode = 04):

- RegisterType : Input Registers;
- DataType : Unsigned Integer;
- DataWidth: 16;
- Endianness : default value;
- BitFieldWidth: 0 16 (number of bits read sequentially);
- BitFieldPosition : 0-15 (position of the first interesting bit).

Writing bit fields in a 16-bit reminder register (Preset / Write Single Holding Register, FunctionCode = 06):

- RegisterType : Holding Registers;
- DataType : Unsigned Integer;
- DataWidth:16;
- Endianness : default value;
- BitFieldWidth: 0 16 (number of bits read sequentially);

• BitFieldPosition : 0-15 (position of the first interesting bit).

C. 32-bit integer values of registers

Reading 32-bit integer values of the retaining register (Read Holding Registers), FunctionCode = 03):

- RegisterType : Holding Registers;
- DataType : Unsigned Integer;
- DataWidth: 32;
- Endianness : Big Endian;
- BitFieldWidth : default value;
- BitFieldPosition : default value.

0						×
Object properti	es					
Name: Modbus	/al			Type: Mod	busValue	
Id: CLU50100	00759->MOD6348					
Control	Events 😭 En	nbedded features				
Feature name	Current value	Initial value	Unit			Range
TransmisionSpee	x 19200	19200 ~	bps			1200,2400,4800,9600,19200,38400,57600,1152
Parity	0	None 🗸				0,1,2
StopBits	0	1 ~	bits			0,1,2
DeviceAddress	1	1				[0-255]
ResponseTimeou	r 1000	1000	ms			[25-6400]
RefreshPeriod	1000	1000	ms			[0-300000]
RegisterAddress	1	1				[0-65535]
RegisterType	2	Holding registers				0,1,2,3
InputOutputCou	n 0	1				[1-64]
DataType	0	Unsigned Integer \sim				0,1,2
DataWidth	32	32 🗸	bits			16,32,48,64
Endianness	0	Big Endian 🗸 🗸				0,1,2,3
BitFieldWidth	32	0	bits			[0-64]
BitFieldPosition	0	0	bit			[0-63]
Divisor	1	1				
InitialValueAcces	s 0	Read ~				0,1
Value	500000	0				
RawValue	547424000					
IsValueValid	true		bool			
ErrorCode	0					
🗹 Auto refresh 🧯	3					Refresh
						OK Cancel

Reading 32-bit integer values of the input register (Read Input Registers, FunctionCode = 04):

- RegisterType : Input Registers;
- DataType : Unsigned Integer;
- DataWidth: 32;
- Endianness : Big Endian;
- BitFieldWidth : default value;
- BitFieldPosition : default value.

Writing of 32-bit integers in the remembering register (Preset / Write Multiple Holding Registers, FunctionCode = 16):

- RegisterType : Holding Registers;
- DataType : Unsigned Integer;
- DataWidth : 32;
- Endianness : Big Endian;
- BitFieldWidth : default value;
- BitFieldPosition : default value.

D. Fields in 32-bit registers

Reading of bit fields in a 32-bit remembering register (Read Holding Registers, FunctionCode = 03):

- RegisterType : Holding Registers;
- DataType : Unsigned Integer;
- DataWidth: 32;
- Endianness : default value;
- BitFieldWidth: 0 32 (number of bits read sequentially);
- BitFieldPosition : 0-31 (position of the first interesting bit).

Note!

The range of the BitFieldWidth feature depends on the setting of the value of the DataWidth feature.

For DataWidth = 32, the range of the BitFieldWidth feature is [0-32].

At the moment of setting the BitFieldWidth feature to 0 and sending the configuration, the feature takes the maximum value for the currently set value of the DataWidth feature.

Note!

The range of the BitFieldPosition feature depends on the setting of the value of the DataWidth feature.

For DataWidth = 32, the range of the BitFieldPosition feature is [0-31].

Note!

The BitFieldWidth and BitFieldPosition features are dependent on the DataWidth feature according to the condition: BitFieldWidth + BitFieldPosition <= DataWidth

For example:

When setting DataWidth and BitFieldWidth = 32 and BitFieldPositon = 15, the BitFieldWidth will automatically be set to = 17.

For BitFieldWidth = 0, the BitFieldPosition attribute is always 0.

0						×
Object propertie	es					
Name: ModbusV	al			Туре:	ModbusValue	
Id: CLU50100	0759->MOD6348					
Control	Events 😭 Em	nbedded features				
Feature name	Current value	Initial value	Unit			Range
TransmisionSpee	19200	19200 ~	bps			1200,2400,4800,9600,19200,38400,57600,1152
Parity	0	None 🗸				0,1,2
StopBits	0	1 ~	bits			0,1,2
DeviceAddress	1	1				[0-255]
ResponseTimeou	1000	1000	ms			[25-6400]
RefreshPeriod	1000	1000	ms			[0-300000]
RegisterAddress	1	1				[0-65535]
RegisterType	2	Holding registers	,			0,1,2,3
InputOutputCour	10	1				[1-64]
DataType	0	Unsigned Integer \sim				0,1,2
DataWidth	32	32 ~	bits			16,32,48,64
Endianness	0	Big Endian 🗸 🗸				0,1,2,3
BitFieldWidth	17	0	bits			[0-64]
BitFieldPosition	15	0	bit			[0-63]
Divisor	1	1				
InitialValueAcces	• 0	Read ~				0,1
Value	15	0				
RawValue	547424000					
IsValueValid	true		bool			
ErrorCode	0					
🗹 Auto refresh 【	ف					Refresh
						OK Cancel

Reading of bit fields in a 32-bit input register (Read Input Registers, FunctionCode = 04):

- RegisterType : Input Registers;
- DataType : Unsigned Integer;
- DataWidth: 32;
- Endianness : default value;
- BitFieldWidth: 0 32 (number of bits read sequentially);
- BitFieldPosition : 0-31 (position of the first interesting bit).

Writing bit fields in a 32-bit reminder register (Preset / Write Single Holding Register ,
FunctionCode = 06):

- RegisterType : Holding Registers;
- DataType : Unsigned Integer;
- DataWidth: 32;

- Endianness : default value;
- BitFieldWidth: 0 32 (number of bits read sequentially);
- BitFieldPosition: 0 31 (position of the first interesting bit).

E. 32-bit floating point values of registers

Reading of the 32-bit floating point values of the remembering register (Read Holding Registers, FunctionCode = 03):

- RegisterType : Holding Registers;
- DataType: Floating-point;
- DataWidth: 32;

• Endianness : Big Endian.

<pre>For DataType = Floating-point, the BitFieldWidth, BitFieldPosition and Divisor features are inactive and are always 0!</pre>								
Object properties	O Object properties							
Name: ModbusVal Id: CLU50100075	59->MOD6348			Type: ModbusVa	lue			
🔗 Control 🏹 I	Events 🌪 Embedde	d features						
Feature name	Current value	Initial value	Unit			Range		
TransmisionSpeed	19200	19200 ~	bps			1200,2400,4800,9	600,19200,3	38400, 57600, 115200
Parity	0	None 🗸				0,1,2		
StopBits	0	1 ~	bits			0,1,2		
DeviceAddress	1	1]			[0-255]		
ResponseTimeout	1000	1000	ms			[25-6400]		
RefreshPeriod	1000	1000	ms			[0-300000]		
RegisterAddress	1	1				[0-65535]		
RegisterType	2	Input registers $~~$				0,1,2,3		
InputOutputCount	0	8				[1-64]		
DataType	2	Floating-point \sim				0,1,2		
DataWidth	32	32 ~	bits			16,32,48,64		
Endianness	0	Big Endian 🗸 🗸				0,1,2,3		
BitFieldWidth	0	0	bits			[0-64]		
BitFieldPosition	0	0	bit			[0-63]		
Divisor	0	1						
InitialValueAccess	0	Read 🗸				0,1		
Value	100.0	0						
RawValue	51266							
IsValueValid	true		bool					
ErrorCode	0							
🗹 Auto refresh 🔌								Refresh
							ОК	Cancel

Reading of 32-bit floating point register values (Read Input Registers, FunctionCode = 04):

• RegisterType : Input Registers;

- DataType : Floating-point;
- DataWidth: 32;
- Endianness : Big Endian.

Record of 32-bit floating point values in the reminder register (Preset / Write Multiple Holding Registers, FunctionCode = 16):

- RegisterType: Holding Registers;
- DataType : Floating-point;
- DataWidth: 32;
- Endianness : Big Endian.

F. 64-bit integer values of registers

Reading 64-bit holding registers (Read Holding Registers, FunctionCode = 03):

- RegisterType : Holding Registers;
- DataType : Unsigned Integer;
- DataWidth:64;
- Endianness : default value;
- BitFieldWidth : default value;
- BitFieldPosition : default value.

0						×
Object properties						
Name: ModbusVal				Type: ModbusValue		
Id: CLU501000759-	>MOD6348					
Control 🔖 Eve	ents 😭 Embedded fea	atures				
Feature name	Current value	Initial value	Unit		Range	
TransmisionSpeed	19200	19200 ~	bps		1200,2400,4800	,9600, 19200, 38400, 57600, 115200
Parity	0	None 🗸			0,1,2	
StopBits	0	1 ~	bits		0,1,2	
DeviceAddress	1	1			[0-255]	
ResponseTimeout	1000	1000	ms		[25-6400]	
RefreshPeriod	1000	1000	ms		[0-300000]	
RegisterAddress	1	1			[0-65535]	
RegisterType	2	Holding registers \sim			0,1,2,3	
InputOutputCount	0	8			[1-64]	
DataType	0	Unsigned Integer \sim			0,1,2	
DataWidth	64	64 ~	bits		16,32,48,64	
Endianness	0	Big Endian 🗸 🗸			0,1,2,3	
BitFieldWidth	64	0	bits		[0-64]	
BitFieldPosition	0	0	bit		[0-63]	
Divisor	1	1				
InitialValueAccess	0	Read ~			0,1	
Value	100000000000000000000000000000000000000	0				
RawValue	255675177617290					
IsValueValid	true		bool			
ErrorCode	0					
🗹 Auto refresh 义						(3) Refresh
						OK Cancel

Reading 64-bit input registers (Read Input Registers , FunctionCode = 04):

- RegisterType : Input Registers;
- DataType : Unsigned Integer;
- DataWidth:64;
- Endianness : default value;
- BitFieldWidth : default value;
- BitFieldPosition : default value.

Records of 64-bit holding registers (Preset / Write Single Holding Register, FunctionCode = 06):

- RegisterType : Holding Registers;
- DataType : Unsigned Integer;
- DataWidth:64;
- Endianness : default value;
- BitFieldWidth : default value;
- BitFieldPosition : default value.

G. Fields in 64-bit registers

Reading of bit fields in a 64-bit remembering register (Read Holding Registers, FunctionCode = 03):

- RegisterType : Holding Registers;
- DataType : Unsigned Integer;
- DataWidth:64;
- Endianness : default value;
- BitFieldWidth: 0 64 (number of bits read sequentially);
- BitFieldPosition: 0-63 (position of the first interesting bit).

Note!

The range of the BitFieldWidth feature depends on the setting of the value of the DataWidth feature.

For DataWidth = 64, the range of the BitFieldWidth feature is [0-64].

At the moment of setting the <code>BitFieldWidth</code> feature to 0 and sending the configuration, the feature takes the maximum value for the currently set value of the <code>DataWidth</code> feature.

Note!

The range of the BitFieldPosition feature depends on the setting of the value of the DataWidth feature.

For DataWidth = 64, the range of the BitFieldPosition feature is [0-63].

Note!

```
The BitFieldWidth and BitFieldPosition features are dependent on the DataWidth feature according to the condition: BitFieldWidth + BitFieldPosition <= DataWidth
```

For example:

```
When setting DataWidth and BitFieldWidth = 60 and BitFieldPositon = 15, the BitFieldWidth will automatically be set to = 49.
```

For BitFieldWidth = 0, the BitFieldPosition attribute is always 0.

0						×
Object proper	ties					
Name: Modbu	sVal			Type:	ModbusValue	
ld: CLU501	000759->MOD6348]		
Control	≽ Events 🙀 En	nbedded features				
Feature name	Current value	Initial value	Unit			Range
TransmisionSpe	er 19200	19200 ~	bps			1200,2400,4800,9600,19200,38400,57600,1152
Parity	0	None 🗸				0,1,2
StopBits	0	1 ~	bits			0,1,2
DeviceAddress	1	1				[0-255]
ResponseTime	our 1000	1000	ms			[25-6400]
RefreshPeriod	1000	1000	ms			[0-300000]
RegisterAddres	is 1	1				[0-65535]
RegisterType	2	Holding registers				0,1,2,3
InputOutputCo	un 0	1				[1-64]
DataType	0	Unsigned Integer $$				0,1,2
DataWidth	64	64 ~	bits			16,32,48,64
Endianness	0	Big Endian \sim				0,1,2,3
BitFieldWidth	8	8	bits			[0-64]
BitFieldPosition	16	16	bit			[0-63]
Divisor	1	1				
InitialValueAcco	ess 0	Read 🗸				0,1
Value	232	0				
RawValue	255675177617290					
IsValueValid	true		bool			
ErrorCode	0					
Auto refresh	?					(C) Refresh
						OK Cancel

Reading of bit fields in a 64-bit input register (Read Input Registers, FunctionCode = 04):

- RegisterType : Input Registers;
- DataType : Unsigned Integer;
- DataWidth:64;
- Endianness : default value;
- BitFieldWidth: 0 64 (number of bits read sequentially);
- BitFieldPosition: 0-63 (position of the first interesting bit).

Writing bit fields in a 64-bit reminder register (Preset / Write Single Holding Register ,
FunctionCode = 06):

- RegisterType : Holding Registers;
- DataType : Unsigned Integer;

- DataWidth:64;
- Endianness : default value;
- BitFieldWidth: 0 64 (number of bits read sequentially);
- BitFieldPosition : 0-63 (position of the first interesting bit).

H. 64-bit floating point values of registers

Reading of the 64-bit floating point values of the remembering register (Read Holding Registers), FunctionCode = 03):

- RegisterType: Holding Registers;
- DataType : Floating-point;
- DataWidth:64;
- Endianness : Big Endian.

For	DataType	= Floating-point, the	BitFieldWidth,	BitFieldPosition	and	Divisor
feat	ures are ina	ctive and are always O!				

0					×
Object properti	es				
Name: ModbusV	/al			Type: ModbusValue	
Id: CLU50100	00759->MOD6348]	
Control	Events 😭 En	nbedded features			
Feature name	Current value	Initial value	Unit		Range
TransmisionSpee	x 19200	19200 ~	bps		1200,2400,4800,9600,19200,38400,57600,1152
Parity	0	None 🗸			0,1,2
StopBits	0	1 ~	bits		0,1,2
DeviceAddress	1	1]		[0-255]
ResponseTimeou	r 1000	1000	ms		[25-6400]
RefreshPeriod	1000	1000	ms		[0-300000]
RegisterAddress	1	1			[0-65535]
RegisterType	2	Holding registers	~		0,1,2,3
InputOutputCou	n 0	1]		[1-64]
DataType	2	Floating-point \vee			0,1,2
DataWidth	64	64 ~	bits		16,32,48,64
Endianness	0	Big Endian 🗸 🗸			0,1,2,3
BitFieldWidth	0	0	bits		[0-64]
BitFieldPosition	0	0	bit		[0-63]
Divisor	0	1			
InitialValueAcces	8 O	Read 🗸			0,1
Value	100.25	0			
RawValue	1071424				
IsValueValid	true		bool		
ErrorCode	0				
Auto refresh	Q				Refresh
					OK Cancel

Reading of 64-bit floating point register values (Read Input Registers, FunctionCode = 04):

- RegisterType : Input Registers;
- DataType : Floating-point;
- DataWidth:64;
- Endianness : Big Endian.

Record of 64-bit floating point values in the reminder register (Preset / Write Multiple Holding Registers , FunctionCode = 16):

- RegisterType : Holding Registers;
- DataType : Floating-point;
- DataWidth:64;
- Endianness: Big Endian.

J. Discrete inputs / outputs

Readout of discrete outputs / bit inputs (Read Coil Status, FunctionCode = 01):

- RegisterType : Discrete outputs / coils;
- InputOutputCount: 1-64 (number of discrete inputs / outputs subject to read / write operations);

For the Discrete outputs / coils and Discrete Inputs register types the features DataType, DataWidth, Endianness, BitFieldWidth, BitFieldPosition, Divisor are inactive and always have the value O!

0					×
Object properties					
Name: ModbusVal				Type: ModbusValue	
Id: CLU501000759	9->MOD6348]	
Control 🔖 E	vents 😭 Embedded fe	eatures			
Feature name	Current value	Initial value	Unit		Range
TransmisionSpeed	19200	19200 ~	bps		1200,2400,4800,9600,19200,38400,57600,115200
Parity	0	None ~			0,1,2
StopBits	0	1 ~	bits		0,1,2
DeviceAddress	1	1			[0-255]
ResponseTimeout	1000	1000	ms		[25-6400]
RefreshPeriod	1000	1000	ms		[0-300000]
RegisterAddress	1	1			[0-65535]
RegisterType	0	Discrete outputs / coils $\ \lor$			0, 1, 2, 3
InputOutputCount	8	8			[1-64]
DataType	0	Unsigned Integer $$			0,1,2
DataWidth	0	32 🗸	bits		16,32,48,64
Endianness	0	Big Endian 🗸 🗸			0,1,2,3
BitFieldWidth	0	0	bits		[0-64]
BitFieldPosition	0	0	bit		[0-63]
Divisor	0	1			
InitialValueAccess	0	Read \checkmark			0,1
Value	15	0			
RawValue	15				
IsValueValid	true		bool		
ErrorCode	0				
🗹 Auto refresh 칭					(3) Refresh
					OK Cancel

Readout of discrete binary inputs (Read Discrete Inputs , FunctionCode = 02):

- RegisterType : Discrete Inputs;
- InputOutputCount: 1-64 (number of discrete inputs / outputs subject to read / write operations);
- InitialValueAccess: Read.

Writing of discrete outputs / bit inputs (Force / Write Single Coil, FunctionCode = 05; Force / Write Multiple Coils, FunctionCode = 15):

• RegisterType : Discrete outputs / coils;

- InputOutputCount: 1-64 (number of discrete inputs / outputs subject to read / write operations);
- InitialValueAccess: Write.

4. Restoring factory settings - *Hard Reset*

Running the *Hard Reset* function on the GATE Modbus module causes:

- Removal of the saved configuration;
- Formatting the flash memory partition;
- Removal of all created LUA objects;
- Loss of communication between OM / HM and Gate module.

In order to restore the factory settings with the *Hard Reset* function, perform the following steps (in accordance with the given order):

- Disconnect power from the Gate module;
- Press and hold the *Reset* button on the module (the button is located under the bottom end of the module);
- Connect the power supply to the Gate module;
- Keep the *Reset* button pressed for at least 10 seconds during the reset the green LED will be on steady. Correct completion of the reset will be confirmed by three blinks of the green LED.
- Release the *Reset* button after 10 seconds
- Wait about 60 seconds until the LED module green and red blink alternately (*Emergency* mode)

After the procedure the module will be cleared, but the module will no longer be visible (no response to *Keep-Alive*) in the project from the Object Manager level. To restore the module again, perform CLU Discovery and then send the configuration.

5. Configuration parameters

Note!

The described functionality and integration is available for **GRENTON GATE MODBUS MASTER**, **DIN, Eth (INT-201-E-01)** with **firmware 1.1.0-2034C or higher!**

A. GATE

FEATURES

Name	Description
Uptime	Operation time of the device since the last reset (in seconds)
FirmwareVersion	Gate software version
PrimaryDNS	Preferred DNS server
SecondaryDNS	Alternate DNS server
ClientReportInterval	Reporting period about changes in features
Date	Current date
Time	Current time (hh: mm: ss)
Local Time	Current local time stamp
Time Zone	Time zone
UnixTime	Current Unix time stamp
UseCloud	Specifies whether GATE connects to the cloud
CloudConnection	Specifies the status of the GATE connection to the cloud
NTPTimeout	Waiting time for response from NTP server
UseNTP	Specifies whether GATE uses NTP

METHODS

Name	Description
StartConsole	Launches the Lua console
StartConsoleOnReboot	Starts the Lua console on restart
SetClientReportInterval	Sets the reporting period for feature changes
SetPrimaryDNS	Sets the PrimaryDNS feature
SetSecondaryDNS	Sets the SecondaryDNS feature
SetDateTime	Sets the date and time

EVENTS

Name	Description
OnInit	An event dispatched when the device initializes

B. Object Modbus

FEATURES

Name	Description
DeviceAddress	Address of the Slave Modbus device
AccessRights	Operating mode: <i>read</i> (0 - reading); <i>read / write</i> (1 - read / write)
RegisterAddress	Address of the supported registry
TransmissionSpeed	Transmission speed
ValueType	Variable type (1 - number, 2 - float ; 3 - bit)
BitPosition	Bit position (for bit access to 16-bit registers)
BitCount	The number of registry bits to read
RefreshInterval	Refresh time
ResponseTimeout	Response time
Divisor	Divisor
Endianness	The order of bytes and words[^XIV.3_1]: No swap (0 - no exchange); Swap bytes and words (1) - change the order of bytes and words); Swap bytes (2) - changing the order of bytes within each word); Swap words (3) - exchange of words
RegisterType	Modbus register type: 0 - bit inputs / outputs, 1 - binary inputs, 2 - holding registers, 3 - input registers
ErrorCode	 Error code: -3 - frame error; -2 - exceeding the response time; -1 - out of date value of the last read out register; 0 - correct reading / writing of the register; 1 - not allowed function; 2 - not allowed register number; 3 - unauthorized data value; 4 - damage to the connected device; 5 - positive confirmation; 6 - no readiness / message removed; 7 - negative confirmation; 8 - memory parity error
Value	Read / write value

Name	Description
RegisterValue	Unscaled register value
StopBits	Stop bits: 0 - 1 stop bit 1 - 1.5 stop bits 2 - 2 stop bits
Parity	Parity bit: 0 - None 1 - Odd 2 - Even
[^XIV.3_1]: Within the meaning of the instructions, the word consists of two bytes.	

METHODS

Name	Description		
SetDeviceAddress	Sets the address of the Slave Modbus device		
SetAccessRights	Sets the operating mode: reading or reading / writing		
SetRegisterAddress	Sets the address of the supported registry		
SetTransmissionSpeed	Sets the transmission speed		
SetValueType	Sets the type of variable		
SetBitPosition	Sets the position of the bit		
SetBitCount	Sets the number of registry bits to read		
SetRefreshInterval	Sets the refresh time		
SetReadWriteTimeout	Sets the response timeout		
SetDivisor	Sets the divisor		
SetEndianness	Sets the byte order type		
SetRegisterType	Sets the Modbus register type		
SetValue	Sets the read / write value		
SetStopBits	Sets the number of stop bits		
SetParity	Sets the parity check		

EVENTS

Name	Description
OnChange	Event occuring when the state changes (regardless of the value)
OnError	Event occuring when the slave device reports an error

C. Object ModbusValue

Note!

The described virtual object is available for **GRENTON GATE MODBUS MASTER**, **DIN**, **Eth (INT-201-E-01)** with **firmware 1.1.10-2140 or higher!**

FEATURES

Name	Description			
TransmissionSpeed	Transmission Speed			
Parity	Parity bit: 0 - None 1 - Odd 2 - Even			
StopBits	Stop bits: 0 - 1 stop bit 1 - 1.5 stop bits 2 - 2 stop bits			
DeviceAddress	Address of the Slave Modbus device			
ResponseTimeout	Response timeout in 25ms steps			
RefreshPeriod	Minimum refresh period in 5ms steps. 0 means automatic refresh is disabled			
RegisterAddress	Address of the supported registry			
RegisterType	Modbus register type (O - Discrete outputs / coils, 1 - Discrete inputs, 2 - Holding registers, 3 - Input registers)			
InputOutputCount	Specifies the number of discrete I / O that can be read / written			
DataType	 Value type: • An integer, a fixed-point number or a bit field without a sign bit • An integer, a fixed-point number or a bit field with a sign bit • A floating-point number 			
DataWidth	Data width (from 1 to 4 16-bit registers)			
Endianness	 Endianness: O - Big Endian order of words; Big Endian order of bytes in a word 1 - Little Endian order of words; Big Endian order of bytes in a word 2 - Big Endian order of words; Little Endian order of bytes in a word 3 - Little Endian order of words; Little Endian order of bytes in a word 			
BitFieldWidth	The number of bits in the bit field. The sum of BitFieldWidth and Position should be <= DataWidth; 0 means no bit field (full data width = DataWidth)			
BitFieldPosition	The position of the youngest bit of the bit field. The sum of BitFieldWidth and Position should be < = DataWidth.			
Divisor	Divisor			
InitialValueAccess	Initial Value access method: O - The initial Value is read from the device 1 - The initial Value is written to the device			
Value	Returns the last value read and specifies the initial value			

Name	Description		
RawValue	Unscaled register value		
IsValueValid	Determines whether a value matches the state of an object		
ErrorCode	Error code: 1 - illegal function 2 - illegal register number 3 - illegal data value 4 - connected device damaged 5 - positive confirmation 6 - no readiness, message removed 7 - negative confirmation 8 - memory parity error 0 - correct read/write register -2 - exceeding the response timeout -3 - frame error (error decoding the frame) -4 - unexpected reply size -5 - unexpected reply code		

METHODS

Name	Description		
SetTransmissionSpeed	Sets transmission speed		
SetParity	Sets parity check type		
SetStopBits	Sets stop bit count		
SetDeviceAddress	Sets Modbus slave device address		
SetResponseTimeout	Sets the response timeout in 25ms steps		
SetRefreshPeriod	Sets the refresh period in 5ms steps. O means automatic refresh is disabled		
SetRegisterAddress	Sets the supported register address		
SetRegisterType	Sets the modbus register type		
SetInputOutputCount	Sets the number of discrete IOs to be read / written		
SetDataType	Sets the variable type		
SetDataWidth	Sets the data width		
SetEndianness	Sets byte order		
SetBitFieldWidth	Sets the bit field width. 0 means no bit field (full DataWidth)		
SetBitFieldPosition	Sets the starting position of the bit field		
SetDivisor	Sets the divisor		
ReadValue	Starts reading from the device. Waits for completion in case of no OnValueRead		
WriteValue	Writes a new value to the device		

EVENTS

Name	Description
OnValueChange	Event occuring after the feature value has been changed or the object parameters have changed
OnValueRead	Event occuring after the read started by the ReadValue method completes
OnError	Event occuring when the slave device reports an error

XV. GATE HTTP Module

Note!

The described functionality and integration is available for **GRENTON GATE HTTP**, **DIN**, **Eth (INT-211-E-01)** with **firmware 1.3.1-2243 or higher!**

1. General information

The GATE HTTP module is a device enabling system integration with external sites using the HTTP protocol, as well as a wide group of devices and external / third-party systems - eg AV devices with HTTP interfaces.

Note!

There is no limit to the number of objects for the created virtual objects - the limitation is the device memory, which is influenced by e.g. level of logic expansion on the module.

2. Module configuration

Note!

Before starting any work with the GATE HTTP module, the interface database update is required!

Time setting via NTP server

The GATE HTTP module allows you to set the time using the NTP server, taking into account the time zone and changing the time (winter / summer). The time is taken automatically from the NTP server (*pool.ntp.org*).

There are three features for configuration:

- UseNTP determines whether GATE uses NTP,
- NTPTimeout waiting time for a response from the NTP server,
- TimeZone setting the GATE time zone 22 zones are available.

Note!

Getting the time from an NTP server requires that GATE be in a network that has an internet connection.

Note!

```
When the UseCloud feature is set to true, the UseNTP feature is automatically set to true.
```

2.1. Virtual objects

2.1.1. HTTP Request

For the HttpRequest, for example, the weather service <u>http://api.openweathermap.org</u> is used

According to the example on the openweathermap.org site, the API query looks like this:

API call: <u>http://api.openweathermap.org/data/2.5/weather?q=London&APPID={APIKEY}</u>

HttpRequest - is used to send HTTP (GET, POST) requests to a specific host. Standard content types are supported, e.g. JSON, XML.

To use the Gate module to receive queries, create an HttpRequest virtual object

•	×
Select object	
Choose CLU:	//////
CLU52000998	
Object:	
HttpRequest	~

• The following parameters must be set in the HttpRequest object:

0				×
Object properties				
Name: http_request		Type: HttpRequ	iest	
Id: CLU52000998->HTT2107				
Control News Events	nbedded features			
Feature name	Current value	Initial value	Unit	Range
Host	http://api.openweathermap.org:8/	http://api.openweathermap.org	string	
Path	/data/2.5/weather	/data/2.5/weather	string	
QueryStringParams	-	q=London,uk&APPID=2345678	string	
Method	GET	GET	string	
Timeout	5	5	s	[1-255]
RequestType	2	JSON ~	-	0, 1, 2, 3, 4, 5
ResponseType	2	JSON ~	2	0,1,2,3,4,5
RequestHeaders	.	\z	string	
RequestBody	-	\z	string	
ResponseBody	-	\z	string	
StatusCode	0		-	
🗹 Auto refresh 🧔				Refresh
				OK Cancel

- Host: api.openweathermap.org
- Path: /data/2.5/weather
- QueryStringParams: q=London&APPID={APIKEY}
- Method: GET
- RequestType: JSON
- ResponseType: JSON

Note!

The Gate Http object enables TLS encrypted connections. If such a connection is required, the 'https: //' field should be entered in the Host field at the beginning of the value. If the value is not specified, the standard http connection will be used.

Note!

Gate Http does not support all TLS encrypted connections, so we recommend testing the connection with the given host.

Note!

During the https connection, the time to establish a connection and receive a response from the host is longer than for the http connection, therefore the value for the Timeout parameter should be increased.

Note!

Features described as not settable are features containing answers. The initial values of these features should be left unchanged. All operations on these variables should be performed on scripts (and local variables).

After sending the configuration and calling the SendRequest Method, the StatusCode takes the value 200 (OK).

The received response to the query is kept in ResponseBody. For the JSON ResponseType set, the response is parsed from json to the table. The feature value is invisible from the OM level. The response values should be drawn from the response from the script.

2.1.2. Downloading certain values from the received response (XML, JSON)

Note!

The response Response obtained should be assigned to the local variable (in the script).

For example:

local resp = GATE-> httpr_openweather_json-> ResponseBody

Then, in the scripts, you must perform the operation on the variable resp!

Note!

Scripts reading the content stored in the ResponseBody must be created in the GATE HTTP module.

The received responses depending on their type (ResponseType) are properly parsed to the table.

Exemplary value readings are written to local variables (inside the script).

In order to be able to use a variable (eg to display in an application), it should be assigned to global variables (user's features).

Below are examples of answers in XML and JSON format as well as the method of reading a given value (in the presented examples the answers from the openweathermap.org weather service were used)

A. JSON:

Example answer (openweathermap.org):

```
resp = [[
{"coord":
{"lon":145.77,"lat":-16.92},
"weather":[{"id":803,"main":"Clouds","description":"broken
clouds","icon":"04n"}],
"base":"cmc stations",
"main":
{"temp":293.25,"pressure":1019,"humidity":83,"temp min":289.82,"temp max":295.3
7},
"wind":{"speed":5.1,"deg":150},
"clouds":{"all":75},
"rain":{"3h":3},
"dt":1435658272,
"sys":
{"type":1,"id":8166,"message":0.0166,"country":"AU","sunrise":1435610796,"sunse
t":1435650870},
"id":2172797,
"name":"Cairns",
"cod":200}
]]
```

How to read :

• Parameter value lon

```
{"coord":
{"lon":145.77,"lat":-16.92},
"weather":[{"id":803,"main":"Clouds","description":"broken
clouds","icon":"04n"}],
"base":"cmc stations",
"main":
{"temp":293.25,"pressure":1019,"humidity":83,"temp_min":289.82,"temp_max":295.3
7},
```

In a script:

local lon = resp.coord.lon

After calling the script 145.77 will be assigned to the local variable (script variable).

• Parameter value **description**

```
{"coord":
{"lon":145.77,"lat":-16.92},
"weather":[{"id":803,"main":"Clouds","description":"broken
clouds","icon":"04n"}],
"base":"cmc stations",
"main":
{"temp":293.25,"pressure":1019,"humidity":83,"temp_min":289.82,"temp_max":295.3
7},
```

In a script:

local description = resp.weather[1].description

After calling the script "broken clouds" will be assigned to the local variable (script variable).

B. XML:

Example answer (openweathermap):

```
resp= [[
<current>
  <city id="2643741" name="City of London">
  <coord lon="-0.09" lat="51.51">
  <country>GB</country>
  <sun rise="2015-06-30T03:46:57" set="2015-06-30T20:21:12">
  </city>
  <temperature value="72.34" min="66.2" max="79.88" unit="fahrenheit"/>
  <humidity value="43" unit="%">
  <pressure value="1020" unit="hPa">
  <wind>
  <speed value="7.78" name="Moderate breeze">
  <direction value="140" code="SE" name="SouthEast">
  </wind>
  <clouds value="0" name="clear sky">
  <visibility value="10000">
  <precipitation mode="no">
  <weather number="800" value="Sky is Clear" icon="01d">
  <lastupdate value="2015-06-30T08:36:14">
</current>
]]
```

How to read:

• The value of the id attribute in the tag city

```
<current>
        <city id="2643741" name="City of London">
        <coord lon="-0.09" lat="51.51">
        <country>GB</country>
        <sun rise="2015-06-30T03:46:57" set="2015-06-30T20:21:12">
        </city>
```

In a script:

local city_id = resp[1].id

After calling the script, 2643741 will be assigned to the local variable (script variable).

• The value between the **country** tag:

```
<current>
    <city id="2643741" name="City of London">
    <coord lon="-0.09" lat="51.51">
    <country>GB</country>
    <sun rise="2015-06-30T03:46:57" set="2015-06-30T20:21:12">
    </city>
```

In a script:

local country = resp[1][2][1]

After calling the script, "GB" will be assigned to the local variable (script variable).

• Tag name **country**

```
<current>
<city id="2643741" name="City of London">
<coord lon="-0.09" lat="51.51">
<country>GB</country>
<sun rise="2015-06-30T03:46:57" set="2015-06-30T20:21:12">
</city>
```

In a script:

local nameTag = resp[1][2].xmlTag

After calling the script, the value of "country" will be assigned to the local variable (script variable).

2.2.1. HttpListener

The HttpListener object is used for receiving HTTP (GET, POST) requests. The returned response can be serialized to one of the standard types including JSON, XML. In the HttpListener object, it is important to return the response to every incoming Request.

In the case of listening to Request from the Gate module on the query - for example (using an internet browser):

GET 192.168.4.12/grentontest/xml

You must create the HttpListener virtual object.

0	×
Select object	
Choose CLU:	
CLU52000998	
Object:	
HttpListener	~
01	

0				×
Object properties				
Name: http_listener Id: CLU52000998->HTT5447	Embedded features	Type: HttpListe	ner	
Feature name	Current value	Initial value	Unit	Range
Path	/grentontest/xml	/grentontest/xml	string	
Method	-		string	
QueryStringParams	-	\z	string	
RequestType	0		-	0,1,2,3,4,5
RequestBody	-	\z	string	
ResponseType	3	XML ~	-	0,1,2,3,4
ResponseBody		١z	string	
StatusCode	200	200] -	
🗹 Auto refresh 👏				Refresh
				OK Cancel

The following parameters must be set in the HttpListener object:

- Path: /grentontest/xml
- ResponseType: XML
- StatusCode: 200

Note!

Features described as not settable are features containing answers. The initial values of these features should be left unchanged. All operations on these variables should be performed on scripts (and local variables)

You must create a script for the OnRequest event that will create the correct answer and send it back.

2.2.2. Preparation of the response sent to the server

The response is created in the local resp variable.

After preparing the response, set it for ResponseBody (resp) and then send it using the SendResponse () method.

A. XML:

To send the value of a given attribute in response:

```
local resp ="<clu><temperature>" ..CLUZ->x103478262_ONEW_SENSOR1->Value.."
</temperature></clu>"
GATE_2->Listener_XML->SetResponseBody(resp)
GATE_2->Listener_XML->SendResponse()
```

The answer you've provided is as follows:

```
<clu>
<temperature>22.5</temperature>
</clu>
```

B.JSON:

```
local resp = {
Temp = CLUZ->x103478262_ONEW_SENSOR1->Value
}
GATE_2->Listener_JSON->SetResponseBody(resp)
GATE_2-> Listener_JSON->SendResponse()
```

The answer you've provided is as follows:

```
{"Temp":22.6}
```

2.2.3. Reading key values from the querystringparams parameter

According to the description of the QueryStringParams feature, its value is not settable, it can be read in the script. If querystring with keys (keys) is sent in the query, the given value can be read from the script level - it is saved in the form of a table.

Individual key values can be obtained on the basis of:

```
value1 = qs.klucz1
```

For the query received:

192.168.1.12/grentontest/query?light1=on&light2=off&light3=on

You must create a script:

```
local qs = HTTP_L->grentontest_query_listener->QueryStringParams
local test0 = qs.light1
local test1 = qs.light2
local test2 = qs.light3
HTTP_L->grentontest_query_listener->SetResponseBody()
HTTP_L->grentontest_query_listener->SendResponse()
```

All key values will be saved in local variables (test0, test1, test2).

2.3.1. Timer

Timers are virtual objects created as part of a given GATE module. Timers can be used wherever it is necessary to call a method after a specified time or also to call it cyclically.

Note!

It is recommended to use the Timer object when sending queries periodically using the HttpRequest object.

The timer can operate in two modes:

• Countdown

After starting, it counts down the set time. At the end of the countdown, the method associated with the OnTimer event is started, and the timer stops and does not count down until the next start using the Start method.

• Interval

Cyclic timer - after the start, it starts counting down the set time. After its expiry, the timer calls the method associated with the OnTimer event, and the timer itself again begins to count down the set time. The situation is repeated until it is stopped by the 'Stop' method.

2.4.1. Sonos

The Sonos object is used to integrate Sonos speaker with the Grenton system using the GATE module.

Before integrating the speaker with the system, the speaker should be configured in the local network using dedicated application and read its assigned IP address.

To connect the speaker to system, create a new Sonos virtual object:

Select object Choose CLU: CLU521900002 ~ Object: Sonos ~	0		×
Choose CLU: CLU521900002 ~ Object: Sonos ~	Select object		
Choose CLU: CLU521900002 ~ Object: Sonos ~			
CLU521900002 ~ Object: Sonos ~	Choose CLU:		
Object: Sonos ~	CLU521900002		
Sonos ~	Object:		
	Sonos		~
		ОК	Cancel

0						×
Object properties						
Name: Sonos_Salor	n		Type: Sonos	;		
Id: CLU5219000	002->SON8378					
Control 🔖	Events 🌪 Embedded features					
Feature name	Current value	Initial value		Unit	Range	
Host	-	0.0.0.0		IP		
UpdatePeriod	-	1000		ms	[0-10000]	
Status	-			-		
ErrorCode	-			-		
Volume	-			%	[0-100]	
Mute	-			bool	0,1	
Artist	-			-		
Title	-			-		
State	-			-		
PlayMode	-			-	0,1,2,3,4,5	
AlbumArt	-			-		
Name	-			-		
CoordinatorName				-		
Auto refresh 🔇						O Refresh
					ОК	Cancel

Set the parameters in the Embedded features tab:

- Host: e.g. 192.168.20.105 (speaker IP address)
- UpdatePeriod: 1000

After sending the configuration, the *status* feature should take the value 1. This is information about the correct connection of the speaker to the system.

0						×
Object properties						
Name: Sonos_Salon			Туре:	Sonos		
Id: CLU521900002->SON	15766]			
Control 🔖 Events	😭 Embedded features					
Feature name	Current value	Initial value		Unit	Range	
Host	192.168.20.105	192.168.20.10	5	IP		
UpdatePeriod	1000	1000		ms	[0-10000]	
Status	1			-		
ErrorCode	0			-		
Volume	0			%	[0-100]	
Mute	1			bool	0,1	
Artist	Dire Straits			-		
Title	Sultans Of Swing			-		
State	0			-		
PlayMode	0			-	0,1,2,3,4,5	
AlbumArt	http://192.168.20.105:1400/ge	ta		-		
Name	Salon			-		
CoordinatorName	Salon			-		
Auto refresh ด						O Refresh
					ОК	Cancel

Note!

If more objects are used, there may be issues due to limited network and/or device bandwidth. In such a situation, as the number of created objects continues to increase, it is recommended to increase the value of the UpdatePeriod feature.

2.5.1. MusicCast

The MusicCast object is used to integrate Yamaha speaker with the Grenton system using the GATE module.

Before integrating the speaker with the system, the speaker should be configured in the local network using dedicated application and read its assigned IP address.

To connect the speaker to system, create a new MusicCast virtual object:

0	\times
Select object	
Choose CLU:	
CLU521900002	\sim
Object:	
MusicCast	~
ОК	Cancel

0						×
Object properties						
Name: MusicCast_Salon			Type: Musi	icCast	 	
Id: CLU521900002->MU	JS7818					
Control 💦 Events 🖗	Embedded features					
Feature name	Current value	Initial value		Unit	Range	
Host	-	0.0.0.0		IP	 	
UpdatePeriod	-	1000		ms	 [0-10000]	
Status	-			-		
ErrorCode	-			-		
Volume	-			%	[0-100]	
Mute	-			bool	0,1	
Artist	-			-		
Title	-			-		
State	-			-		
Shuffle	-			-	1,2,3,4	
Repeat	-			-	1,2,3	
Power	-			-	0,1	
AlbumArt	-			-		
ObjectID	-			-		
ServerID	-			-		
Name	-			-		
Role	-			-		
Input	-			-		
AutoPowerStandby	-			-	0,1	
Auto refresh 🔇						Refresh
					OK	Cancel

Set the parameters in the Embedded features tab:

- Host: e.g. 192.168.20.105 (speaker IP address)
- UpdatePeriod: 1000

After sending the configuration, the <u>Status</u> feature should take the value 1. This is information about the correct connection of the speaker to the system.

0							×
Objec	t properties						
Name:	MusicCast_Salon			Type: Music	Cast		
ld:	CLU521900002->M	US4946					
Co	ontrol 隆 Events	Embedded features					
Feature	e name	Current value	Initial value		Unit	Range	
Host		192.168.20.100	192.168.20.10	0	IP		
Update	ePeriod	1000	1000		ms	[0-10000]	
Status		1			-		
ErrorC	ode	0			-		
Volum	e	0			%	[0-100]	
Mute		0			bool	0,1	
Artist		Dire Straits			-		
Title		Sultans Of Swing			-		
State		1			-		
Shuffle	e	1			-	1,2,3,4	
Repeat	t	1			-	1,2,3	
Power		1			-	0,1	
Album	Art	http://192.168.20.100/Yan	naha		-		
Object	ID	MUS4946			-		
Server	ID	MUS4946			-	 	
Name		(Linked) Salon			-	 	
Role		1			-	 	
Input		spotify			-		
AutoP	owerStandby	1			-	0,1	
Auto	o refresh 🧿						Refresh
						OK	Cancel

Note!

If more objects are used, there may be issues due to limited network and/or device bandwidth. In such a situation, as the number of created objects continues to increase, it is recommended to increase the value of the UpdatePeriod feature.

2.6.1. CoolMasterNet

The CoolMasterNet virtual object is used to integrate the Grenton system with CoolAutomation units (CoolMasterNet, CoolLinkHub) in order to control an air conditioner or a group of air conditioners.

To connect the CoolAutomation unit to the system, create a new CoolMasterNet virtual object:

0	×
Select object	
Choose CLU:	
CLU521900002	\sim
Object:	
CoolMasterNet	~
ОК	Cancel

0							×
Objec	t properties						
Name: Id:	CoolMasterNet	->COO9275		Туре: Со	olMasterNet	t	
Co	ntrol 🏹 Even	ts 😤 Embedded feature	s	l			
Feature	e name	Current value	Initial value		Unit	Range	
SN		-			-		
Host		-	0.0.0:101	03	-		
Update	Period	-	1000		ms	[0-10000]	
Status		-			-		
ErrorCo	ode	-			-		
Auto	o refresh 🔇						Refresh
						ОК	Cancel

Set the parameters in the Embedded features tab:

- **SN:** e.g. 283B96C10790 (unit serial number)
- Host: e.g. 192.168.0.213:10103 (unit IP address)

After sending the configuration, the *status* feature should take the value 1. This is information about the correct connection of the unit to the system.

0						\times
Object properties						
Name: CoolMasterNet	:		Type:	CoolMasterNet	t	
Id: CLU521900002	->COO5666					
Control 🍾 Event	ts 👚 Embedded feature	s				
Feature name	Current value	Initial value		Unit	Range	
SN	283B96C10790	283B96C107	90	-		
Host	http://10.0.40.93:8080	10.0.40.93:80	080	-		
UpdatePeriod	1000	1000		ms	[0-1000	0]
Status	1			-		
ErrorCode	0			-		
🗹 Auto refresh 🔮						Refresh
					OK	Cancel

2.7.1. CoolMaster

The CoolMaster virtual object is used to control an air conditioner or a group of air conditioners. To use the object properly, you must first configure the CoolMasterNet virtual object (<u>see point 2.6.1.</u>).

Then create a new CoolMaster virtual object:

Ο	×
Select object	
Choose CLU:	
CLU521900002	~
Object:	
CoolMaster	\sim
ОК	Cancel

0						×
Object properties						
Name: CoolMaster			Type: CoolM	aster		
Id: CLU521900002->CC	007734					
Control 💽 Events	Embedded features					
Feature name	Current value	Initial value		Unit	Range	
CoolMasterNetID	-			-		
UIDs	-			-		
SupportedModes	-	1,2,3,4,5		-		
SupportedFanSpeeds	-	0,1,2,3,4,5		-		
SupportedLouverPositions	; -	1,2,3,4,5,6,7		-		
Status	-			-		
State	-			-	0,1	
Mode	-			-	1,2,3,4,5	
TargetTemp	-			°C/F		
FanSpeed	-			-	0,1,2,3,4,5	
LouverPosition	-			-	 1,2,3,4,5,6,7	
AmbientTemp	-			°C/F		
FailureCode	-			-		
Auto refresh 🔇						Refresh
					ОК	Cancel

Set the parameters in the Embedded features tab:

• **CoolMasterNetID:** e.g. CO09275 (ID of the previously created CoolMasterNet object):

0							×
Objec	t properties						
Name:	CoolMasterNet			Type:	CoolMasterNet		
ld:	CLU521900002-	·COO9275					
Control 📡 Events 🛞 Embedded features							
Feature	e name	Current value	Initial value		Unit	Range	
SN		283B96C10790	283B96C10	0790	-		
Host		http://10.0.40.93:808	80 10.0.40.93:	8080	-		

• UIDs: e.g. L2.000 (HVAC UIDs)

0						×
Object properties						
Name: CoolMaster			Type:	CoolMaster		
Id: CLU521900002->COO	7522					
Control 隆 Events 🛞	Embedded features					
Feature name	Current value	Initial value		Unit	Range	
CoolMasterNetID	COO9275	COO9275		-		
UIDs	L2.000	L2.000		-		
SupportedModes	1,2,3,4,5	1,2,3,4,5		-		
SupportedFanSpeeds	0,1,2,3,4,5	0,1,2,3,4,5		-		
SupportedLouverPositions	1,2,3,4,5,6,7	1,2,3,4,5,6,7		-		
Status	1			-		
State	0			-	0,1	
Mode	1			-	1,2,3,4,5	
TargetTemp	25.00			°C/F		
FanSpeed	2			-	0,1,2,3,4,5	
LouverPosition	2			-	1,2,3,4,5,6,7	
AmbientTemp	21.20			°C/F		
FailureCode	L2.000:CP01			-		
🗹 Auto refresh 🔇						Sefresh
					ОК	Cancel

After sending the configuration, the Status feature should take the value 1 and the values of the other features should be loaded correctly.

Controlling multiple air conditioners with a single CoolMaster object

One CoolMaster object can work with multiple air conditioners connected to the same CoolAutomation unit. For this purpose, in the CoolMaster object in the UIDs feature, after the space, enter the following identifiers of the air conditioners:

Ο					×
Object properties					
Name: CoolMaster			Type: Cool	Master	
Id: CLU521900002->C	007522				
P Control New Events	😭 Embedded features				
Feature name	Current value	Initial value		Unit	Range
CoolMasterNetID	COO9275	COO9275		-	
UIDs	L2.000 L2.001 L2.002 L2.003	L2.000 L2.00	1 L2.002 L2.00	- 30	
SupportedModes	1,2,3,4,5	1,2,3,4,5		-	
SupportedFanSpeeds	0,1,2,3,4,5	0,1,2,3,4,5		-	
SupportedLouverPosition	1 ,2,3,4,5,6,7	1,2,3,4,5,6,7		-	
Status	1			-	
State	-			-	0,1
Mode	-			-	1,2,3,4,5
TargetTemp	-			°C/F	
FanSpeed	-			-	0,1,2,3,4,5
LouverPosition	-			-	1,2,3,4,5,6,7
AmbientTemp	24.48			°C/F	
FailureCode	L2.000:CP01 L2.001:CP02 L2.0			-	
🗹 Auto refresh 🔇					Refresh
					OK Cancel

Note!

The - value for the State, Mode, TargetTemp, FanSpeed, LouverPosition features means that the values of a given feature are different for at least one air conditioner from the group - desynchronization state.

Note!

Features State, Mode, TargetTemp, FanSpeed, LouverPosition, AmbientTemp, FailureCode have no values before the first connection with the unit or at the moment of desynchronization state, in Object Manager they are displayed as -. In order to avoid errors in the scripts, before comparing such a feature, check whether it has a value: *if(feature ~= nil)*

3. The ability to connect to the Gate using TELNET

For the Gate Http module it is possible to view Lua scripts. In case of configuration error (emergency mode), it is possible to view the error location in the LUA configuration created. The connection is established using the Telnet protocol - for this purpose, for example, the PuTTY program can be used. Examples of parameters to establish a connection:

	?	\times
Basic options for your PuTTY se	ssion	
Specify the destination you want to connect to Host Name (or IP address) Port		
192.168.4.11	23	
Connection type: ○ Ra <u>w</u> ● <u>T</u> elnet ○ Rlogin ○ <u>S</u> SH		erial

Two methods can be used to call a connection on the Gate side:

• startConsole - Launches the Lua console. When the method is called, the user has 10s to set the connection to Gate. If the connection is correct, the information about the correct connection will be returned on the terminal (client):

CLU SN Telnet session started.

• StartConsoleOnReboot - allows you to establish a connection the next time Gate reboots. After
reboot, the user has 10s to set the connection to Gate. If the connection is correct, the
information about the correct connection will be returned on the terminal (client)

```
CLU SN initializing...
CLU: running user.lua...
CLU: running om.lua...
CLU: running OnInit...
CLU: Project loaded.
```

Note!

It is not recommended to assign the <code>StartConsole</code> and <code>StartConsoleOnReboot</code> methods to the <code>OnInit</code> event of the GATE Http module.

To display eg the value of a given feature on the console, use the *Function block* component and select the *Print* method, and then select the desired feature.

0	-	– 🗆 X
Select function		
print	✓ ● Value TEST	string
	○ Features	

Note!

If a Telnet connection between the client <--> GATE has been established, calling the StartConsole method again will disconnect the current session.

4. Comprehensive integration with external systems using the GATE Http device

Step-by-step configuration description on the example of a relay output.

4.1. System

Let's say we have a simple system consisting of the following elements:

- CLU Z-Wave named (Name) "CluZ"
- Relay module for the purpose of using one output called "Relay"
- Gate Http name "GateHttp"

4.2. Output control

In order to enable control of the relay output from an external system, we create a new HttpListener object on GateHttp and configure it as follows:

- Name: RelayControlListener
- Path: /relaycontrol

We leave the other parameters unchanged for now.

Script

```
For the RelayControlListener object to work, create a script that will handle the incoming Http queries.
```

Here it is worth noting that from this script we have access to the entire system and all its functionalities. This opens up virtually unlimited possibilities but also raises some risks, especially if Gate's functionality is not well thought out. Therefore, we pay special attention that when implementing Gate's functionality, we should think carefully about the way we want to achieve and how Gate's operation may depend on or affect other elements of the system. Examples of this approach will also be discussed further.

Returning to the script controlling Relay. We want to be able to switch Relay on or off by sending him the expected status (On / Off) or calling the Switch method. This approach to implementation makes it possible to connect both bistable and monostable switch type control to it.

Going to action, we create a script on GateHttp called RelayControlOnRequest, and in the code editing mode we put the following:

```
-- RelayControlOnRequest()
local data = GateHttp->RelayControlListener->QueryStringParams
if data == nil then
    CluZ->Relay->Switch(0)
else
    if data.cmd == "setValue" then
        local val = tonumber(data.val)
        if(val == 1) then
            CluZ->Relay->SwitchOn(0)
        elseif(val == 0) then
```

```
CluZ->Relay->SwitchOff(0)
end
end
end
GateHttp->RelayControlListener->StatusCode = 200
GateHttp->RelayControlListener->ResponseBody = "OK"
GateHttp->RelayControlListener->SendResponse()
```

Next, we assign the script to the OnRequest event of the RelayControlListener object and send the configuration to the system.

The above script retrieves the query parameter values from the RelayControlListener object and performs the appropriate actions depending on what is in them. Then sends the status of the operation back to the client - in this case 200, OK.

Operation can be easily tested using a regular web browser by entering the following URLs (the IP address should be changed to the actual address of your Http Gateway):

```
http://192.168.88.4/relaycontrol?cmd=setValue&val=1 - Turns Relay on
http://192.168.88.4/relaycontrol?cmd=setValue&val=0 - Turns Relay Off
http://192.168.88.4/relaycontrol - Switches Relay state
```

As you can see in the examples, we can use Listener in two ways. If the parameters cmd (command to be executed) and val (value to be set) are defined properly, they set the specific Relay state. If we omit these parameters in the URL, the object works like a Switch.

The above example can be further expanded with further commands if other commands are needed. You can also add further parameters identifying the object on which these commands should be performed.

4.3. Status download

In the previous step, we enabled controlling the object in the system from the outside. Very often, in the next step, there is a need to provide access to the current state of the object.

One of the faster and most intuitive methods (not necessarily the best) is the definition of another Listener that will take the value Value from the Relay object and send it to the client. The simplest script with such functionality may look like this.

```
-- RelayStateOnRequest()
GateHttp->RelayState->StatusCode = 200
GateHttp->RelayState->ResponseBody = "Relay State: "..CluZ->Relay->Value
GateHttp->RelayState->SendResponse()
```

By entering the URL below into the browser, we can see that we get a response with the state of the Relay object (in a simple text form, but it is not the format of sending data that is the subject of this example).

http://192.168.88.4/relaystate - returns Relay State: 0 Or Relay State: 1 depending on the state of object.

The above example works fine at first glance but let's try to take a closer look.

4.4. Event order

We have just constructed the Http interface (API) having two methods:

- /relaycontrol allows controlling the Relay object
- /relaystate returns the current state (value) of the Relay object

After a quick test, everything works well, but as we wrote above, you still need to consider how such methods will be used. Namely, it is easy to imagine that in the external system these two methods will be used right after each other: calling the switching action and after receiving the response, reading the status to confirm that the action has occurred and synchronizing the status.

And here unexpected system operation can occur - Relay turns on but the returned status is 0, i.e. invalid. The reason for this is that these operations are performed asynchronously on two different devices. There is no guarantee that the Relay state change operation will be done before asking about its state. Calling the state change action in the script <code>RelayControlOnRequest()</code> is invoked asynchronously, which means that the script does not wait for CluZ to complete the task.

The considered case is very simple and practically always works, but in the case of more complicated operations (when different target objects are involved, the operation requires the exchange of data, sending features, etc.) the risk that the status will be retrieved before the actual state of the object(objects) changes is real and in complex systems we often observe such effects.

4.5. Event synchronization

The above problem can be solved by forcing the script RelayControlOnRequest () to wait for CluZ to actually execute the state change action on the target device. This can be easily done with the clu.await () function. E.g. calling:

```
CluZ->Relay->Switch(0)
```

we replace with:

clu.await(CluZ->Relay->Switch(0))

(We change the other calls to CluZ in the same way).

From now on, our Listener will not send the confirmation 200, OK until the action on CluZ is actually done, so the client using this interface will not be misled by too quickly confirming the task.

However, the clu.await () function has a limit. The time limit for making a call is 800ms, and if the task cannot be completed in that time, the script will end in timeout and the Http client will receive a Http error: 500 Internal Server Error in response.

In most cases, this timeout is not a problem and the system will work properly but in the case of complex operations and / or when CluZ will be charged with other tasks it can happen. The way to solve the problem in this case is described in the next section.

4.6. Feedback confirmation

In complex systems and where we want high reliability and stability of integration, you should delay Listener Http's response until you receive confirmation from CluZ that the task has been completed.

For clarity, we define a new script and assign it to Listener:

• Event OnRequest : GateHttp->SplitSyncOnRequest()

The script SplitSyncOnRequest() looks like this:

```
-- SplitSyncOnRequest()
local data = GateHttp->RelayControlListener->QueryStringParams
if data == nil then
   CluZ->SplitSyncCluzTask("Switch")
    return
else
   if data.cmd == "setValue" then
       local val = tonumber(data.val)
       if(val == 1) then
           CluZ->SplitSyncCluzTask("On")
           return
        elseif(val == 0) then
           CluZ->SplitSyncCluzTask("Off")
           return
        end
    end
end
GateHttp->RelayControlListener->StatusCode = 400
GateHttp->RelayControlListener->ResponseBody = "Bad request"
GateHttp->RelayControlListener->SendResponse()
```

In each place of the script, when we delegate the task to CluZ (this time through an additional script, about which in a moment) we end our script without sending an Http response to the client. If the script execution reaches the final lines, it means that the query could not be interpreted correctly, which means that it is incorrect and we send back the error 400, Bad request. By the way, we've added another level of protection against invalid call parameters.

The task is not now as previously performed directly on the target Relay object but delegated to a script on CluZ named <code>SplitSyncCluzTask (action: string)</code>. The notation used means that the script is called with a parameter called <code>action</code>, which is of type <code>string</code> - not to be confused with LUA notation where we do not define the type of the function call parameter. The <code>action</code> parameter defines the specific action to be called on the Relay object. The operation is identical to the previous case.

```
-- SplitSyncCluzTask(action: string)
if(action == "On") then
    CluZ->Relay->SwitchOn(0)
elseif (action == "Off") then
    CluZ->Relay->SwitchOff(0)
elseif (action == "Switch") then
    CluZ->Relay->Switch(0)
else
    -- Unknown action
    GateHttp->SplitSyncRequestCompleted(false)
    -- Return to avoid double completion
    return
end
GateHttp->SplitSyncRequestCompleted(true)
```

Depending on the action defined, the appropriate method is performed on the Relay object. Finally, we inform GateHttp that we have completed the task and send the response to the client. A gateHttp method called SplitSyncRequestCompleted (success: boolean) was created for this purpose, which takes the boolean parameter: true if the action was successful, false otherwise.

```
-- SplitSyncRequestCompleted(success: boolean)
if success then
    GateHttp->RelayControlListener->StatusCode = 200
    GateHttp->RelayControlListener->ResponseBody = "OK"
else
    GateHttp->RelayControlListener->StatusCode = 405
    GateHttp->RelayControlListener->ResponseBody = "Not allowed"
end
GateHttp->RelayControlListener->SendResponse()
```

GateHttp through the above method sends a response to the client informing about success or error depending on the received parameter. In this way, we implemented the fully synchronous Http method, which has no time limit for operation. In more advanced cases, you can further improve system performance by calling the function SplitSyncRequestCompleted (success: boolean) in response to events informing about a change in the value of a particular object. This ensures that the change has occurred and further increases the stability of the system.

Note!

For data received from external systems, always use the limited trust method as to their correctness. We recommend not passing directly the values to methods and scripts inside the system, but using specific actions depending on the method values as seen in the above scripts. If it is necessary to directly use variables received from outside, they should be transferred via user variables (which are addressable throughout the Grenton system and can be freely transferred between CLU devices). In addition, each variable received from the outside should be validated in the script for correctness, value and scope. Lack of proper verification of the received values may cause unexpected operation of the system, open access to unwanted functionalities and even cause errors and the CLU entering Emergency mode.

4.7. Timeout

The created Listener works almost reliably. Why almost? Let's think about what happens if CluZ for some reason never calls the SplitSyncRequestCompleted (success: boolean) method. GateHttp is then waiting for the current query to be terminated and stops responding to subsequent queries.

This should not happen on a well-configured system. However, an unexpected situation can always occur and therefore every element of the system should be configured to operate as independently as possible and to be resistant to errors in other areas. Therefore, our Listener should also be fully resistant to such situations.

For this purpose, we will define a Timer object on GateHttp that will ensure that waiting for CluZ responses does not last indefinitely. Parameters of the new object:

- Name: SplitSyncTimeout
- Event OnTimer: GateHttp->SplitSyncTimeoutOnTimer()
- **Time:** 3000 In this case you should choose the time according to the specific situation, for the purposes of the example we take 3s (3000ms)
- Mode: CountDown

The script executed after the specified time has passed looks like this:

```
-- SplitSyncTimeoutOnTimer()
GateHttp->RelayControlListener->StatusCode = 408
GateHttp->RelayControlListener->ResponseBody = "Timeout"
GateHttp->RelayControlListener->SendResponse()
```

The script works fairly simply, it returns the error 408, Timeout.

In order for everything to work, the SplitSyncOnRequest () and SplitSync Request Completed (success: boolean) scripts must be modified accordingly.

```
-- SplitSyncOnRequest()
local data = GateHttp->RelayControlListener->QueryStringParams
if data == nil then
   CluZ->SplitSyncCluzTask("Switch")
   GateHttp->SplitSyncTimeout->Start()
   return
else
    if data.cmd == "setValue" then
       local val = tonumber(data.val)
       if(val == 1) then
           CluZ->SplitSyncCluzTask("On")
           GateHttp->SplitSyncTimeout->Start()
            return
        elseif(val == 0) then
           CluZ->SplitSyncCluzTask("Off")
           GateHttp->SplitSyncTimeout->Start()
           return
        end
   end
end
GateHttp->RelayControlListener->StatusCode = 400
GateHttp->RelayControlListener->ResponseBody = "Bad request"
GateHttp->RelayControlListener->SendResponse()
```

Every time we delegate a task to CluZ we start the Timer SplitSyncTimeout.

```
-- SplitSyncRequestCompleted(success: boolean)
if(GateHttp->SplitSyncTimeout->State == 1) then
   GateHttp->SplitSyncTimeout->Stop()
   if success then
      GateHttp->RelayControlListener->StatusCode = 200
      GateHttp->RelayControlListener->ResponseBody = "OK"
   else
      GateHttp->RelayControlListener->StatusCode = 405
      GateHttp->RelayControlListener->ResponseBody = "Not allowed"
   end
   GateHttp->RelayControlListener->SendResponse()
end
```

However, in the script SplitSyncRequestCompleted (success: boolean) we first check if the Timer is still in the state 1 (on). It prevents from an unnecessary attempt to send a response when the timeout has already occurred - the time for response has expired and a response was sent informing about the occurrence of the error 408, Timeout. If the Timer still works (normal situation, the time for the answer has not run out), we stop the Timer and continue as before.

4.8. A lot of objects

Let's go back to the method of retrieving Relay's state for a moment. In particular, let's look at the following line again:

GateHttp->RelayState->ResponseBody = "Relay State: "..CluZ->Relay->Value

The key here is to get the value of the Value property of the Relay object:

CluZ->Relay->Value

This method works well but be aware that the value of this feature is retrieved when the script is executed. It results in communication between GateHttp and CluZ via the network. This is a synchronous call, i.e. the method waits until the response with the value of the value feature of the Relay objects is delivered. We already know about some of the limitations of such a call. There are even more threats in this particular case. Namely, the value of this feature is downloaded every time the client asks about its value through the Http interface which generates unnecessary traffic in the system. Additionally, it introduces an unnecessary delay in the system. If there are a lot of such queries, it can affect system performance. In some especially simple cases this is acceptable and the system will handle it well. But not always.

Let's imagine that there are many objects in the system and we need to provide the status of all of them (in the form of JSON or CSV) in response. If in this case we use the same method, then the script that performs this task may look something like the following:

```
GateHttp->RelayState->StatusCode = 200
local response = CluZ->Relay01->Value
response = response .. "," .. CluZ->Relay02->Value
response = response .. "," .. CluZ->Relay03->Value
response = response .. "," .. CluZ->Relay04->Value
response = response .. "," .. CluZ->Relay05->Value
response = response .. "," .. CluZ->Relay06->Value
response = response .. "," .. CluZ->Relay07->Value
response = response .. "," .. CluZ->Relay08->Value
response = response .. "," .. CluZ->Relay09->Value
response = response .. "," .. CluZ->Relay09->Value
response = response .. "," .. CluZ->Relay09->Value
response = response .. "," .. CluZ->Relay10->Value
response = response .. "," .. CluZ->Relay10->Value
response = response .. "," .. CluZ->Relay11->Value
```

There can be much more Relay objects in real system. Each line is used to send a request to CluZ for the Value feature over the network. Collecting the status of all objects may take a lot of time. This delays the response significantly and blocks GateHttp during the operation.

A series of inquiries occurs whenever the client asks about the state of the system. In most cases, the value of the feature between queries only changes for one object, the one that has just been changed. All this causes a lot of unnecessary traffic and negatively affects the speed of the system. From the end user's point of view, the system may be unstable in such cases, have unexpected delays, hang for short or long periods and even lose some events.

4.9. Status for the complex system

In order to solve the above problem, you should approach the task of downloading the device status a bit differently. Later in this section, for simplicity of examples, we will return to a single Relay object, but the given method will work for virtually any number of objects.

Let's say that instead of asking remotely CluZ about the state of Relay objects, every time the client asks for it, we could keep its value locally in the GateHttp user variable. Thanks to this, when the client asks without any delay, we return its value immediately without any delay, let's call it RelayValueOnGateHttp. What's more, we would like to eliminate all queries that synchronize its value and receive information only when it is needed, i.e. when the value of the Cluz-> Relay-> value feature changes. To achieve this, we assign the following command to the OnValueChange event of the Relay object:

GateHttp->RelayValueOnGateHttp=CluZ->Relay->Value

Which more or less means: Every time the value of the Value attribute changes, assign to the user attribute RelayValueOnGateHttp on GateHttp this new value. From now on, we will always have the current value of the Relay object on the GateHttp side. At the time of inquiry, we simply send this value to the client. To accomplish this, we modify the RelayStateOnRequest () script as follows:

```
-- RelayStateOnRequest()
GateHttp->RelayState->StatusCode = 200
GateHttp->RelayState->ResponseBody = "Relay State: "..GateHttp-
>RelayValueOnGateHttp
GateHttp->RelayState->SendResponse()
```

As mentioned earlier, it can be used for any number of objects and does not cause any negative impact on system performance because only changes of individual values are communicated when they occur.

4.10. Push Notifications

Going one step further on the road to perfect integration, let's implement one more improvement. So far, the client himself had to ask every now and then if something did not change in the system. If the system is to be responsive then such queries must be frequent. Frequent queries generate unnecessary traffic and increase the risk of delays, especially in handling events very sensitive to delays, such as switching on the lighting, where the user immediately feels that the action did not take place immediately after touching the button.

In addition, the customer is not notified immediately about a change in the system, but only when he asks himself if anything will change.

The solution is the Push state method where the system itself actively sends a notification and changes the state of the device in the system. In order to implement such a mechanism, we create a new object on the GateHttp type HttpRequest:

- Name: StatePushNotification
- Host: IP: The http server port listening for status changes
- Path: /statechanged
- Method: PUT

Other settings unchanged.

```
Next we add new script SendStatePushNotification(newValue: number) :
```

```
-- SendStatePushNotification(newValue: number)
GateHttp->StatePushNotification->SetQueryStringParams("val="..newValue)
GateHttp->StatePushNotification->SendRequest()
```

To inform the client about the new status, call the script, specifying as a parameter the new value of the value attribute. This is best done in the OnValueChange event of the Relay object. Because we assigned the value to the user variable GateHttp-> RelayValueOnGateHttp a step earlier, we can use it to avoid unnecessary retransmission of this value. So the assignment will look like this:

GateHttp->SendStatePushNotification(GateHttp->RelayValueOnGateHttp)

Note that copying values to the RelayValueOnGateHttp features must come out earlier.

From now on, whenever the value of the Value feature of a Relay object changes, a notification will be automatically sent with the new value.

The chosen method sends the new value as the URL parameter, but you can of course format the answer in any way and send messages in the body by setting the value using the SetRequestBody (value) method.

Note!

Please note that Gate Http opens up unlimited possibilities of cooperation with the system and you can use it to perform any operation, even malicious. Therefore, it is important that the Gate Http configuration is carefully thought out and made with the utmost care.

5. Restoring factory settings - Hard Reset

Running the *Hard Reset* function on the GATE Http module results in:

- Removal of the saved configuration;
- Formatting the flash memory partition;
- Removal of all created LUA objects;
- Loss of communication between OM / HM and Gate module.

In order to restore the factory settings with the *Hard Reset* function, perform the following steps (in accordance with the given order):

- Disconnect power from the Gate module;
- Press and hold the *Reset* button on the module (the button is located under the bottom end of the module);
- Connect the power supply to the Gate module;
- Keep the *Reset* button pressed for at least 10 seconds during the reset, the green LED will be permanently illuminated. The correct execution of the reset will be confirmed by a 3-blink green diode.
- Release the *Reset* button after 10 seconds
- Wait about 60 seconds until the LED green and red blink alternately (*Emergency* mode)

After the procedure the module will be cleared, but the module will no longer be visible (no response to *Keep-Alive*) in the project from the Object Manager level. To restore the module again, perform CLU Discovery and then send the configuration.

6. Configuration parameters

Note!

The described functionality and integration is available for **GRENTON GATE HTTP**, **DIN**, **Eth (INT-221-E-01)** with **firmware 1.3.1-2243 or higher**!

FEATURES

Name	Description
Uptime	Operation time of the device since the last reset (in seconds)
ClientReportInterval	Reporting period about changes in features
Date	Current date
Time	Current time (hh: mm: ss)
Local Time	Current local time stamp
Time Zone	Time zone
UnixTime	Current Unix time stamp
FirmwareVersion	Gate software version
UseCloud	Specifies whether GATE connects to the cloud
CloudConnection	Specifies the status of the GATE connection to the cloud
NTPTimeout	Waiting time for response from NTP server
UseNTP	Specifies whether GATE uses NTP
PrimaryDNS	Preferred DNS server
SecondaryDNS	Alternate DNS server

METHODS

Name	Description
StartConsole	Launches the Lua console
StartConsoleOnReboot	Starts the Lua console on restart
SetClientReportInterval	Sets the reporting period for feature changes
SetPrimaryDNS	Sets the PrimaryDNS feature
SetSecondaryDNS	Sets the SecondaryDNS feature
SetDateTime	Sets the date and time

EVENTS

Name	Description
OnInit	An event dispatched when the device initializes

B. HttpRequest Object

Note!

Features described as not settable are features containing answers. The initial values of these features should be left unchanged. All operations on these variables should be performed on scripts (and local variables).

Name	Description
Host	Host adress
Path	Query Path
QueryStringParams	Query's parameters. \z means lack of parameters
Method	The type of method sent in the query, e.g. GET, POST
Timeout	Acceptable response timeout
RequestType	The type of content of the query being sent. Defines the <i>content-type</i> parameter in the query header. Depending on the type selected, the contents of the RequestBody feature are appropriately serialized: 0 - None - undefined. The content-type is not sent in the header. The content of the RequestBody feature is not serialized. 1 - Text - <i>content-type: text / plain</i> . The content of the RequestBody feature is not serialized. 2 - JSON - <i>content-type: application / json</i> . The contents of the RequestBody feature are serialized to JSON format. 3 - XML - <i>content-type: text / xml</i> . The contents of the RequestBody feature are serialized to XML format. 4 - FormData - <i>content-type: application / x-www-form-urlencoded</i> . The contents of the RequestBody feature are serialized to the table. 5 - Other - the content type (<i>content-type</i>) is different from the built-in one. The type can be defined by placing it in the header (the RequestHeaders attribute). The content is not serialized.
ResponseType	The type of expected answer. Defines the <i>Accept</i> parameter in the query header. Depending on the type chosen, the content of the received response (ResponseBody) features) is properly parsed into the table: 0 - None - <i>Accept</i> is not sent in the header of the query being sent. The answer (feature ResponseBody) is not parsed. 1 - Text - <i>Accept: text / plain.</i> The answer (feature ResponseBody) is not parsed. 2 - JSON - <i>Accept: application / json.</i> The answer (feature ResponseBody) is parsed with JSON. 3 - XML - <i>Accept: text / xml.</i> The response (feature ResponseBody) is parsed from XML. 4 - FormData - <i>Accept: application / x-www-form-urlencoded.</i> The answer (ResponseBode feature) is parsed. 5 - Other - the <i>Accept</i> parameter of the header is different from the built-in one. The parameter can be defined by placing it in the header (the RequestHeaders attribute).
RequestHeaders	Additional HTTP query headers. <a>L z means no content.
RequestBody	The content of the message sent in the query. $\$ z means no content
ResponseBody	The content of the message received after sending the query. (feature used for reading in scripts - not settable)

Name	Description
StatusCode	HTTP response status

Name	Description
SendRequest	Sends the request
AbortRequest	Breaks request's service
Clear	Deletes request's content
SetHost	Sets the host's address
SetPath	Sets request's path
SetQueryStringParams	Sets query's parameters
SetMethod	Sets request's method
SetTimeout	Sets acceptable response timeout
SetRequestType	Sets the content type of the request being sent (content-type)
SetResponseType	Sets the expected request's answer type
SetRequestHeaders	Sets additional HTTP request's header
SetRequestBody	Sets the request's message content

EVENTS

Name	Description
OnRequestSent	Event occurring when the request is sent
OnResponse	Event occurring when the answer is received

C. HttpListener Object

Note!

Features described as not settable are features containing answers. The initial values of these features should be left unchanged. All operations on these variables should be performed on scripts (and local variables).

Name	Description
Path	Query path
Method	The type of method obtained in the query, e.g. GET, POST
QueryStringParams	Returns HTTP query parameters (feature used for reading in scripts - not settable)
RequestType	The type of inquiry received. Depending on the type chosen, the content of the query received (the RequestBody attribute) is properly parsed into the table: 0 - None - The answer is not parsed. 1 - Text - The answer is not parsed. 2 - JSON - The answer is parsed with JSON. 3 - XML - The answer is parsed from XML. 4 - FormData - The answer is parsed. 5 - Other - The answer is not parsed. The RequestBody feature returns the contents of an HTTP query (a feature used to read in scripts - not settable).
RequestBody	Returns the content of the HTTP request (feature used for reading in scripts - non-persistent)
ResponseType	The content type of the sent response to the query. Defines the <i>content-type</i> parameter in the response header. Depending on the type selected, the contents of the ResponseBody feature are appropriately serialized: 0 - None - undefined. <i>Content-type</i> is not sent in the header. The content is not serialized. 1 - Text - <i>content-type: text / plain</i> . The content is not serialized. 2 - JSON - <i>content-type: application / json</i> . The RequestBody content is serialized to JSON format. 3 - XML - <i>content-type: text / xml</i> . The RequestBody content is serialized to XML format. 4 - FormData - <i>content-type: application / x-www-form-urlencoded</i> . The RequestBody content is serialized. 5 - Other - the <i>Accept</i> parameter of the header is different from the built-in one. The parameter can be defined by placing it in the header (the RequestHeaders attribute).
ResponseBody	Returns the contents of the HTTP response (a feature used to read in scripts).

Name	Description
	Status of the HTTP response being sent. Supported statuses:
	200 - OK
	201 - Created
	202 - Accepted
	204 - No content
	205 - Reset content
	400 - Bad request
StatusCode	403 - Forbidden
	404 - Not found
	405 - Method not allowed
	406 - Not acceptable
	408 - Request timeout
	409 - Conflict
	410 - Gone

Name	Description
SendResponse	Sends the request's response
Clear	Deletes response's content
SetPath	Sets request's path
SetResponseType	Sets the expected request's answer type
SetResponseBody	Sets the response's content
SetStatusCode	Sets respone's state

EVENTS

Name	Description
OnRequest	Event occurring when the request is received

D. Timer

Name	Description
Time	Counted time (in ms)
Mode	Timer mode: o - count down (countdown), 1 - cyclical (interval)
State	Current timer status: • - stopped, • - counting

Name	Description
SetTime	Sets the timer time (in ms)
SetMode	Sets the operating mode: o - count down (countdown), 1 - cyclical (interval)
Start	Starts the timer
Stop	Stops the timer

EVENTS

Name	Description
OnTimer	An event triggered when the timer is counted
OnStart	An event triggered when the timer is started
OnStop	An event triggered when the timer is stopped

E. Sonos

Name	Description
Host	Sonos IP Address
UpdatePeriod	State update period
Status	Communication status: o - no connection, 1 - connected
ErrorCode	Last error code: • no error, negative values - negative HTTP status codes, positive values - UPnP error codes
Volume	Volume level ranging from 0% to 100%
Mute	Mute state: 0 - Off, 1 - On
Artist	Artist
Title	Title
State	Playback state: 0 - stopped, 1 - playing, 2 - paused, 3 - transitioning
PlayMode	 Playback mode: o - normal, 1 - repeat all, 2 - repeat one, 3 - shuffle, no repeat, 4 - shuffle, repeat all, 5 - shuffle, repeat one
AlbumArt	Album art address
Name	Speaker name
CooridnatorName	Group coordinator name

Name	Description
SetUpdatePeriod	Sets the state update period
SetVolume	Sets the volume level, ranging from 0% to 100%
SetMute	Sets the mute state
SetPlayMode	Sets the playback mode
Play	Starts playback
Pause	Pauses playback
Stop	Stops playback
Next	Switches to the next track
Prev	Switches to the previous track
VolumeUp	Increases the volume by a specified percentage
VolumeDown	Decreases the volume by a specified percentage
SwitchMute	Switches the mute state
SwitchPlay	Switches the playback state between paused and playing
LeaveGroup	Leaves the current speaker group, if any
JoinGroup	Joins the speaker group, specified by the group coordinator name

EVENTS

Name	Description
OnConnected	Event executed after successful speaker connection establishment
OnDisconnected	Event executed after the speaker connection has been lost
OnError	Event executed after an error has been detected
OnChange	Event executed after a Mute, Volume, Title, Artist, State, PlayMode, AlbumArt or CoordinatorName change occurs
OnMuteChange	Event executed after a Mute change occurs
OnVolumeChange	Event executed after a Volume change occurs
OnTitleChange	Event executed after a Title change occurs
OnArtistChange	Event executed after an Artist change occurs
OnStateChange	Event executed after a State change occurs
OnPlayModeChange	Event executed after a PlayMode change occurs
OnAlbumArtChange	Event executed after an AlbumArt change occurs
OnCoordinatorNameChange	Event executed after a CoordinatorName change occurs

F. MusicCast Object
Name	Description
Host	MusicCast IP Address
UpdatePeriod	State update period
Status	Communication status: o - no connection, 1 - connected
ErrorCode	Last error code: • no error, negative values - negative HTTP status codes, positive values - Yamaha Extended Control error codes
Volume	Volume level ranging from 0% to 100%
Mute	Mute state: 0 - Off, 1 - On
Artist	Artist
Title	Title
State	Playback state: 1 - playing, 2 - stopped, 3 - paused
Shuffle	Shuffle mode: 1 - off, 2 - on, 3 - songs, 4 - albums
Repeat	Repeat mode: 1 - off, 2 - one, 3 - all
Power	Power state: o - standby, 1 - on
AlbumArt	Album art address
ObjectID	Object ID
ServerID	Server object ID
Name	Speaker name

Name	Description
Role	Grouped speaker role: not part of any group, client, server
Input	Input source
AutoPowerStandby	AutoPowerStandby state: o - off, 1 - on

Name	Description
SetUpdatePeriod	Sets the state update period
SetVolume	Sets the volume level, ranging from 0% to 100%
SetMute	Sets the mute state
SetShuffle	Sets the shuffle mode
SetRepeat	Sets the repeat mode
SetPower	Sets the power state
SetAutoPowerStandby	Sets the AutoPowerStandby state
Play	Starts playback
Pause	Pauses playback
Stop	Stops playback
Next	Switches to the next track
Prev	Switches to the previous track
VolumeUp	Increases the volume by a specified percentage
VolumeDown	Decreases the volume by a specified percentage
SwitchMute	Switches the mute state
SwitchPlay	Switches the playback state between paused and playing
DestroyGroup	Destroys the current speaker group
JoinGroup	Joins the speaker group specified by the ServerID
LeaveGroup	Leaves the current speaker group
SetInput	Sets the input source

Name	Description
OnConnected	Event executed after successful speaker connection establishment
OnDisconnected	Event executed after the speaker connection has been lost
OnError	Event executed after an error has been detected
OnChange	Event executed after a Volume, Mute, Artist, Title, State, Shuffle, Repeat, Power, AlbumArt, Input, AutoPowerStandby, ServerID, Role change occurs
OnMuteChange	Event executed after a Mute change occurs
OnVolumeChange	Event executed after a Volume change occurs
OnTitleChange	Event executed after a Title change occurs
OnArtistChange	Event executed after an Artist change occurs
OnStateChange	Event executed after a State change occurs
OnShuffleChange	Event executed after a Shuffle change occurs
OnRepeatChange	Event executed after a Repeat change occurs
OnPowerChange	Event executed after a Power change occurs
OnAlbumArtChange	Event executed after an AlbumArt change occurs
OnInputChange	Event executed after an Input change occurs
OnAutoPowerStandbyChange	Event executed after an AutoPowerStandby change occurs
OnGroupChange	Event executed after a group related state change occurs (ServerID, Role)

G. CoolMasterNet object

Name	Description
SN	CoolMasterNet unit serial number
Host	CoolMasterNet unit address in <u>http://host:port</u> form
UpdatePeriod	State update period
Status	Connection status: • - no connection, • - connected
ErrorCode	CoolMasterNet last error code: • no error, • TCP connection error or HTTP error code

Name	Description
SetUpdatePeriod	Sets the state update period
TurnAllOn	Turns on all the HVAC units
TurnAllOff	Turns off all the HVAC units

EVENTS

Name	Description
OnConnected	Event occurring after successfull CoolMasterNet connection establishment
OnDisconnected	Event occurring after the CoolMasterNet connection has been lost
OnError	Event occurring after an error has been detected

H. CoolMaster object

Name	Description
CoolMasterNetID	CoolMasterNet object ID
UIDs	One or more space-separated HVAC UIDs
SupportedModes	List of supported operation modes separated by a comma
SupportedFanSpeeds	List of supported fan speeds separated by a comma, entering "-" means no support
SupportedLouverPositions	List of supported louver positions separated by a comma, entering "-" means no support
Status	Connection status: o - no connection, 1 - connected
State	Operation state: 1 - active, 0 - inactive, "-" - state desynchronized
Mode	Operation mode: 1 - cool, 2 - heat, 3 - fan, 4 - dry, 5 - auto, state desynchronized
TargetTemp	Target temperature state desynchronized
FanSpeed	Fan speed: 0-5, 5 - auto, state desynchronized
LouverPosition	Louver position: 0 - no support, 1 - auto, 2 - horizontal, 3 - 30°, 4 - 45°, 5 - 60°, 6 - vertical, 7 - stopped, state desynchronized
AmbientTemp	Ambient temperature or the average ambient temperature in case of a device group
FailureCode	Failure code

Name	Description
SetSupportedModes	Sets the list of supported operation modes
SetSupportedFanSpeeds	Sets the list of supported fan speeds
SetSupportedLouverPositions	Sets the list of supported louver positions
SetState	Sets the working status
SetMode	Sets the operation mode
SetTargetTemp	Sets the temperature setpoint
SetFanSpeed	Sets the fan speed
SetLouverPosition	Sets the louver position
TurnOn	Turns on the HVAC unit or units in case of a device group
TurnOff	Turns off the HVAC unit or units in case of a device group
SwitchMode	Sets the next operation mode

Name	Description
OnConnected	Event occurring after successfull CoolMasterNet connection establishment
OnDisconnected	Event occurring after the CoolMasterNet connection has been lost
OnChange	Event executed after a change occurs on State, Mode, TargetTemp, FanSpeed or LouverPosition
OnModeChange	Event executed after a Mode change occurs
OnTargetTempChange	Event executed after a TargetTemp change occurs
OnFanSpeedChange	Event executed after a FanSpeed change occurs
OnLouverPositionChange	Event executed after a LouverPosition change occurs
OnTurnOn	Event executed after the HVAC unit or group of units is turned on
OnTurnOff	Event executed after the HVAC unit or group of units is turned off
OnFailure	Event executed after detecting an error
OnDesynchronization	Event executed after desynchronisation of the grouped HVAC units properties occurs

XVI. DALI Controller Module

Note!

The described functionality and integration is available for **GRENTON DALI Controller DIN, Eth** (INT-202-D-01) with **1.1.11 (build 2048)** or higher.

Note!

DALI Controller is available for Object Manager in version **1.3.5 (build 204201)** and higher, and for CLU with firmware **5.06.04 (build 2050)** and higher.

1. General information

The DALI Controller module acts as a master device, in accordance with the DALI standard, it enables the operation of 64 ballasts - Control Gears, connected to the DALI bus.

Note!

The maximum number of ballasts (DALI_GEAR objects) assigned to one CLU Z-Wave is 128.

DALI Controller allows you to control all light control devices within the scope defined by the PN-EN 62386-102 standard, and the DT8 extension.

The module allows you to control single ballasts, as well as control by groups, each ballast can be assigned to 16 groups. Thanks to this, it is much easier to organize the lighting control and create advanced control scenarios.

2. Module configuration

Note!

Before starting any work with the DALI Controller module, it is necessary to update the interface database!

LED signaling

- The blue diode indicates the voltage on the DALI bus,
- The green diode indicates the current state of the module:
 - ON no ballast configuration on module, DALI Discovery must be performed,
 - Flashes at 200 ms interval DALI Discovery, the ballasts connected to the DALI bus are searched and local addresses assigned to them,
 - Flashes at 1 second interval ballast configuration is on the module.

Adding a module to the project

After the CLU Discovery process has been executed, two objects appear in the project:

- DALI_MASTER main object used to manage the module configuration,
- PowerSupplyVoltage object for monitoring the voltage on the system bus.

A. Ballast addressing

The module configuration should start with addressing the DALI ballasts connected to the bus. The DALI Controller enables two types of addressing: fully automatic or manual.

Automatic addressing allows you to address the entire installation with one click, using the DALI Discovery process.

- In the DALI_MASTER object in the Control tab, call the ResetGear (Broadcast) method and then the DALI_Discovery method,
- The method call initiates the automatic addressing of all ballasts on the bus, which will receive local addresses in the range 0 to 63. The assignment of an address will be confirmed by lighting the given luminaire for 300 ms. Please note that all existing addresses will be deleted when addressing is started. During DALI Discovery, addresses are assigned to the ballasts randomly,
- During DALI Discovery:
 - The green LED on the DALI Controller flashes at 200 ms interval,
 - The embedded feature State of the DALI_MASTER object takes the value 1.

The duration of the DALI Discovery depends on the number of ballasts (it can take up to several minutes for the maximum number of devices).

Note!

Do not perform any operations on the DALI Controller during DALI Discovery!

Manual addressing allows you to address individual ballasts using the <u>SetLocalAddress</u> method. It is helpful in the event that the ballast is not found after DALI Discovery, the address is doubled or we want a specific sequence of addresses in accordance with the assembly order.

In the DALI_MASTER object in the Control tab, call the SetLocalAddress method with the FindGear parameter set:

- WithoutLocalAddress addressing process for a device without an address,
 - Address new unoccupied address that will be given to the device,
- WithLocalAddress addressing process for a device with a given address,
 - Address new unoccupied address that will be given to the device,
- In both cases, the address assignment will be confirmed by lighting the given luminaire for 300 ms,
- During SetLocalAddress:
 - The green LED on the DALI Controller flashes at 200 ms interval,
 - The embedded feature state of the DALI_MASTER object takes the value 1.

Note!

Do not perform any operations on the DALI Controller during SetLocalAddress !

After the DALI Discovery

- The green LED on the DALI Controller flashes every 1 s (ballasts found) or is on continuously (no ballasts found),
- The embedded feature <code>state</code> of the DALI_MASTER object takes the value:
 - 3 ballasts found,
 - 0 no ballasts found,
- The embedded feature NumberOfGear of the DALI_MASTER returns the number of correctly found and addressed devices,

• The event OnDALI_DiscoveryCompleated is generated.

Operations possible on devices after DALI Discovery has ended

Using the methods of the DALI_MASTER object we can:

- Verify the device reporting to the given address the Identify method,
- Restart the device at the given address the ResetGear method,
- Set the value of the luminaire for the device at the given address the SetDAPCValue method.

B. Adding ballasts to the project

After the ballast addressing process is completed with the DALI_Discovery and SetLocalAddress methods, CLU Discovery should be performed:

- New GEAR objects are added to the project to represent each DALI device (address) correctly found and added during the addressing process,
- The embedded GearAddresses feature of the DALI_MASTER object returns address numbers in the range 0 63, occupied by DALI devices
- GEAR objects are in the DALI_GEAR and DALI_GEAR_DT8 Device Type 8 versions:
 - DALI_GEAR all ballasts with basic control methods,
 - DALI_GEAR_DT8 ballasts for color control (RGBWA control mode) or color temperature (Tc control mode).

Note!

For correct operation of GEAR configuration and objects, CLU Discovery should be performed after each change in ballast addressing!

C. Ballast control

The control of a single ballast is carried out using a given DALI_GEAR / DALI_GEAR_DT8 object using available methods or using the methods of the DALI_MASTER object (detailed functionalities can be found in the description of individual objects).

The ballast groups are controlled by the DALI_MASTER object using the setGroupDAPCValue,
GroupSwitchOn, GroupSwitchOff methods. In order to be able to control a given group of
devices, it is necessary to:

- For the desired GEAR objects, set the value of the embedded feature Group. Each object can be assigned to 16 groups in the range 1 16, the next groups are given after a decimal point,
- After assigning objects to groups, send the configuration to CLUZ,
- After sending the configuration, the groups are sent by the DALI Controller. Embedded feature
 State of the DALI_MASTER object takes the value 4. The duration of the process depends on
 the number of devices for which the value of the Group feature has been changed, it can last up
 to 60 seconds,
- After correct grouping, the embedded feature of the DALI_MASTER object takes the value 3.

Note!

When assigning groups (after CLUZ restart / configuration sending) it is not possible to control the objects!

D. RampTime

RampTime	Minimum fade time [s]	Nominal fade time [s]	Maximum fade time [s]
1	0,6	0,7	0,8
2	0,9	1,0	1,1
3	1,3	1,4	1,6
4	1,8	2,0	2,2
5	2,5	2,8	3,1
6	3,6	4,0	4,4
7	5,1	5,7	6,2
8	7,2	8,0	8,8
9	10,2	11,3	12,4
10	14,4	16,0	17,6
11	20,4	22,6	24,9
12	28,8	32,0	35,2
13	40,7	45,3	49,8
14	57,6	64,0	70,4
15	81,5	90,5	99,6

The DALI Controller supports the smooth change of the DAPCValue value using the RampTime parameter, in a logarithmic manner:

3. Objects

A. DALI_MASTER

FEATURES

Name	Description
State	 o - no ballast configuration 1 - DALI Discovery 3 - ballast configuration is on the device 4 - saving information about groups
NumberOfGear	Number of ballasts in the device configuration
GearAddresses	Ballast addresses given during DALI_Discovery. The feature value is refreshed after restart system

Name	Description
Identify	Turns on the luminaire for 2 seconds
ResetGear	Resets the ballast
SetLocalAddress	Sets the local address of the ballast
DALI_Discovery	Searching for ballasts connected to the DALI bus and assigning them local addresses. At the time of addressing, the ballast is turned on for 300 ms. No device operations should be performed during DALI_Discovery!
SetDAPCValue	Sets the value of the power with which the luminaire shines. RampTime parameter set on a logarithmic scale 0.8 - 90 [s]
SetGroupDAPCValue	Sets the value of the power with which the luminaire shines for a given group. RampTime parameter set on a logarithmic scale 0.8 - 90 [s]
GroupSwitchOn	Turns on the luminaire for a given group. RampTime parameter set on a logarithmic scale 0.8 - 90 [s]
GroupSwitchOff	Turns off the luminaire for a given group. RampTime parameter set on a logarithmic scale 0.8 - 90 [s]

Name	Description
OnDALI_DiscoveryCompleated	Event occuring after the ballasts have been found and given local addresses

B. DALI_GEAR

FEATURES

Name	Description
Address	Ballast address
Group	Ballast group numbers, subsequent groups from the 1-16 range are given after the decimal point. no belonging to any group
DAPCValue	The value of the power with which the luminaire shines

Name	Description
Identify	Turns on the luminaire for 2 seconds
SetDAPCValue	Sets the value of the power with which the luminaire shines. RampTime parameter set on a logarithmic scale 0.8 - 90 [s]
Switch	Changes the luminaire state to the opposite (0 / 254). RampTime parameter set on a logarithmic scale 0.8 - 90 [s]
SwitchOn	Turns on the luminaire. RampTime parameter set on a logarithmic scale 0.8 - 90 [s]
SwitchOff	Turns off the luminaire. RampTime parameter set on a logarithmic scale 0.8 - 90 [s]
Hold	Executes the function of illuminating / dimming the luminaire
HoldUp	Executes the function of illuminating the luminaire
HoldDown	Executes the function of dimming the luminaire

Name	Description
OnDAPCValueChange	Event occuring when changing the DAPCValue
OnSwitchOn	Event occuring when the DAPCValue value is changed from 0 to the greater value
OnSwitchOff	Event occuring when the DAPCValue value is changed to 0

C. DALI_GEAR_DT8

Name	Description
Address	Ballast address
Group	Ballast group numbers, subsequent groups from the 1-16 range are given after the decimal point.
DAPCValue	The value of the power with which the luminaire shines
HSVValue	Brightness value as per the HSV model (range: 0.00-1.00). The feature does not get the actual brightness of the luminaire! Set according to called SetHSVValue method.
HSVSaturation	Colour saturation value as per the HSV model (0.00-1.00). This feature does not get the actual color saturation of the luminaire! Set according to called SetHSVSaturation method.
HSVHue	Colour hue value as per the HSV model (0-360). The feature does not get the actual color of the luminaire! Set according to called SetHSVHue method.

Name	Description
Identify	Turns on the luminaire for 2 seconds
SetDAPCValue	Sets the value of the power with which the luminaire shines
Switch	Changes the luminaire state to the opposite (0 / 254). RampTime parameter set on a logarithmic scale 0.8 - 90 [s]
SwitchOn	Turns on the luminaire. RampTime parameter set on a logarithmic scale 0.8 - 90 [s]
SwitchOff	Turns off the luminaire. RampTime parameter set on a logarithmic scale 0.8 - 90 [s]
Hold	Executes the function of illuminating / dimming the luminaire
HoldUp	Executes the function of illuminating the luminaire
HoldDown	Executes the function of dimming the luminaire
SetHSVValue	Sets brightness value (0.00-1.00). RampTime parameter set on a logarithmic scale 0.8 - 90 [s]
SetHSVSaturation	Sets saturation value (0.00-1.00). RampTime parameter set on a logarithmic scale 0.8 - 90 [s]
SetHSVHue	Sets hue value (0-360). RampTime parameter set on a logarithmic scale 0.8 - 90 [s]
SetRGBValue	Sets the value of the R (Red), G (Green), B (Blue) channels. RampTime parameter set on a logarithmic scale 0.8 - 90 [s]
SetWAFValue	Sets the value of the W (White) channel, and the A (Amber) and F (Freecolor) parameters. RampTime parameter set on a logarithmic scale 0.8 - 90 [s]
SetColourTemperature	Sets the color temperature value, where 0 - physical minimum, 100 - physical maximum. RampTime parameter set on a logarithmic scale 0.8 - 90 [s]

Name	Description
OnDAPCValueChange	Event occuring when changing the DAPCValue
OnSwitchOn	Event occuring when the DAPCValue value is changed from 0 to the greater value
OnSwitchOff	Event occuring when the DAPCValue value is changed to 0

D. PowerSupplyVoltage

Name	Description
Value	Current output value taking into account the scalar
Value%	Current percenatage input value of the maximum value (MaxValue characteristic)
Sensitivity	Minimum change of input state when the OnValueChange, OnValueLower or OnValueRise event is generated
MinValue	Minimum value of the Value characteristic after exceeding which the OnOutOfRange event is generated
MaxValue	Maximum value of the Value characteristic after exceeding which the OnOutOfRange event is generated

Name	Description
SetSensitivity	Sets input sensitivity value
SetMinValue	Sets MinValue
SetMaxValue	Sets MaxValue

EVENTS:

Name	Description
OnValueChange	Event resulting from changing input state
OnValueLower	Event occurs when a value lower than the value from the last reading appears at input
OnValueRise	Event occurs when a value higher than the value from the last reading appears at input
OnOutOfRange	Event resulting from exceeding the permissible range (MinValue : MaxValue)
OnInRange	Event occurs when value returns to MinValue / MaxValue range

XVII. Z-Wave modules

This chapter presents a description of the scope of support for other manufacturers' Z-Wave modules, which are available in the Grenton system.

Note!

A full list of devices is available at <u>https://support.grenton.pl/pl/support/solutions</u> in the article 'Which wireless Z-Wave modules are supported?'

1. Fibaro UBS

Module version: FGBS-001 v2.1.

1.1. General information

The Fibaro UBS Z-Wave module has two potential-free inputs. It allows reading of values from up to four 1-Wire sensors. In addition, it allows you to change the configuration parameters (Fibaro configuration interface).

Note!

Addition / removal is done by clicking the button in the module three times during inclusion / exclusion.

1.2. Objects

A. ZWAVE_DIN

Potential-free inputs

FEATURES

Name	Description
Value	Returns the input state
HoldDelay	The time after which pressing and holding the button will trigger the OnHold event
HoldInterval	The cyclic interval (in ms), after which the next OnHold events are triggered while holding the button

Name	Description
SetHoldDelay	Sets HoldDelay value
SetHoldInterval	Sets HoldInterval Value

Name	Description
OnValueChange	The cyclic interval (in ms), after which the next <code>onHold</code> events are triggered while holding the button
OnSwitchOn	An event triggered when the high state is set on input
OnSwitchOff	An event triggered when the low state is set on input
OnShortPress	The event is triggered after pressing the button for 500-2000ms
OnLongPress	The event is triggered after pressing the button for 2000-5000ms
OnHold	Event triggered when the input is in the high state, the first time after the holdDelay time has elapsed, and then cyclically every HoldInterval value
OnClick	Event triggered after pressing the button for less than 500ms

B. ZWAVE_1W_SENSOR

The object is responsible for the 1-Wire sensor. A separate object is created for each sensor. Up to 4 1-Wire sensors (DS18B20) can be connected to the UBS Fibaro module.

ZWAVE_1W_SENSOR objects are always added with the addition of the Fibaro UBS module to the CLU / project in the OM, regardless of the number of connected sensors. The Discovered feature - informing whether the Discovery 1-Wire sensor has arrived at Discovery and connected to the UBS module - informs about whether the sensor is connected.

When connecting or disconnecting the 1-Wire sensors, you must remove and then add the UBS module to the CLU Z-Wave module. Fibaro UBS module will report the new serial number - it is possible to rewrite the object configuration (automatic or manual). After adding sensors again, the order of sensors can be re-indexed to ZW_1W_SENSOR objects.

The Fibaro UBS module for the 1-Wire sensor does not return information if during the system operation the sensor has been disconnected - the last value collected is stored, therefore it is not recommended to use these sensors as a source of temperature control.

At the moment of short-circuit on the 1-Wire, all sensors connected to the Fibaro UBS module (available / visible in OM) return 0.00 - therefore, with a longer (unplanned) occurrence of this value, check the correctness of the 1-Wire connection.

Name	Description
Value	The value of the input
MinValue	The minimum value of the input
MaxValue	The maximum value of the input
Discovered	Information returned during CLU Discovery about connecting the sensor to the module

Name	Description
OnValueChange	An event triggered when the output value is changed
OnRise	Event triggered when the upper hysteresis threshold is exceeded (rising edge)
OnLower	Event triggered when the lower hysteresis threshold is exceeded (falling edge)
OnOutOfRange	Event triggered when the output value is outside the specified range (MinValue : MaxValue)
OnInRange	An event triggered when the value returns to the interval within the threshold values (MinValue: MaxValue)

C. ZWAVE_CONFIG

The object displays information about parameters and communication with the module in the Z-Wave network. It allows setting advanced configuration parameters of a given module (specified individually in the manual).

FEATURES

Name	Description
NodeID	The number of the module (node) in the Z-Wave network (transmitted for each Z-Wave module after adding it to the controller)
Banned	 Information on blocking Z-Wave communication with the module: - communication with the module is not blocked, - communication with the module is blocked (banned module). The blocking occurs when 3 consecutive attempts to communicate with the module fail (increment of the FailCount attribute by 3). A query is sent to the banned module every 1 minute - if the CLU receives a response, then the blocking will be removed and it is possible to try again to send the order to the module
FailCount	The blocking occurs when 3 consecutive attempts to communicate with the module fail (increment of the FailCount attribute by 3). A query is sent to the banned module every 1 minute - if the CLU receives a response, then the blocking will be removed and it is possible to try again to send the order to the module.
Register	The register number (parameter) of the configuration that has been read / set recently using the available methods
Value	The value of the configuration register (parameter)

Name	Desctiption
RemoveBan	It removes the blocking of communication with the Z-Wave module (in the case when the feature Banned = 1). Calling the method enables resending the command to the module. Note! <i>The RemoveBan feature is not synonymous with the correct communication with the module again - it allows re-sending an order / query to the module! In case of failure, the entire blocking process is restarted!</i>
ClearFailCount	Clears the number of unsuccessful communication attempts
Set	Sets the value of a given configuration register (parameter): 1 - Register (register or parameter number), 2 - Value (the value of the register or parameter), 3 - Size (size of the sent register or parameter value - in bytes)
Get	Gets the value of a given configuration (parameter) register
SetDefault	Sets the default value for a given configuration (parameter) register

Name	Description
OnBanned	An event that is triggered when the device is banned

2. NEO Coolcam Motion Sensor (PIR)

Module version: NAS-PD01ZE HW: 66 FW: 3.80

2.1. General information

The Z-Wave Neo Coolcam Motion Sensor module allows you to read: motion sensor status (PIR), light level and battery level. In addition, it gives you the option of setting / reading the module's wake-up time.

Note!

Addition / removal is done by clicking the button three times in the Neo module during inclusion / exclusion. Correctly carried out process will be confirmed by a five-fold blink of the diode.

2.2. Objects

A. BINARY_SENSOR

An object that allows reading the status of the motion sensor.

Name	Description
Value	Returns the input status: 0 - no violation, 1 - violation

Name	Description
OnValueChange	An event triggered when the status changes to the opposite
OnSwitchOn	An event triggered when the high state is set on input
OnSwitchOff	An event triggered when the low state is set on input

B. ANALOG_SENSOR

The object allows reading the illumination measured in luxes.

FEATURES

Name	Description
Value	The current value of the sensor
MinValue	The value below which the OnOutOfRange event is generated
MaxValue	The value above which the OnOutOfRange event is generated

METHODS

Name	Description
SetMinValue	Sets the low threshold value of the OnOutOfRange event
SetMaxValue	Sets the upper threshold value of the OnOutOfRange event

EVENTS

Name	Description
OnValueChange	An event triggered when the sensor value is changed
OnValueRise	An event is triggered when the sensor value changes to a higher one than the previous one
OnValueLower	An event triggered when the sensor value is changed to a lower one than the previous one
OnOutOfRange	An event triggered when one of the threshold values MinValue / MaxValue is exceeded
OnInRange	An event triggered when the value returns to the interval within the threshold values (MinValue: MaxValue)

C. ZWAVE_BATTERY

The object allows reading the battery status. The reading takes place cyclically, every time set, for the Interval feature of the ZWAVE_WAKEUP object (3600s by default).

Name	Description
BatteryLevel	Battery level of the Z-Wave module (in percent)
WarningLevel	Battery level below which warning events are generated

Name	Description
SetWarningLevel	Sets the warning level of the Z-Wave module battery

EVENTS

Name	Description
OnChange	An event triggered when the battery level changes
OnLowBattery	An event triggered when a battery drop is detected below the warning level
OnBatteryGood	An event triggered when a battery level returns to a value above the warning level

D. ZWAVE_WAKEUP

The object enables setting and reading the battery-awakening time of the Z-Wave module. The default value set by the CLU is 3600s (60 minutes). The minimum value is 300s (5 minutes); maximum 16777200s (about 194 days). It is possible to set values in step 60s (360s, 420s, 480s, etc.)

FEATURES

Name	Description
Interval	Time of self-awakening of the Z-Wave module from sleep mode (in seconds)
LastWakeUp	Time of the last awakening of the Z-Wave module from sleep mode

METHODS

Name	Description
SetInterval	Sets the time of automatic wake-up of the Z-Wave module from the sleep mode

EVENTS

Name	Description
OnWakeUp	An event triggered when the Z-Wave module wakes up from sleep mode

E. ZWAVE_CONFIG

The object displays information about parameters and communication with the module in the Z-Wave network. It allows setting advanced configuration parameters of a given module (specified individually in the manual).

FEATURES

Name	Description
NodeID	The number of the module (node) in the Z-Wave network (transmitted for each Z-Wave module after adding it to the controller)
Banned	 Information on blocking Z-Wave communication with the module: o - communication with the module is not blocked, 1 - blocked communication with the module (module banned). The blocking occurs when 3 consecutive attempts to communicate with the module fail (increment of the FailCount attribute by 3). A query is sent to the banned module every 1 minute - if the CLU receives a response, then the blocking will be removed and it is possible to try again to send the order to the module
FailCount	The number of unsuccessful attempts to communicate with the Z-Wave module. In case of failure of communication with the module (no response, confirmation, etc.), the feature is incremented by 1, then the attempt to repeat is twice (in 10s intervals). In case of failure, communication with the module is blocked ($Banned = 1$)
Register	The register number (parameter) of the configuration that has been read / set recently using the available methods
Value	 The value of the configuration register (parameter) Note! Parameter 2, 3, 5 and 8 refer to the association of modules that is not supported by the Grenton system! Note! Parameter 3 - changing the parameter value does not cause sending it during motion detection! Note! Parameter 4 - correct setting of the parameter value, however the module itself does not change the operating mode ! Note! Parameter 7 and 9 - correct setting of the parameter value, however the set value has not been tested due to the faulty sensor! Note! Parameter 1, 6 - no noticeable changes in module work after the change of value! Note! Parameter 9 - smaller range of set values (up to 100 lux)! Note! There is no information on the register number 11 (Motion Event Report One Time Enable) in the documentation!

Name	Description
RemoveBan	It removes the blocking of communication with the Z-Wave module (in the case when the feature Banned = 1). Calling the method enables resending the command to the module Note! RemoveBan is not synonymous with the correct communication with the module - it allows re-sending the command / query to the module! In case of failure, the entire blocking process is restarted!
ClearFailCount	Clears the number of unsuccessful communication attempts
Set	Sets the value of a given configuration register (parameter): Register (register or parameter number), Value (the value of the register or parameter), Size (size of the sent register or parameter value - in bytes) Note! Calling the Set method must be done after waking up the battery module! In order to wake up the module, please click the button in the module three times - after wake up the red LED will blink!*
Get	Gets the value of a given configuration (parameter) register Note! <i>Calling the Get method must be done after waking up the battery module!</i> In order to wake up the module, please click the button in the module three times - after wake up the red LED will blink!*
SetDefault	Sets the default value for a given configuration (parameter) register Note! ! <i>Calling the SetDefault method must be done after waking up the battery module!</i> In order to wake up the module, please click the button in the module three times - after wake up the red LED will blink!*

Name	Description
OnBanned	An event that is triggered when the device is banned

3. NEO Coolcam Door / Window Sensor

Module version: NAS-DS01Z

3.1. General information

The Z-Wave Neo Coolcam Door / Window Sensor module allows reading the status of the reed (NC) and the battery level. In addition, it gives you the option of setting / reading the module's wake-up time.

Note!

Addition / removal is done by clicking the button three times in the Neo module during inclusion / exclusion. Correctly carried out process will be confirmed by a five-fold blink of the diode.

3.2. Objects

A. BINARY_SENSOR

The object allows reading the reed open / close status.

FEATURES

Name	Description
Value	Returns the input status: 0 - closing, 1 - opening

EVENTS

Name	Description
OnValueChange	An event triggered when the status changes to the opposite
OnSwitchOn	An event triggered when the high state is set on input
OnSwitchOff	An event triggered when the low state is set on input

B. ZWAVE_BATTERY

The object allows reading the battery status. The reading takes place cyclically, every set time, for the Interval feature of the object **ZWAVE_WAKEUP**.

FEATURES

Name	Description
BatteryLevel	Battery level of the Z-Wave module (in percent)
WarningLevel	Battery level below which warning events are generated

METHODS

Name	Description
SetWarningLevel	Sets the warning level of the Z-Wave module battery

EVENTS

Name	Description
OnChange	An event triggered when the battery level changes
OnLowBattery	An event triggered when a battery drop is detected below the warning level
OnBatteryGood	An event triggered when the battery level returns to a value above the warning level

C. ZWAVE_WAKEUP

The object enables setting and reading the battery-awakening time of the Z-Wave module. The default value set by the CLU is 3600s (60 minutes). The minimum value is 300s (5 minutes); maximum 16777200s (about 194 days). It is possible to set values in step 60s (360s, 420s, 480s, etc.)

FEATURES

Name	Description
Interval	The period of automatic awakening of the Z-Wave module from the sleep mode (in seconds)
LastWakeUp	Time of the last awakening of the Z-Wave module from sleep mode

METHODS

Name	Description
SetInterval	Sets the period of automatic awakening of the Z-Wave module from the sleep mode

EVENTS

Name	Description
OnWakeUp	An event triggered when the Z-Wave module wakes up from sleep mode

D. ZWAVE_CONFIG

The object displays information about parameters and communication with the module in the Z-Wave network. It allows setting advanced configuration parameters of a given module (specified individually in the manual).

Name	Description
NodeID	The number of the module (node) in the Z-Wave network (transmitted for each Z-Wave module after adding it to the controller)
Banned	 Information on blocking Z-Wave communication with the module: o - communication with the module is not blocked, 1 - blocked communication with the module (module banned). The blocking occurs when 3 consecutive attempts to communicate with the module fail (increment of the FailCount attribute by 3). A query is sent to the banned module every 1 minute - if the CLU receives a response, then the blocking will be removed and it is possible to try again to send the order to the module
FailCount	The number of unsuccessful attempts to communicate with the Z-Wave module. In case of failure of communication with the module (no response, confirmation, etc.), the feature is incremented by 1, then the attempt to repeat is twice (in 10s intervals). In case of failure, communication with the module is blocked (Banned = 1)
Register	The register number (parameter) of the configuration that has been read / set recently using the available methods
Value	The value of the configuration register (parameter) Note! <i>Parameters 1 and 2 refer to the association of modules, which is not supported by the Grenton system!</i>

Name	Description
RemoveBan	It removes the blocking of communication with the Z-Wave module (in the case when the feature Banned = 1). Calling the method enables resending the command to the module. Note! RemoveBan is not synonymous with re-communication with the module - it allows re-sending an order / query to the module! In case of failure, the entire blocking process is restarted!
ClearFailCount	Clears the number of unsuccessful communication attempts
Set	Sets the value of a given configuration register (parameter): Register (register or parameter number), Value (register or parameter value), Size (size of the sent register or parameter value - in bytes) Note! Calling the Set method must be done after waking up the battery module! In order to wake up the module, please click the button in the module three times - after wake up the red LED will blink!*
Get	Gets the value of a given configuration (parameter) register Note! <i>Calling the Get method must be done after waking up the battery module!</i> In order to wake up the module, please click the button in the module three times - after wake up the red LED will blink!***
SetDefault	Sets the default value for a given configuration (parameter) register NOTE ! <i>Calling the setDefault method must be done after waking up</i> <i>the battery module</i> ! In order to wake up the module, please click the button in the module three times - after waking up the red LED will blink!*

Name	Description
OnBanned	An event triggered when the device is banned

4. INFIBITY Motion Sensor (PIR) [NEO Coolcam]

Module version: NAS-PD01ZE HW: 66 FW: 3.80

4.1. General information

The Z-Wave Infibity Motion Sensor module enables reading of: motion sensor status (PIR), lighting level, temperature and battery level. In addition, it gives you the option of setting / reading the module's wake-up time.

Note!

Addition / removal is done by clicking the button three times in the Infibity module during inclusion / exclusion. Correctly carried out process will be confirmed by a five-fold blink of the diode.

4.2. Objects

A. BINARY_SENSOR

The object allows reading the status of the motion sensor.

FEATURES

Name	Description
Value	Returns the input status: o - no violation, 1 - violation

EVENTS

Name	Description
OnValueChange	An event triggered when the status changes to the opposite
OnSwitchOn	An event triggered when the high state is set on input
OnSwitchOff	An event dispatched when the low state is set on input

B. ANALOG_SENSOR

The object allows reading the illumination measured in luxes (ANALOG_SENSOR1) and temperature (ANALOG_SENSOR2).

FEATURES

Name	Description
Value	The current value of the sensor
MinValue	The value below which the OnOutOfRange event is generated
MaxValue	The value above which the OnOutOfRange event is generated

METHODS

Name	Descriptrion
SetMinValue	Sets the low threshold value of the OnOutOfRange event
SetMaxValue	Sets the upper threshold value of the OnOutOfRange event

EVENTS

Name	Description
OnValueChange	An event triggered when the sensor value is changed
OnValueRise	An event triggered when the sensor value changes to a higher one than the previous one
OnValueLower	An event triggered when the sensor value is changed to a lower one than the previous one
OnOutOfRange	An event triggered when one of the threshold values MinValue / MaxValue is exceeded
OnInRange	An event triggered when the value returns to the interval within the threshold values (MinValue: MaxValue)

C. ZWAVE_BATTERY

The object allows reading the battery status. The reading takes place cyclically, every set time, for the Interval feature of the object **ZWAVE_WAKEUP** (3600s by default).

FEATURES

Name	Description
BatteryLevel	Battery level of the Z-Wave module (in percent)
WarningLevel	Battery level below which warning events are generated

METHODS

Name	Description
SetWarningLevel	Sets the warning level of the Z-Wave module battery

EVENTS

Name	Description
OnChange	An event triggered when the battery level changes
OnLowBattery	An event triggered when a battery drop is detected below the warning level
OnBatteryGood	An event triggered when the battery level returns to a value above the warning level

D. ZWAVE_WAKEUP

The object enables setting and reading the battery-awakening time of the Z-Wave module. The default value set by the CLU is 3600s (60 minutes). The minimum value is 300s (5 minutes); maximum 16777200s (about 194 days). It is possible to set values in step 60s (360s, 420s, 480s, etc.)

Name	Description
Interval	The period of automatic awakening of the Z-Wave module from the sleep mode (in seconds)
LastWakeUp	Time of the last awakening of the Z-Wave module from sleep mode

Name	Description
SetInterval	Sets the period of automatic awakening of the Z-Wave module from the sleep mode

EVENTS

Name	Description
OnWakeUp	An event triggered when the Z-Wave module wakes up from sleep mode

E. ZWAVE_CONFIG

The object displays information about parameters and communication with the module in the Z-Wave network. It allows setting advanced configuration parameters of a given module (specified individually in the manual).

Name	Description
NodeID	The number of the module (node) in the Z-Wave network (transmitted for each Z-Wave module after adding it to the controller)
Banned	 Information on blocking Z-Wave communication with the module: communication with the module is not blocked, blocked communication with the module (module banned). The blocking occurs when 3 consecutive attempts to communicate with the module fail (increment of the FailCount attribute by 3). A query is sent to the banned module every 1 minute - if the CLU receives a response, then the blocking will be removed and it is possible to try again to send the order to the module
FailCount	The number of unsuccessful attempts to communicate with the Z-Wave module. In case of failure of communication with the module (no response, confirmation, etc.), the feature is incremented by 1, then the attempt to repeat is twice (in 10s intervals). In case of failure, communication with the module is blocked ($Banned = 1$)
Register	The register number (parameter) of the configuration that has been read / set recently using the available methods
Value	The value of the configuration register (parameter) Note! <i>Parameter 2, 3, 5 and 8 refer to the association of modules that is not supported by the Grenton!</i> Note! <i>Parameter 1, 6 and 7 - no noticeable changes in the module's work after the change of value!</i> Note! Parameter 9 - smaller range of set values (up to 100 lux)!

Name	Description
RemoveBan	It removes the blocking of communication with the Z-Wave module (in the case when the feature Banned = 1). Calling the method enables resending the command to the module. Note! RemoveBan is not synonymous with the correct communication with the module again - it allows re-sending an order / query to the module! In case of failure, the entire blocking process is restarted!
ClearFailCount	Clears the number of unsuccessful communication attempts
Set	Sets the value of a given configuration (parameter) register: Register (register or parameter number), Value (register or parameter value), Size (size of the registry value sent or parameter - in bytes) Note! Calling the Set method must be done after waking up the battery module! In order to wake up the module, please click the button in the module three times - after wake up the red LED will blink!*
Get	Gets the value of a given register (parameter) configuration Note! <i>Calling the Get method must be made after waking up the battery module!</i> In order to wake up the module, please click the button in the module three times - after waking up the red LED will blink!*
SetDefault	Sets the default value for a given register (parameter) configuration Note! <i>Calling the SetDefault method must be done after waking up the</i> <i>battery module!</i> In order to wake up the module, please click the button in the module three times - after waking up the red LED will blink!*

Name	Description
OnBanned	An event triggered when the device is banned

5. INFIBITY Door/Window Sensor [NEO Coolcam]

Module version: NAS-DS01Z HW: 65 FW: 3.61

5.1. General information

The Z-Wave Infibity Door / Window Sensor module allows reading of the status of the reed (NC) and the battery level. In addition, it gives you the option of setting / reading the module's wake-up time.

Note!

Addition / removal is done by clicking the button three times in the Infibity module during inclusion / exclusion. Correctly carried out process will be confirmed by a five-fold blink of the diode.

5.2. Objects

A. BINARY_SENSOR

The object allows reading the reed open / close status.

FEATURES

Name	Description
Value	Returns the input state: 0 - closing, 1 - opening

EVENTS

Name	Description
OnValueChange	An event triggered when the status changes to the opposite
OnSwitchOn	An event triggered when the high state is set on input
OnSwitchOff	An event triggered when the low state is set on input

B. ZWAVE_BATTERY

The object allows reading the battery status. The reading takes place cyclically, every time set, for the Interval feature of the ZWAVE_WAKEUP object.

FEATURES

Name	Description
BatteryLevel	Battery level of the Z-Wave module (in percent)
WarningLevel	Battery level below which warning events are generated

METHODS

Name	Description
SetWarningLevel	Sets the warning level of the Z-Wave module battery

EVENTS

Name	Description
OnChange	An event triggered when the battery level changes
OnLowBattery	An event triggered when a battery drop is detected below the warning level
OnBatteryGood	An event triggered when the battery level returns to a value above the warning level

C. ZWAVE_WAKEUP

The facility enables setting and reading the battery-awakening time of the Z-Wave module. The default value set by the CLU is 3600s (60 minutes). The minimum value is 300s (5 minutes); maximum 16777200s (about 194 days). It is possible to set values in step 60s (360s, 420s, 480s, etc.)

FEATURES

Name	Description
Interval	The period of automatic awakening of the Z-Wave module from the sleep mode (in seconds)
LastWakeUp	Time of the last awakening of the Z-Wave module from sleep mode

METHODS

Name	Description
SetInterval	Sets the period of automatic awakening of the Z-Wave module from the sleep mode

EVENTS

Name	Description
OnWakeUp	An event that is triggered when the Z-Wave module wakes up from sleep mode

D. ZWAVE_CONFIG

The object displays information about parameters and communication with the module in the Z-Wave network. It allows setting advanced configuration parameters of a given module (specified individually in the manual).

Name	Description
NodeID	The number of the module (node) in the Z-Wave network (transmitted for each Z-Wave module after adding it to the controller)
Banned	 Information on blocking Z-Wave communication with the module: o - communication with the module is not blocked, 1 - blocked communication with the module (module banned). The blocking occurs when 3 consecutive attempts to communicate with the module fail (increment of the FailCount attribute by 3). A query is sent to the banned module every 1 minute - if the CLU receives a response, then the blocking will be removed and it is possible to try again to send the order to the module
FailCount	The number of unsuccessful attempts to communicate with the Z-Wave module. In case of failure of communication with the module (no response, confirmation, etc.), the feature is incremented by 1, then the attempt to repeat is twice (in 10s intervals). In case of failure, communication with the module is blocked (Banned = 1)
Register	The register number (parameter) of the configuration that has been read / set recently using the available methods
Value	The value of the configuration register (parameter) Note! Parameters 1 and 2 refer to the association of modules, which is not supported by the Grenton system!

Name	Description
RemoveBan	It removes the blocking of communication with the Z-Wave module (in the case when the feature Banned = 1). Calling the method enables resending the command to the module. Note! RemoveBan is not synonymous with the correct communication with the module again - it allows re-sending the command / inquiry to the module! In case of failure, the entire blocking process is restarted!
ClearFailCount	Clears the number of unsuccessful communication attempts
Set	Sets the value of a given configuration register (parameter): Register (register or parameter number), Value (the value of the register or parameter), Size (size of the sent register or parameter value - in bytes) Note! Calling the Set method must be done after waking up the battery module! In order to wake up the module, please click the button in the module three times - after wake up the red LED will blink!*
Get	Gets the value of a given register (parameter) configuration Note! <i>Calling the Get method must be made after waking up the battery module!</i> In order to wake up the module, please click the button in the module three times - after waking up the red LED will blink!*
SetDefault	Sets the default value for a given register (parameter) configuration Note! <i>Calling the SetDefault method must be done after waking up the</i> <i>battery module!</i> In order to wake up the module, please click the button in the module three times - after waking up the red LED will blink!*

Name	Description
OnBanned	An event triggered when the device is banned

6. INFIBITY Water Sensor [NEO Coolcam]

Module version: NAS-WS02ZU HW: 32 FW: 2.133

6.1. General information

The Z-Wave Infibity Water Sensor module enables reading of the status of the flood sensor and the battery level. In addition, it gives you the option of setting / reading the module's wake-up time.

Note!

Addition / removal is done by clicking the button three times in the Infibity module during inclusion / exclusion. Correctly carried out process will be confirmed by a five-fold blink of the diode.
6.2. Objects

A. BINARY_SENSOR

The object allows reading the state of the flood sensor.

FEATURES

Name	Description
Value	Returns the input status: o - dry, 1 - flooded

EVENTS

Name	Description
OnValueChange	An event triggered when the status changes to the opposite
OnSwitchOn	An event triggered when the high state is set on input
OnSwitchOff	An event triggered when the low state is set on input

B. ZWAVE_BATTERY

The object allows reading the battery status. The reading takes place cyclically, every set time, for the Interval feature of the object **ZWAVE_WAKEUP**.

FEATURES

Name	Description
BatteryLevel	Battery level of the Z-Wave module (in percent)
WarningLevel	Battery level below which warning events are generated

METHODS

Name	Description
SetWarningLevel	Sets the warning level of the Z-Wave module battery

EVENTS

Name	Description
OnChange	An event triggered when the battery level changes
OnLowBattery	An event triggered when a battery drop is detected below the warning level
OnBatteryGood	An event triggered when the battery level returns to a value above the warning level

C. ZWAVE_WAKEUP

The object enables setting and reading the battery-awakening time of the Z-Wave module. The default value set by the CLU is 3600s (60 minutes). The minimum value is 300s (5 minutes); maximum 16777200s (about 194 days). It is possible to set values in step 60s (360s, 420s, 480s, etc.)

FEATURES

Name	Description
Interval	Z-Wave module awakening period from sleep mode
LastWakeUp	Time from the last Z-Wave module awakening

METHODS

Name	Description
SetInterval	Sets the period of automatic awakening of the Z-Wave module from the sleep mode

EVENTS

Name	Description
OnWakeUp	An event that is triggered when the Z-Wave module wakes up from sleep mode

D. ZWAVE_CONFIG

The object displays information about parameters and communication with the module in the Z-Wave network. It allows setting advanced configuration parameters of a given module (specified individually in the manual).

Name	Description
NodeID	The number of the module (node) in the Z-Wave network (transmitted for each Z-Wave module after adding it to the controller)
Banned	 Information on blocking Z-Wave communication with the module: communication with the module is not blocked, blocked communication with the module (module banned). The blocking occurs when 3 consecutive attempts to communicate with the module fail (increment of the FailCount attribute by 3). A query is sent to the banned module every 1 minute - if the CLU receives a response, then the blocking will be removed and it is possible to try again to send the order to the module
FailCount	The number of unsuccessful attempts to communicate with the Z-Wave module. In case of failure of communication with the module (no response, confirmation, etc.), the feature is incremented by 1, then the attempt to repeat is twice (in 10s intervals). In case of failure, communication with the module is blocked (Banned = 1)
Register	The register number (parameter) of the configuration that has been read / set recently using the available methods
Value	The value of the configuration register (parameter) Note! Parameter 7 refers to the association of modules that is not supported by the Grenton system!

Name	Description
RemoveBan	It removes the blocking of communication with the Z-Wave module (in the case when the feature Banned = 1). Calling the method enables resending the command to the module. Note! RemoveBan is not synonymous with the correct communication with the module again - it allows re-sending the command / inquiry to the module! In case of failure, the entire blocking process is restarted!
ClearFailCount	Clears the number of unsuccessful communication attempts
Set	Sets the value of a given configuration (parameter) register Register (register or parameter number), Value (the value of the register or parameter), Size (size of the sent register or parameter value - in bytes) Note! Calling the Set method must be done after waking up the battery module! In order to wake up the module, please click the button in the module three times - after wake up the red LED will blink!*
Get	Gets the value of a given configuration (parameter) register Note! <i>Calling the Get method must be done after waking up the battery module!</i> In order to wake up the module, please click the button in the module three times - after waking up the red LED will blink!*
SetDefault	Sets the default value for a given configuration (parameter) register Note! Calling the <u>SetDefault</u> method must be done after waking up the battery module! In order to wake up the module, please click the button in the module three times - after wake up the red LED will blink!*

Name	Description
OnBanned	An event triggered when the device is banned

7. Heiman Smart Smoke Sensor

Module version: HS1SA-Z (HS1SA-Z HW: 255 FW: 1.10)

7.1. General information

The Z-Wave Heiman Smart Smoke Sensor module allows reading: status of the smoke sensor and battery level. In addition, it gives you the option of setting / reading the module's wake-up time.

Note!

Addition / removal is done by clicking the button three times in the HEIMAN module during inclusion / exclusion. Correctly carried out process will be confirmed by a five-fold blink of the diode.

7.2. Objects

A. BINARY_SENSOR

The object allows reading the status of the smoke sensor.

FEATURES

Name	Description
Value	Returns the input status: o - no violation, 1 - violation (smoke)

METHODS

EVENTS

Name	Description
OnValueChange	An event triggered when the status changes to the opposite
OnSwitchOn	An event triggered when the high state is set on input
OnSwitchOff	An event triggered when the low state is set on input

B. ZWAVE_BATTERY

The object allows reading the battery status. The reading takes place cyclically, every set time, for the Interval feature of the ZWAVE_WAKEUP object.

FEATURES

Name	Description
BatteryLevel	Battery level of the Z-Wave module (in percent)
WarningLevel	Battery level below which warning events are generated

METHODS

Name	Description
SetWarningLevel	Sets the warning level of the Z-Wave module battery

EVENTS

Name	Description
OnChange	An event triggered when the battery level changes
OnLowBattery	An event triggered when a battery drop is detected below the warning level
OnBatteryGood	An event triggered when the battery level returns to a value above the warning level

C. ZWAVE_WAKEUP

The object enables setting and reading the battery-awakening time of the Z-Wave module. The default value set by the CLU is 3600s (60 minutes). The minimum value is 300s (5 minutes); maximum 16777200s (about 194 days). It is possible to set values in step 60s (360s, 420s, 480s, etc.)

FEATURES

Name	Description
Interval	The period of automatic awakening of the Z-Wave module from the sleep mode (in seconds)
LastWakeUp	Time of the last awakening of the Z-Wave module from sleep mode

METHODS

Name	Description
SetInterval	Sets the period of automatic awakening of the Z-Wave module from the sleep mode

EVENTS

Name	Description
OnWakeUp	An event triggered when the Z-Wave module wakes up from sleep mode

D. ZWAVE_CONFIG

The object displays information regarding communication parameters with the module in the Z-Wave network.

Name	Description
NodeID	The number of the module (node) in the Z-Wave network (transmitted for each Z-Wave module after adding it to the controller)
Banned	 Information on blocking Z-Wave communication with the module: o - communication with the module is not blocked, 1 - blocked communication with the module (module banned). The blocking occurs when 3 consecutive attempts to communicate with the module fail (increment of the FailCount attribute by 3). A query is sent to the banned module every 1 minute - if the CLU receives a response, then the blocking will be removed and it is possible to try again to send the order to the module
FailCount	The number of unsuccessful attempts to communicate with the Z-Wave module. In case of failure of communication with the module (no response, confirmation, etc.), the feature is incremented by 1, then the attempt to repeat is twice (in 10s intervals). In case of failure, communication with the module is blocked (Banned = 1)

Name	Description
RemoveBan	It removes the blocking of communication with the Z-Wave module (in the case when the feature Banned = 1). Calling the method enables resending the command to the module. Note! RemoveBan is not synonymous with the correct communication with the module again - it allows re-sending an order / query to the module! In the event of failure, the entire blocking process is restarted!
ClearFailCount	Clears the number of unsuccessful communication attempts

EVENTS

Name	Description
OnBanned	An event triggered when the device is banned

8. INFIBITY Siren Alarm [NEO Coolcam]

Module version: NAS-AB01Z HW:48 FW: 2.90

8.1. General information

Operation of the Infibity Siren Alarm module includes the option of switching on / off the siren signal, reading the battery level, as well as setting and reading of the module wake up. Additionally, it is possible to change the configuration parameters.

How to add / remove: Addition / removal is done by clicking the button three times in the INFIBITY module during inclusion / exclusion. Correctly carried out process will be confirmed by a five-fold blink of the diode.

Note!

After CLU reboot (sending configuration), wait 10s before the first attempt to turn on the Siren Alarm module.

8.2. Objects

A. ZWAVE_DOUT

The object enables / disables and reads the current state of the siren.

FEATURES

Name	Description
Value	Returns the output state : 0 - low, 1 - high

METHODS

Name	Description
SetValue	Sets the output state as 1 or 0
Switch	Switches the output. The Time parameter determines how long the state change takes place, for 0 it is constant
SwitchOn	Turns on the output. The Time parameter determines how long the state change takes place, for 0 it is constant
SwitchOff	Turns off the output. The Time parameter determines how long the state change takes place, for 0 it is constant

EVENTS

Name	Description	
OnValueChange	An event triggered when the status changes to the opposite	
OnSwitchOn	An event triggered when the high state is set to output	
OnSwitchOff	An event triggered when the low state is set to the output	

B. ZWAVE_BATTERY

The object allows reading the battery status. The status read is done cyclically every set time for the Interval feature of the ZWAVE_WAKEUP object

Name	Description	
BatteryLevel	Battery level of the Z-Wave module in percent	
WarningLevel	Battery level below which warning events are generated	

Name	Description
SetWarningLevel	Sets the warning level of the Z-Wave module battery

EVENTS

Name	Description	
OnChange	An event triggered when the battery level changes	
OnLowBattery	An event triggered when a battery drop is detected below the warning level	
OnBatteryGood	An event triggered when the battery level returns to a value above the warning level	

C. ZWAVE_WAKEUP

An object enabling setting and reading of the battery Wake Up time of the Z-Wave module. The default setting value for the CLU is 3600s (5 minutes). The minimum value is 60s (1 minute); maximum 16777200s (about 194 days).

FEATURES

Name	Description	
Interval	The period of self-awakening of the Z-Wave module from the sleep mode in seconds	
LastWakeUp	Time of the last awakening of the Z-Wave module from sleep mode	

METHODS

Name	Description
SetInterval	Sets the period of automatic awakening of the Z-Wave module from the sleep mode

EVENTS

Name	Description
OnWakeUp	An event triggered when the Z-Wave module wakes up from sleep mode

D. ZWAVE_CONFIG

The object displays information about communication parameters with the module in the Z-Wave network. It also allows setting advanced configuration parameters of a given module (specified individually in the manual).

Setting register 7 changes the siren mode:

- As an **Alarm** the siren operates according to the parameter settings: 1,2,5,8
- As a **DoorBell** the siren operates according to the parameter settings: 3,4,6,9

FEATURES

Name	Description	
NodeID	The number of the module (node) in the Z-Wave network (transmitted for each Z-Wave module after adding it to the controller)	
Banned	 Information on blocking Z-Wave communication with the module: - communication with the module is not blocked, - blocked communication with the module (module banned). The blocking occurs when 3 consecutive attempts to communicate with the	
	module fail (increment of the FailCount attribute by 3). A query is sent to the banned module every 1 minute - if the CLU receives a response, then the blocking will be removed and it is possible to try again to send the order to the module	
FailCount	The number of unsuccessful attempts to communicate with the Z-Wave module. In case of failure of communication with the module (no response, confirmation, etc.), the feature is incremented by 1, then the attempt to repeat is twice (in 10s intervals). In case of failure, communication with the module is blocked ($Banned = 1$).	
	Note! After restarting the CLU, the <i>Switch Binary Switch</i> command is sent to the module, to which the module does not respond, so that FailCount is increased by 1.	
Register	The register number (parameter) of the configuration that has been read / set recently using the available methods	
Value	The value of the configuration register (parameter)	

Name	Description	
RemoveBan	It removes the blocking of communication with the Z-Wave module (in the case when the feature Banned = 1). Calling the method enables resending the command to the module.	
	Note! RemoveBan is not synonymous with the correct communication with the module again - it allows re-sending an order / query to the module! In the event of failure, the entire blocking process is restarted!	
ClearFailCount	Clears the number of unsuccessful communication attempts	
Set	Sets the value of a given configuration register (parameter): Register (register or parameter number), Value (the value of the register or parameter), Size (size of the sent register or parameter value - in bytes)	
	Note! Calling the <u>set</u> method must be done after waking up the battery module! In order to wake up the module, please click the button in the module three times - after wake up the red LED will blink!*	
Get	Gets the value of a given configuration (parameter) register	
SetDefault	Sets the default value for a given configuration (parameter) register	

Name	Description
OnBanned	An event triggered when the device is banned

9. Danfoss Living Connect

Module version: EU HW: 00 FW: 1.1

9.1. General information

The use of the Danfoss Living Connect module includes the possibility of setting the set temperature on the head, as well as switching on / off the key lock. It is also possible to read the battery level of the device and to define the module's wake-up period.

How to add / remove: To add / remove a device, 1x click the middle button on the module during inclusion / exclusion (called on the CLU) - the display backlight will blink quickly and then will turn on continuously. If after a long time of fast blinking the display backlight starts to blink slower, it means that the adding process has failed.

Before adding the device, one must leave the assembly mode indicated by "M" in the display.

9.2. Objects

A. ZWAVE_THERMOSTAT

An object that allows setting the temperature on the head as well as switching on/off the key lock.

Note!

Operation does not include reading the set temperature using the buttons on the head.

FEATURES

Name	Description
PointValue	Returns the set temperature value (4°C \div 28°C)
ProtectionState	Returns the key lock status: 0 - off, 2 - on

METHODS

Name	Description
SetPointValue	Sets the temperature (PointValue feature)
SetProtectionState	Sets the key lock status

EVENTS

Name	Description
OnPointValueChange	An event triggered when the temperature setpoint is changed
OnProtectionChange	An event triggered when the key lock state changes
OnProtectionOn	An event triggered when the key lock is activated
OnProtectionOff	An event triggered when the key lock is turned off

B. ZWAVE_BATTERY

The object allows reading the battery status. The status read is done cyclically every set time for the Interval feature of the ZWAVE_WAKEUP object

FEATURES

Name	Description
BatteryLevel	Battery level of the Z-Wave module in percent
WarningLevel	Battery level below which warning events are generated

Name	Description
SetWarningLevel	Sets the warning level of the Z-Wave module battery

Name	Description
OnChange	An event triggered when the battery level changes
OnLowBattery	An event triggered when a battery drop is detected below the warning level
OnBatteryGood	An event triggered when a battery level returns to a value above the warning level

C. ZWAVE_WAKEUP

An object enabling setting and reading of the battery Wake Up time of the Z-Wave module. The default setting for the CLU is 300s (5 minutes). The minimum value is 60s (1 minute); maximum 1800s (30 minutes). It is possible to set the value in step 60s (60s, 120s, 180s, etc.)

FEATURES

Name	Description
Interval	The period of self-awakening of the Z-Wave module from the sleep mode in seconds
LastWakeUp	Time of the last awakening of the Z-Wave module from sleep mode

METHODS

Name	Description
SetInterval	Sets the period of automatic awakening of the Z-Wave module from the sleep mode

EVENTS

Name	Description
OnWakeUp	An event that is triggered when the Z-Wave module wakes up from sleep mode

D. ZWAVE_CONFIG

The object displays information about communication parameters with the module in the Z-Wave network.

Name	Description
NodeID	The number of the module (node) in the Z-Wave network (transmitted for each Z-Wave module after adding it to the controller)
Banned	 Information on blocking Z-Wave communication with the module: o - communication with the module is not blocked, 1 - blocked communication with the module (module banned). The blocking occurs when 3 consecutive attempts to communicate with the module fail (increment of the FailCount attribute by 3). A query is sent to the banned module every 1 minute - if the CLU receives a response, then the blocking will be removed and it is possible to try again to send the order to the module
FailCount	The number of unsuccessful attempts to communicate with the Z-Wave module. In case of failure of communication with the module (no response, confirmation, etc.), the feature is incremented by 1, then the attempt to repeat is twice (in 10s intervals). In case of failure, communication with the module is blocked (Banned = 1)

Name	Description
RemoveBan	It removes the blocking of communication with the Z-Wave module (in the case when the feature Banned = 1). Calling the method enables resending the command to the module. Note! RemoveBan is not synonymous with the correct communication with the module again - it allows re-sending an order / query to the module! In the event of failure, the entire blocking process is restarted!
ClearFailCount	Clears the number of unsuccessful communication attempts

EVENTS

Name	Description
OnBanned	An event triggered when the device is banned

10. POPP Z-Weather

Module version: EU HW: 01 FW: 1.0

10.1. General information

Handling for the POPP Z-Weather module includes the ability to read climate parameters from the weather station. It is also possible to read the battery level of the device, as well as to define the module wake-up period.

How to add / remove: To add / remove the device, 3x click the button on the module within 1.5s during inclusion / exclusion (called on the CLU) - the red LED on the module will blink 3x when adding or 1x during deletion.

How to wake up: To wake up the device, click 1x on the device.

10.2. Objects

A. ZWAVE_WEATHER

An object enabling the reading of climatic parameters - temperature, luminance, relative humidity, wind speed, barometric pressure and dew point temperature.

FEATURES

Name	Description
Temperature	Returns the value of the measured air temperature (-10°C \div 60°C)
Luminance	Returns the value of the measured luminance (0% \div 100%)
Humidity	Returns the value of the measured relative humidity (0% \div 100%)
WindSpeed	Returns the value of the measured wind speed (0m/s \div 31m/s)
Pressure	Returns the value of the measured barometric pressure (600hPa \div 1200hPa)
DewPoint	Returns the value of the measured dew point temperature (-56,4°C \div 60°C)

EVENTS

Name	Description
OnTemperatureChange	An event triggered when the air temperature changes
OnLuminanceChange	An event triggered when the luminance value changes
OnHumidityChange	An event triggered when the relative humidity value changes
OnWindSpeedChange	An event triggered when the wind speed value changes
OnPressureChange	An event triggered when the barometric pressure value changes
OnDewPointChange	An event triggered when the dew point value changes

B. ZWAVE_BATTERY

The object allows reading the battery status. The status read is done cyclically every set time for the Interval feature of the ZWAVE_WAKEUP object

FEATURES

Name	Description
BatteryLevel	Battery level of the Z-Wave module in percent
WarningLevel	Battery level below which warning events are generated

Name	Description
SetWarningLevel	Sets the warning level of the Z-Wave module battery

Name	Description
OnChange	An event triggered when the battery level changes
OnLowBattery	An event triggered when a battery drop is detected below the warning level
OnBatteryGood	An event triggered when the battery level returns to a value above the warning level

C. ZWAVE_WAKEUP

An object enabling setting and reading of the battery Wake Up time of the Z-Wave module. The default setting for the CLU is 600s (about 10 minutes). The minimum value is 600s (about 10 minutes), maximum 17180s (about 286 minutes). It is possible to set the value in step 1s (600s, 601s, 602s, etc.)

FEATURES

Name	Description
Interval	The period of self-awakening of the Z-Wave module from the sleep mode in seconds
LastWakeUp	Time of the last awakening of the Z-Wave module from sleep mode

METHODS

Name	Description
SetInterval	Sets the period of automatic awakening of the Z-Wave module from the sleep mode

EVENTS

Name	Description
OnWakeUp	An event triggered when the Z-Wave module wakes up from sleep mode

D. ZWAVE_CONFIG

The object displays information about communication parameters with the module in the Z-Wave network.

Name	Description
NodeID	The number of the module (node) in the Z-Wave network (transmitted for each Z-Wave module after adding it to the controller)
Banned	 Information on blocking Z-Wave communication with the module: - communication with the module is not blocked, - blocked communication with the module (module banned). The blocking occurs when 3 consecutive attempts to communicate with the module fail (increment of the FailCount attribute by 3). A query is sent to the banned module every 1 minute - if the CLU receives a response, then the blocking will be removed and it is possible to try again to send the order to the module
FailCount	The number of unsuccessful attempts to communicate with the Z-Wave module. In case of failure of communication with the module (no response, confirmation, etc.), the feature is incremented by 1, then the attempt to repeat is twice (in 10s intervals). In case of failure, communication with the module is blocked (Banned = 1)

Name	Description
RemoveBan	It removes the blocking of communication with the Z-Wave module (in the case when the feature Banned = 1). Calling the method enables resending the command to the module. Note! RemoveBan is not synonymous with the correct communication with the module again - it allows re-sending an order / query to the module! In the event of failure, the entire blocking process is restarted!
ClearFailCount	Clears the number of unsuccessful communication attempts

EVENTS

Name	Description
OnBanned	An event triggered when the device is banned

11. FAKRO AMZ Solar

Module version: HW: 31 FW: 1.01:01.01

11.1. General information

Handling of the FAKRO AMZ Solar module includes the possibility of window control - both through the maximum opening / closing, as well as setting the window opening percentage, changing the operating mode (also seasonal mode), and defining the parameters operating in a given mode. In addition, it allows you to change the configuration parameters (Fakro configuration interface).

How to add / remove: Adding / removing the device is done by pressing the 'P' button on the device during inclusion / exclusion (called on the CLU).

11.2. Objects

ZWAVE_FAKRO

The object enables controlling the opening of the awning and reading the set opening percentage. It is possible to set the maximum value (opening / closing) as well as the percentage of the awning opening (0-100%). In addition, it is possible to set the device operating modes and parameters related to individual modes of operation.

Note!

Information on specific modes of operation can be found in the device documentation provided by the manufacturer.

FEATURES

Name	Description
State	Device state: 0 - lack of movement, 1 - upward movement, 2 - downward movement
Percent	 Percentage value of the awning opening, where: 0% - window closed, 100% - window opened Note! The value of the Percent feature is refreshed when the awning controller completes the work - it should be taken into account when using this feature eg for the Slider component.
Mode	Device operation mode: 0 - Manual - Manual, 1 - Semiauto - Semiautomatic, 2 - Auto - Automatic
SeasonMode	Seasonal mode of the device 0 - Summer - Summer, 1 - Winter - Winter Note! Parameter does not apply to manual mode Mode = 0
OpeningTime	The awning opening time in semi-automatic mode
Sensitivity	The sensitivity of the sun exposure level for the awning in automatic mode

Note!

The value of the set configuration parameters is refreshed at the time of WakeUp of the given device (values are taken from the Z-Wave device).

Name	Description
Up	Awning up
Down	Awning down
Stop	Stop if the awning is in motion
Start	Awning up if previously move down, awning down if previously move up
SetPercent	Sets the percentage, where 100% - awning opened
SetMode	Sets the device's operating mode
SetSeasonMode	Sets the seasonal mode
SetOpeningTime	Sets the awning opening time
SetSensitivity	Sets the sensitivity of the sun exposure level

Name	Description
OnChange	An event triggered when the window controller state changes
OnUp	An event will trigger at the time of changing from Stop to Up
OnDown	An event triggered when the state changes from Stop to Down
OnStart	An event triggered when the Start command is called
OnStop	An event triggered when the Stop command is issued

ZWAVE_CONFIG

The object displays information about communication parameters with the module in the Z-Wave network. It allows setting advanced configuration parameters of a given module (specified individually in the manual).

Name	Description
NodeID	The number of the module (node) in the Z-Wave network (transmitted for each Z-Wave module after adding it to the controller)
Banned	 Information on blocking Z-Wave communication with the module: o - communication with the module is not blocked, 1 - blocked communication with the module (module banned). The blocking occurs when 3 consecutive attempts to communicate with the module fail (increment of the FailCount attribute by 3). A query is sent to the banned module every 1 minute - if the CLU receives a response, then the blocking will be removed and it is possible to try again to send the order to the module
FailCount	The number of unsuccessful attempts to communicate with the Z-Wave module. In case of failure of communication with the module (no response, confirmation, etc.), the feature is incremented by 1, then the attempt to repeat is twice (in 10s intervals). In case of failure, communication with the module is blocked ($Banned = 1$)
Register	The register number (parameter) of the configuration that has been read / set recently using the available methods
Value	The value of the configuration register (parameter)

Name	Description
RemoveBan	It removes the blocking of communication with the Z-Wave module (in the case when the feature Banned = 1). Calling the method enables resending the command to the module. Note! RemoveBan it is not synonymous with the correct communication with the module again - it allows re-sending an order / query to the module! In the event of failure, the entire blocking process is restarted!
ClearFailCount	Clears the number of unsuccessful communication attempts
Set	Sets the value of a given configuration register (parameter): Register (register or parameter number), Value (the value of the register or parameter), Size (size of the sent register or parameter value - in bytes)
Get	Gets the value of a given configuration (parameter) register
SetDefault	Sets the default value for a given configuration (parameter) register

EVENTS

Name	Description
OnBanned	An event triggered when the device is banned

12. FAKRO ARF

12.1. General information

Operation of the FAKRO ARF module includes the option of controlling the roller - both the maximum opening / closing and the setting of the opening percentage of the roller.

How to add / remove: Adding / removing the device is done by pressing the 'P' button on the device during inclusion / exclusion (called on the CLU).

12.2. Objects

A. ZWAVE_FAKRO

An object that allows you to control the roller and read the set percentage of opening. It is possible to set the maximum value (opening / closing) as well as giving the percentage of the roller opening (0-100%).

FEATURES

Name	Description
State	Roller state: 0 - Lack of movement 1 - upward movement 2 - downward movement
	The opening percentage of the roller, where: 0% - roller closed, 100% - roller opened
Percent	 Note! The value of the Percent feature is refreshed when the roller completes the work - it should be taken into account when using this feature eg for the Slider component. Note! Calling the stop method while roller is in movement does not refresh the Percent feature

METHODS

Name	Description
Up	Roller upward
Down	Roller downward
Stop	Stop, if roller is in movement
Start	Roller up If previously move down, roller down If previously move up
SetPercent	Sets the percentage, where 100% - roller opened

EVENTS

Name	Description
OnChange	An event triggered when the roller state is changed
OnUp	An event triggered when the state changes from Stop to Up
OnDown	An event triggered when the state changes from Stop to Down
OnStart	An event triggered when the Start command is called
OnStop	An event triggered when the Stop command is issued

B. ZWAVE_CONFIG

The object displays information about communication parameters with the module in the Z-Wave network.

FEATURES

Name	Description
NodeID	The number of the module (node) in the Z-Wave network (transmitted for each Z-Wave module after adding it to the controller)
Banned	 Information on blocking Z-Wave communication with the module: - communication with the module is not blocked, - blocked communication with the module (module banned). The blocking occurs when 3 consecutive attempts to communicate with the module fail (increment of the FailCount attribute by 3). A query is sent to the banned module every 1 minute - if the CLU receives a response, then the blocking will be removed and it is possible to try again to send the order to the module
FailCount	The number of unsuccessful attempts to communicate with the Z-Wave module. In case of failure of communication with the module (no response, confirmation, etc.), the feature is incremented by 1, then the attempt to repeat is twice (in 10s intervals). In case of failure, communication with the module is blocked (Banned = 1)

Name	Description
RemoveBan	It removes the blocking of communication with the Z-Wave module (in the case when the feature Banned = 1). Calling the method enables resending the command to the module. Note! RemoveBan is not synonymous with the correct communication with the module again - it allows re-sending an order / query to the module! In the event of failure, the entire blocking process is restarted!
ClearFailCount	Clears the number of unsuccessful communication attempts

13. FAKRO FTP_V

Module version: HW: 25 FW: 1.01:01.01**

13.1. General information

FAKRO FTP_V module support includes window control - both through maximum opening / closing and setting the percentage of window opening.

How to add / remove: Adding / removing the device is done by pressing the 'P' button on the device during inclusion / exclusion (called on the CLU).

13.2. Objects

A. ZWAVE_FAKRO

An object that allows you to control the opening of the window and read the set percentage of opening. It is possible to set the maximum value (opening / closing), and also to give the window's opening percentage (0-100%).

FEATURES

Name	Description
State	Device state: • Lack of movement, • opening, • closing
Percent	The percentage of window opening where: 0% - window closed, 100% - window opened
	Note! The value of the <i>Percent</i> feature is refreshed when the window controller finishes the work - it should be taken into account when using this feature eg for the Slider component.
WaterSensor	Value from the rain sensor

Name	Description
Open	Opening the window
Close	Closing the window
Stop	Stop if the window is being opened or closed
Start	Closing the window if it was previously opened, opening the window if it was previously closed
SetPercent	Sets the percentage, where 100% - the window is open

Name	Description
OnChange	An event triggered when the window controller state changes
OnOpen	An event triggered when the state changes from Stop to Open
OnClose	An event triggered when the state changes from Stop to Close
OnStart	An event triggered when the Start command is called
OnStop	An event triggered when the Stop command is called
OnRainChange	An event triggered when the sensor state changes to the opposite one
OnRainOn	An event triggered when the high state is set on the sensor
OnRainOff	An event triggered when the low state is set on the sensor

B. ZWAVE_CONFIG

The object displays information about communication parameters with the module in the Z-Wave network.

Name	Description
NodeID	The number of the module (node) in the Z-Wave network (transmitted for each Z-Wave module after adding it to the controller)
Banned	 Information on blocking Z-Wave communication with the module: - communication with the module is not blocked, - blocked communication with the module (module banned). The blocking occurs when 3 consecutive attempts to communicate with the module fail (increment of the FailCount attribute by 3). A query is sent to the banned module every 1 minute - if the CLU receives a response, then the blocking will be removed and it is possible to try again to send the order to the module
FailCount	The number of unsuccessful attempts to communicate with the Z-Wave module. In case of failure of communication with the module (no response, confirmation, etc.), the feature is incremented by 1, then the attempt to repeat is twice (in 10s intervals). In case of failure, communication with the module is blocked (Banned = 1)
Register	The register number (parameter) of the configuration that has been read / set recently using the available methods
Value	The value of the configuration register (parameter)

Name	Description
RemoveBan	It removes the blocking of communication with the Z-Wave module (in the case when the feature Banned = 1). Calling the method enables resending the command to the module. Note! RemoveBan is not synonymous with the correct communication with the module again - it allows re-sending an order / query to the module! In the event of failure, the entire blocking process is restarted!
ClearFailCount	Clears the number of unsuccessful communication attempts
Set	Sets the value of a given configuration register (parameter): Register (register or parameter number), Value (the value of the register or parameter), Size (size of the sent register or parameter value - in bytes)
Get	Gets the value of a given configuration (parameter) register
SetDefault	Sets the default value for a given configuration (parameter) register

EVENTS

Name	Description
OnBanned	An event triggered when the device is banned

14. FAKRO ZWMR 24

Note!

The module service is available from CLU version 05.11.01 (build 2302A).

14.1. General information

FAKRO ZWMR24 module includes the ability to control the roller shutter - both maximum opening/closing and setting the percentage of the roller shutter opening.

Roller shutter movement time is based on the detection of current overload or underload on the control circuit. These values are set via specific registers of the device. Detailed information on parameter settings and modes of operation of S1 and S2 inputs can be found in the manufacturer's documentation of the FAKRO ZWMR24 module.

How to add / remove: Adding / deleting a device is done by pressing the button on the device during inclusion / exclusion (called on CLU).

Note!

The object does not take over information about the real state of the device controlled by inputs S1 and S2.

14.2. Objects

Object enabling the roller shutter control (up / down / stop). The condition of the roller shutter is determined on the basis of the called methods.

A. ZWAVE_ROLLER_SHUTTER

FEATURES

Name	Description
OUT1	State of OUT1 relay (moving upwards)
OUT2	State of OUT2 relay (moving downwards)
State	Output state: 0 - no movement, 1 - moving upwards, 2 - moving downwards
Position	Percentage value of the shutter opening:

Name	Description
Up	Roller shutter up or STOP if moving
Down	Roller shutter down or STOP if moving
Start	Roller shutter up if the preceding motion was down or roller shutter down if the preceding motion was up
Stop	STOP if moving
Hold	Hold with direction change
HoldUp	Hold always down
HoldDown	Hold always up
SetPosition	Shutter opening percentage setting: 0 % - fully closed, 1 00% - fully open

FEATURES

Name	Description
OnChange	Result from a change in the state of any of the outputs
OnUp	Occurs when changing the Stop state to the Up state
OnDown	Occurs when changing the Stop state to the Down state
OnStart	Occurs when Start is requested
OnStop	Occurs when Stop is requested

B. ZWAVE_CONFIG

The object displays information about communication parameters with the module in the Z-Wave network. It enables to set advanced configuration parameters of a given module.

Name	Description
Register	Register (parameter) number
Value	Register (parameter) value
NodeID	Module's number (node) in the Z-Wave network
Banned	Returns information about communication with module: o - communication with the module is not blocked, 1 - blocked communication with the module (module banned)
FailCount	The number of failed communication attempts with the Z-Wave module

Name	Description
Set	Sets the value of the register (parameter)
Get	Gets the value of a given register (parameter)
SetDefault	Sets the default value for register (parameter)
RemoveBan	Removes the blockade of communication with the Z-Wave module
ClearFailCount	Cleans the number of failed communication attempts

Name	Description
OnBanned	Occurs when Z-Wave device is banned

15. FAKRO ZWS 230

Note!

The module service is available from CLU version 05.11.01 (build 2302A).

15.1. General information

FAKRO ZWS 230 module includes the ability to control the window and detect water using a rain sensor.

How to add / remove: Adding / removing a device is done by pressing the red button on the device during inclusion / exclusion (triggered on CLU).

15.2. Objects

A. ZWAVE_FAKRO_ZWS

Note!

The object does not take over information about the real state of the device controlled from the button located on the module.

FEATURES

Name	Description
State	Device state: • no movement, • opening, • closing
WaterSensor	Water sensor value

Name	Description
Open	Opening the window
Close	Closing the window
Stop	Stop if window is opening or closing
Start	Opening the window if the preceding motion was closing or closing the window if the preceding motion was opening

Name	Description
OnChange	Result from a change in the window state
OnOpen	Occurs when changing the Stop state to the Up state
OnClose	Occurs when changing the Stop state to the Down state
OnStart	Occurs when Start is requested
OnStop	Occurs when Stop is requested
OnRainChange	Occurs when a change in the sensor state takes place (regardless of the value)
OnRainOn	Occurs when the high state is set at sensor
OnRainOff	Occurs when the low state is set at sensor

B. ZWAVE_CONFIG

The object displays information about communication parameters with the module in the Z-Wave network.

FEATURES

Name	Description
NodeID	Module's number (node) in the Z-Wave network
Banned	Returns information about communication with module: o - communication with the module is not blocked, 1 - blocked communication with the module (module banned)
FailCount	The number of failed communication attempts with the Z-Wave module

Name	Description
RemoveBan	Removes the blockade of communication with the Z-Wave module
ClearFailCount	Cleans the number of failed communication attempts

Name

Description

OnBanned

Occurs when Z-Wave device is banned

16. Fibaro RGBW

Module version: *FGRGBWM-441 v2/5 EU*

16.1. General information

The Z-Wave Fibaro RGBW module allows you to read and set the status of individual R, G, B, W output channels in the range from 0 to 255. In addition, it allows you to change the configuration parameters (Fibaro configuration interface).

16.2. Objects

A. ZWAVE_RGBW_LED

The object enables setting values (0-255) for individual output channels R, G, B, W. It is also possible to read these values - e.g. set directly from the button connected to the module.

Note!

The value from the attached button is sent when it is released or brought to the minimum / maximum value!

FEATURES

Name	Description
Red	The value of the R component (0-255) - red
Green	The value of the G component (0-255) - green
Blue	The value of the B component (0-255) - blue
White	The value of the W component (0-255) - white
RampTime	Rise / fall time of the dimmer value change in milliseconds. The value of this feature affects the actions triggered by CLU - it does not affect the rise / fall time after pressing the buttons connected directly to the module

Name	Description
SetRed	Sets the value of the R component (0-255) - red
SetGreen	Sets the value of the G component (0-255) - green
SetBlue	Sets the value of the B component (0-255) - blue
SetWhite	Sets the value of the W component (0-255) - white
SetRampTime	Sets the rise / fall time of the dimmer value change

Name	Description
OnChange	An event dispatched when the dimmer value is changed
OnSwitchOn	An event dispatched when the dimmer is switched on
OnSwitchOff	An event dispatched when the dimmer is switched off

B. ZWAVE_CONFIG

The object displays information regarding parameters and communication with the module in the Z-Wave network. It allows you to set advanced configuration parameters for a given module (specified individually in the manual).

Note!

For Fibaro RGBW modules already added to the project - the ZWAVE_CONFIG object will be added only when the module is completely removed from the project and after CLU Discovery.

Name	Description
NodeID	Module (node) number in the Z-Wave network (assigned for each Z-Wave module after adding it to the controller)
Banned	Information on blocking Z-Wave communication with the module: 0 - communication with the module is not blocked, 1 - blocked communication with the module (banned module). Blocking occurs when 3 consecutive attempts to communicate with the module fail (incrementing the FailCount feature by 3). A request is sent to the banned module every 1.5 minutes - if the CLU receives a response, then the blocking will be removed and it is possible to retry sending the order to the module
FailCount	Number of failed communication attempts with the Z-Wave module. In the event of communication failure with the module (no response, confirmation, etc.), the feature is incremented by 1, then the retry is attempted twice (in 15s intervals). In case of failure, communication with the module is blocked (Banned = 1)
Register	Number of the configuration register (parameter) that has been recently read / set using the available methods
Value	Value of the configuration register (parameter)

Name	Description
RemoveBan	Removes the blocking of communication with the Z-Wave module (in case the Banned = 1 feature). Calling the method enables the command to be sent again to the module. Note! The RemoveBan feature is not synonymous with correct correct communication with the module again - it allows you to resend the command / query to the module! In case of failure the whole blocking process is restarted!
ClearFailCount	Clears the number of failed communication attempts
Set	<pre>Sets the value of a given configuration register (parameter): 1 - Register (register or parameter number), 2 - Value (register or parameter value), 3 - Size (size of sent register value or parameter - in bytes)</pre>
Get	Gets the value of the given configuration register (parameter)
SetDefault	Sets the default value for a given configuration register (parameter)

EVENTS

Name	Description
OnBanned	An event dispatched when the device is banned

17. Remotec ZXT-120

17.1. General information

The handling of the Remotec ZXT-120 module includes the possibility of learning and sending IR code, defining transmission parameters and reading the learning status of a given code by the device. It is also possible to define the module wake-up period.

How to add / remove: 1x click the *PROG* button in the module during inclusion / exclusion - the red LED will flash 1x and then it will turn on continuously.

How to restore the device to factory settings: hold down the *PROG* button on the device for 10 seconds. After about 5 seconds, the red LED will light up and then start blinking twice at the end of the process (about 10 seconds).

17.2. Description of device configuration

The device can be configured in two ways:

- 1. Teaching your own IR codes
- 2. Use from the list of pre-defined codes available in the internal IR code library

A. The way of teaching IR codes

- 1. Learning codes is done using the main object ZWAVE_IR1
- 2. Call the method SetAcDeviceNumber with the parameter AcDeviceNumber equal to '0000' sets the device in the mode of teaching new codes (outside the pre-defined list). After calling the method, the LED diode will blink 2x on the module.
- 3. Call the LearnCode method giving the IR code number from the range 0-22 under which we want the code to be saved. After calling the method, the LED on the device should go out and light up again.
- 4. Within 15 seconds, press and hold the remote control button that you want to learn by pointing the remote control towards the top of the device at a distance of 1-3 cm.
 - If the IR code is programmed correctly, the LED on the device should blink 2x.
 - In case of failure, the LED on the device should blink 6x.

The learning status can also be read from the LearningStatus parameter. In addition, appropriate events are generated depending on the learning status (OnLearning, OnLearningOK, OnLearningFail)

Note!

The position of the remote control relative to the device during learning is crucial. It is recommended that the remote control is stationary relative to the device when the button is pressed. Incorrect position can cause the stored code to be incorrect despite the correct learning status.

Note!

Memory of learned codes is saved after disconnecting the device's power supply. This memory is cleared after changing the AC device number and after removing the device from the Z-Wave network.

B. The way of sending IR codes

- 1. Call the SendCode method specifying the number of the learned IR code from the range 0-22.
- 2. After calling the method, the LED on the device should go out and light up again and the assigned code is sent to the target device.

Note!

The external transmitter has very low power and a small angle of light, so they should be placed near the IR receiver of the controlled device and properly directed. The light direction of the IR transmitters is consistent with the axis of the cable entering the IR transmitter housing.

Note!

It is recommended not to change the AC device number (AcDeviceNumber feature) if you do not use the internal IR code of the device.

17.3. Objects

A. ZWAVE_IR

The object allows reading and writing of configuration parameters and sending IR codes.

FEATURES

Name	Description
AcDeviceNumber	Returns the number of the AC device from the internal library of IR codes (number from the ZXT-120 Code List)
EmitterPower	Returns the power of the external (connected) infrared transmitter:
LearningStatus	 Returns the status of learning the IR codes: I - IR channel idle, I - learning successful, - the learning procedure is in progress, I - learning failed
SurroundIrControl	Multidirectional IR signal transmission: 0 - Disabled, 255 - Enabled

Note!

The value of the set configuration parameters is refreshed at the time of <code>wakeUp</code> of the given device (values are taken from the Z-Wave device). For the time of configuring the device parameters (<code>SetAcDeviceNumber</code>, <code>SetEmitterPower</code>, <code>SetSurroundIrControl</code>) and correct reading of the set features, it is possible to set the WakeUpInterval` time for less than 60s. After making changes and completing the configuration of the above parameters, change the waking time to at least 60s.

Name	Description
SendCode	Sends an IR code with a specific number (code number in the range 0-22, learned or available in the internal IR code library for a given AC device)
LearnCode	Invokes the learning mode of the IR code with a specific number (code number in the range 0-22)
SetAcDeviceNumber	Sets the AC device number from the internal IR code library (number from the ZXT-120 Code List)
SetEmitterPower	Sets the power of the external infrared transmitter
SetSurroundIrControl	Sets the multidirection of the IR signal

Name	Description
OnIrSend	An event triggered when the IR code is sent
OnLearningStatusChange	An event triggered when the status of the IR code learning mode changes
OnLearningOK	An event triggered when the status of learning the IR code changes to "OK"
OnLearning	An event triggered when the IR learning mode status changes to "Learning"
OnLearningFail	An event triggered when the IR learning mode status changes to "Learning Fail"

B. ZWAVE_BATTERY

The object allows reading the battery status. The status read is done cyclically every set time for the Interval feature of the ZWAVE_WAKEUP object

FEATURES

Name	Description
BatteryLevel	Battery level of the Z-Wave module in percent
WarningLevel	Battery level below which warning events are generated

Name	Description
SetWarningLevel	Sets the warning level of the Z-Wave module battery

Name	Description
OnChange	An event triggered when the battery level changes
OnLowBattery	An event triggered when a battery drop is detected below the warning level
OnBatteryGood	An event triggered when the battery level returns to a value above the warning level

C. ZWAVE_WAKEUP

An object that allows setting and reading the reading time of the Z-Wave module parameters. The default setting value for the CLU is 3600s (60 minutes). The minimum value is 10s, maximum 16777200s (about 194 days). It is possible to set the value in step 5s.

Note!

It is not recommended to set the value of the WakeUp feature less than 60s during normal device operation. Decreasing the value may be useful only in the case of 'teaching' codes by the device (generating changes in the status of learning mode, as well as reading the LearningStatus feature), as well as in setting configuration parameters

FEATURES

Name	Description
Interval	The period of self-awakening of the Z-Wave module from the sleep mode in seconds
LastWakeUp	Time of the last awakening of the Z-Wave module from sleep mode

METHODS

Name	Description
SetInterval	Sets the period of automatic awakening of the Z-Wave module from the sleep mode

EVENTS

Name	Description
OnWakeUp	An event triggered when the Z-Wave module wakes up from sleep mode

D. ZWAVE_CONFIG

The object displays information about communication parameters with the module in the Z-Wave network.
Name	Description
NodeID	The number of the module (node) in the Z-Wave network (transmitted for each Z-Wave module after adding it to the controller)
Banned	 Information of blocking Z-Wave communication with the module: o - communication with the module is not blocked, 1 - blocked communication with the module (module banned). The blocking occurs when 3 consecutive attempts to communicate with the module fail (increment of the FailCount feature by 3). A query is sent to the banned module every 1.5 minutes - if the CLU receives a response, then the blocking will be removed and it is possible to try again to send the order to the module
FailCount	The number of unsuccessful attempts to communicate with the Z-Wave module. In case of failure of communication with the module (no response, confirmation, etc.), the feature is incremented by 1, then the attempt to repeat is twice (in 10s intervals). In case of failure, communication with the module is blocked (Banned = 1)

Name	Description
RemoveBan	It removes the blocking of communication with the Z-Wave module (in the case when the feature Banned = 1). Calling the method enables resending the command to the module. Note! RemoveBan it is not synonymous with the correct communication with the module again - it allows re-sending an order / query to the module! In the event of failure, the entire blocking process is restarted!
ClearFailCount	Clears the number of unsuccessful communication attempts

EVENTS

Name	Description
OnBanned	An event triggered when the device is banned

18. Remotec ZXT-310

Module version: ZXT-310EU HW: 00 FW: 1.10

18.1. General information

The support of the ZXT-310 Remotec module includes handling for learning and sending IR code, defining transmission parameters and reading the learning status of a given code by the device. It is also possible to define the module's wake-up period.

How to add / remove: 1x click the *PROG* button in the module during inclusion / exclusion - the red LED will flash 1x and then will turn on continuously.

If the LED blinks 6x, it means that the adding process has failed.

How to restore the device to the factory settings: hold down the PROG button

device for 10 seconds. After the procedure, the red LED should turn off and turn on again.

Port 1 is the internal IR LEDs of the device. Ports 2-6 are the external IR ports of the device, to which the cables connected to the set with IR transmitters are connected.

18.2. Device configuration

A. The way of teaching IR codes

- 1. Learning codes is done using the main object ZWAVE_IR1
- 2. Select the Endpoint to which codes will be assigned by calling the SetEndpointNumber method. Each Endpoint has a representation in the form of an object (ZWAVE_IR_EP1, ... ZWAVE_IR_EP6)
- 3. Call the LearnCode method giving the IR code number between 1-384 at which we want the code to be saved. After calling the method, the LED on the device should turn off and light up again.
- 4. Within 15 seconds, press and hold the button on the remote control that you want to learn by pointing the remote control towards the "L" mark on the unit's casing at a distance of 1-3 cm.
 - If the IR code is programmed correctly, the LED on the device should blink 2x.
 - In case of failure, the LED on the device should blink 6x.

The learning status can also be read from the LearningStatus parameter. In addition, appropriate events are generated depending on the learning status (OnLearning, OnLearningOK, OnLearningFail, OnCommandFull)

Learning codes must be done for each endpoint separately. The maximum number of codes you can remember is 6 * 64.

Note!

The position of the remote control relative to the device during learning is crucial. It is recommended that the remote control is stationary relative to the device when the button is pressed. Incorrect position can cause the stored code to be incorrect despite the correct learning status.

Note!

Memory of learned codes is saved after disconnecting the device's power supply. This memory is cleared after changing the AV device number and after removing the device from the Z-Wave network.

B. The method of sending IR codes

- 1. Call the SendCode method specifying the number of the learned IR code from 1-384.
- 2. After calling the method, the LED on the device should go out and light up again, and the assigned code is sent to the target device.

Note!

Sending codes can be performed for each of the six endpoints directly by selecting one of the ZWAVE_IR_EP objects or indirectly by selecting the ZWAVE_IR object and configuring the endpoint number.

C. Endpoints configuration

Endpoints (ZWAVE_IR_EP1, ZWAVE_IR_EP2, itd.) can be configured in two ways:

- indirectly through a common ZWAVE_IR object in this case, first set the endpoint number, which will be configured using the SetEndpointNumber method.
- directly through individual ZWAVE_IR_EP objects coherent to individual endpoints. For a common ZWAVE_IR object

You can assign a different IR port to each endpoint. There are 6 IR ports available. By default, port 1 is assigned to all endpoints. Port 1 is the device's internal IR LEDs. Ports 2-6 are the external IR ports of the device, to which the cables connected to the set with IR transmitters are connected.

After assigning an IR port to a given endpoint, you can set other parameters such as IR power (external transmitters only) and transmission mode.

Note!

External transmitters have very low power and a small lighting angle, so they should be available near the IR receiver of the controlled device and properly directed. The light direction of the IR transmitters is coherent with the axis of the cable entering the IR transmitter housing.

Note!

It is recommended not to change the AV device number (feature AvDeviceNumber) if you do not use the internal IR code of the device.

18.3. Objects

A. ZWAVE_IR

The object enables reading and writing configuration parameters of the previously selected endpoint and sending IR codes via this defined endpoint.

Name	Description
PortRouting	Returns the IR port number assigned to the currently selected endpoint (1 - internal IR port, 2 \div 6 - external IR ports)
AvDeviceNumber	Returns the number of the AV device from the internal IR code library assigned to the currently selected endpoint (four-digit number from the ZXT-310 Code List)
EmitterPower	Returns the power of the external infrared transmitter to the set IR port:
TransmissionMode	Returns the IR code transmission mode: 0 - continuous transmission, 255 - single pulse
EndpointNumber	Returns the number of the controlled endpoint (1 \div 6)
FirmwareVersion	Returns the version number of the software
LibraryVersion	Returns the version number of the built-in IR code library
LearningStatus	 Returns the status of learning IR codes: I - IR channel idle, I - learning successful, - learning procedure on progress, - the maximum number of codes for a given Endpoint has been reached, - learning failed

Note!

The value of the set configuration parameters is refreshed at the time of WakeUp of the given device (values are taken from the Z-Wave device). For the time of configuration of the device parameters (SetAvDeviceNumber, SetEmitterPower, SetTransmissionMode, SetPortRouting) and correct reading of set features, it is possible to set the WakeUpInterval time for less than 60s. After making changes and completing the configuration of the above parameters, change the waking time to at least 60s.

METHODS

Name	Description
SendCode	Sends an IR code with a specific number (code number in the 1-384 range, learned or available in the internal IR code library for the given AV device)
LearnCode	Invokes the learning mode of the IR code with a specific number (code number in the 1-384 range)
SetPortRouting	Sets the IR port number to be assigned to the currently selected endpoint
SetAvDeviceNumber	Sets the AV device number from the internal IR code library assigned to the currently selected endpoint (four-digit number from the ZXT- 310 Code List)
SetEmitterPower	Sets the power of the external infrared transmitter
	Note! Parameter <i>EmmitterPower</i> is not configurable for port 1
SetTransmissionMode	Sets the IR code transmission mode
SetEndpointNumber	Sets the endpoint number to be controlled (1 \div 6)

EVENTS

Name	Description
OnIrSend	An event triggered when the IR code is sent
OnLearningStatusChange	An event triggered when the status of the IR code learning mode changes
OnLearningOK	An event triggered when the status of learning IR code changes to <i>"OK"</i>
OnLearning	An event triggered when the IR learning mode status changes to "Learning"
OnLearning	An event triggered when the IR learning mode status changes to "Command Full"
OnLearningFail	An event triggered when the IR learning mode status changes to "Learning Fail"

B. ZWAVE_IR_EP

The object enables direct reading and writing of endpoint configuration parameters to which it relates, as well as sending IR codes via this endpoint. By default, port 1 is assigned to all endpoints (the value of the PortRouting attribute).

Note!

In order for each subsequent object (ZWAVE_IR_EP1, ZWAVE_IR_EP2, etc.) to refer to the next port of the device (1-6), the <code>PortRouting</code> feature should be set first, for example: ZWAVE_IR_EP1 - <code>PortRouting</code>: 1 ZWAVE_IR_EP2 - PortRouting: 2

ZWAVE_IR_EP6 - PortRouting: 6

then send the configuration.

FEATURES

...

Name	Description
PortRouting	Returns the number of the IR port assigned to the endpoint (1 - internal IR port, 2 \div 6 - external IR ports)
AvDeviceNumber	Returns the number of the AV device from the internal IR code library assigned to the endpoint (four-digit number from the ZXT-310 Code List)
EmitterPower	Returns the power of the external infrared transmitter to the set IR port: 0 - normal power 255 - high power Note! The EmmitterPower parameter is not configurable for port 1
TransmissionMode	Returns the IR code transmission mode: 0 - continous transmission, 255 - single pulse

METHODS

Name	Description
SendCode	Sends an IR code with a specific number (code number 1-465, learned or available in the internal IR code library for the given AV device)
SetPortRouting	Sets the IR port number to be assigned to the currently selected endpoint
SetAvDeviceNumber	Sets the AV device number from the internal IR code library assigned to the currently selected endpoint (four-digit number from the ZXT-310 Code List)
SetEmitterPower	Sets the power of the external infrared transmitter Note! Parameter EmmitterPower is not configurable for port 1
SetTransmissionMode	Sets the IR code transmission mode

EVENTS

Name	Description
OnIrSend	An event triggered when the IR code is sent

C. ZWAVE_WAKEUP

An object that allows setting and reading the reading time of the Z-Wave module parameters. The default setting value for the CLU is 3600s (60 minutes). The minimum value is 10s, maximum 16777200s (about 194 days). It is possible to set the value in step 5s.

Note!

It is not recommended to set the value of the WakeUp feature less than 60s during normal device operation. Decreasing the value can be useful in the case of 'teaching' codes by the device (generation of events changing the status of learning mode, as well as reading the LearningStatus feature), as well as setting configuration parameters.

FEATURES

Name	Description
Interval	The period of self-awakening of the Z-Wave module from the sleep mode in seconds
LastWakeUp	Time of the last awakening of the Z-Wave module from sleep mode

METHODY

Name	Description
SetInterval	Sets the period of automatic awakening of the Z-Wave module from the sleep mode

EVENTS

Name	Description
OnWakeUp	An event triggered when the Z-Wave module wakes up from sleep mode

D. ZWAVE_CONFIG

The object displays information about communication parameters with the module in the Z-Wave network.

Name	Description
NodeID	The number of the module (node) in the Z-Wave network (transmitted for each Z-Wave module after adding it to the controller)
Banned	 Information of blocking Z-Wave communication with the module: communication with the module is not blocked, blocked communication with the module (module banned). The blocking occurs when 3 consecutive attempts to communicate with the module fail (increment of the FailCount feature by 3). A query is sent to the banned module every 1.5 minutes - if the CLU receives a response, then the blocking will be removed and it is possible to try again to send the order to the module
FailCount	The number of unsuccessful attempts to communicate with the Z-Wave module. In the case of failure of communication with the module (no response, confirmation, etc.), the feature is incremented by 1, then the attempt to repeat is twice (in 30s intervals). In case of failure, communication with the module is blocked (Banned = 1)

Name	Description	
RemoveBan	It removes the blocking of communication with the Z-Wave module (in the case when the feature Banned = 1). Calling the method enables resending the command to the module. Note! RemoveBan it is not synonymous with the correct communication with the module again - it allows re-sending an order / query to the module! In the event of failure, the entire blocking process is restarted!	
ClearFailCount	Clears the number of unsuccessful communication attempts	

EVENTS

Name	Description
OnBanned	An event triggered when the device is banned

19. Aeotec Nano Switch

Module version: ZW116-C

19.1. General information

Note!

The module service is available from CLU version 5.06.03 (*build 2043*).

Aeotec Nano Switch support includes the ability to turn on / off, permanently or for a specified period of time, the module output and read its status. The device can be controlled by the methods of the ZWAVE_DOUT object or by means of external switches connected to the Nano Switch inputs. Their configuration (operation mode) is possible by changing the appropriate parameters specified individually in the module manual.

After Inclusion the module to the CLU Z-Wave , basic parameters configuring the operation of switches are set:

Parameter	Default Value
120 - external switch mode for S1	1 - 2-state switch mode
121 - external switch mode for S2	1 - 2-state switch mode

Operation of S1, S2 inputs: S1, S2 inputs directly control the module output:

- High state of input -> output switched on,
- Low state of input -> output switched off.

How to add / remove: Adding / removing the device is done by pressing button on the Nano Switch during Inclusion / Exclusion (called on the CLU).

Note!

After CLU reboot (sending configuration), wait 10 seconds before the first attempt to turn on the Nano Switch module.

19.2. Objects

A. ZWAVE_DOUT

Object that enables the device to be turned on / off permanently or for a specified period of time and its current status to be read.

FEATURES

Name	Description
Value	Returns: for output set at on; for output set at off state

METHODS

Name	Description
SetValue	Sets output state to 1 or 0
Switch	Changes the output value from 0 to 1 or from 1 to 0. The first parameter is the time of change: 0 - switches output to continous modespec number - switches output for a time specified by a parameter (in milliseconds)
SwitchOn	Sets output value to 1
SwitchOff	Sets output value to 0

EVENTS

Name	Description
OnValueChange	Occurs when a change in the state takes place (regardless of the value)
OnSwitchOn	Occurs when On (1) is set at output
OnSwitchOff	Occurs when Off (0) is set at output

B. ZWAVE_CONFIG

The object displays information about communication parameters with the module in the Z-Wave network. It enables to set advanced configuration parameters of a given module.

Note!

The change of configuration parameters is possible only after setting parameter 252 to 0 (Unlock), by default set to 1 (Lock).

Name	Description
NodeID	The number of the module (node) in the Z-Wave network (transmitted for each Z-Wave module after adding it to the controller)
Banned	 Information on blocking Z-Wave communication with the module: - communication with the module is not blocked, - blocked communication with the module (module banned). The blocking occurs when 3 consecutive attempts to communicate with the module fail (increment of the FailCount attribute by 3). A query is sent to the banned module every 1 minute - if the CLU receives a response, then the blocking will be removed and it is possible to try again to send the order to the module
FailCount	The number of unsuccessful attempts to communicate with the Z-Wave module. In case of failure of communication with the module (no response, confirmation, etc.), the feature is incremented by 1, then the attempt to repeat is twice (in 10s intervals). In case of failure, communication with the module is blocked (Banned = 1)
Register	The register number (parameter) of the configuration that has been read / set recently using the available methods
Value	The value of the configuration register (parameter)

Name	Description
RemoveBan	It removes the blocking of communication with the Z-Wave module (in the case when the feature Banned = 1). Calling the method enables resending the command to the module. Note! RemoveBan it is not synonymous with the correct communication with the module again - it allows re-sending an order / query to the module! In the event of failure, the entire blocking process is restarted!
ClearFailCount	Clears the number of unsuccessful communication attempts
Set	Sets the value of a given configuration register (parameter): Register (register or parameter number), Value (the value of the register or parameter), Size (size of the sent register or parameter value - in bytes)
Get	Gets the value of a given configuration (parameter) register
SetDefault	Sets the default value for a given configuration (parameter) register

EVENTS

Name	Description
OnBanned	An event triggered when the device is banned

Module version: ZW140-C

20.1. General information

Note!

The module service is available from CLU version 5.06.03 (build 2043).

Aeotec Dual Nano Switch support includes the ability to turn on / off, permanently or for a specified period of time, the outputs of the module as well as read their status. The device can be controlled by the methods of the ZWAVE_DOUT object or by means of external switches connected to the Dual Nano Switch inputs. Their configuration (operation mode) is possible by changing the appropriate parameters specified individually in the module manual.

After Inclusion the module to the CLU Z-Wave, basic parameters configuring the operation of switches are set:

Parameter	Default Value
120 - external switch mode for S1	1 - 2-state switch mode
121 - external switch mode for S2	1 - 2-state switch mode

Operation of S1, S2 inputs: S1, S2 inputs directly control the module outputs (OUT1, OUT2), respectively S1 -> OUT1, S2 -> OUT2:

- High state of input -> output switched on,
- Low state of input -> output switched off.

How to add / remove: Adding / removing the device is done by pressing button on the Dual Nano Switch during Inclusion / Exclusion (called on the CLU).

Note!

After CLU reboot (sending configuration), wait 10 seconds before the first attempt to turn on the Dual Nano Switch module.

20.2. Objects

A. ZWAVE_DOUT

Object that enables the device to be turned on / off permanently or for a specified period of time and its current status to be read.

Name	Description
Value	Returns: for output set at on; for output set at off state

Name	Description
SetValue	Sets output state to 1 or 0
Switch	Changes the output value from 0 to 1 or from 1 to 0. The first parameter is the time of change: 0 - switches output to continous modespec number - switches output for a time specified by a parameter (in milliseconds)
SwitchOn	Sets output value to 1
SwitchOff	Sets output value to 0

EVENTS

Name	Description
OnValueChange	Occurs when a change in the state takes place (regardless of the value)
OnSwitchOn	Occurs when On (1) is set at output
OnSwitchOff	Occurs when Off (0) is set at output

B. ZWAVE_CONFIG

The object displays information about communication parameters with the module in the Z-Wave network. It enables to set advanced configuration parameters of a given module.

Note!

The change of configuration parameters is possible only after setting parameter 252 to 0 (Unlock), by default set to 1 (Lock).

Name	Description
NodeID	The number of the module (node) in the Z-Wave network (transmitted for each Z-Wave module after adding it to the controller)
Banned	 Information on blocking Z-Wave communication with the module: - communication with the module is not blocked, - blocked communication with the module (module banned). The blocking occurs when 3 consecutive attempts to communicate with the module fail (increment of the FailCount attribute by 3). A query is sent to the banned module every 1 minute - if the CLU receives a response, then the blocking will be removed and it is possible to try again to send the order to the module
FailCount	The number of unsuccessful attempts to communicate with the Z-Wave module. In case of failure of communication with the module (no response, confirmation, etc.), the feature is incremented by 1, then the attempt to repeat is twice (in 10s intervals). In case of failure, communication with the module is blocked (Banned = 1)
Register	The register number (parameter) of the configuration that has been read / set recently using the available methods
Value	The value of the configuration register (parameter)

Name	Description	
RemoveBan	It removes the blocking of communication with the Z-Wave module (in the case when the feature Banned = 1). Calling the method enables resending the command to the module. Note! RemoveBan it is not synonymous with the correct communication with the module again - it allows re-sending an order / query to the module! In the event of failure, the entire blocking process is restarted!	
ClearFailCount	Clears the number of unsuccessful communication attempts	
Set	Sets the value of a given configuration register (parameter): Register (register or parameter number), Value (the value of the register or parameter), Size (size of the sent register or parameter value - in bytes)	
Get	Gets the value of a given configuration (parameter) register	
SetDefault	Sets the default value for a given configuration (parameter) register	

EVENTS

Name	Description
OnBanned	An event triggered when the device is banned

Module version: ZW111-C

21.1. General information

Note!

The module service is available from CLU version 5.06.03 (build 2043).

Aeotec Nano Dimmer support includes the ability to smoothly control the level of light intensity and read this value. Lighting can be controlled by the methods of the ZWAVE_DIMMER object or by means of external switches connected to the Nano Dimmer inputs. Their configuration (operation mode) is possible by changing the appropriate parameters specified individually in the module manual.

After Inclusion the module to the CLU Z-Wave , basic parameters configuring the operation of switches are set:

Parameter	Default Value
120 - external switch mode for S1	3 - momentary push button mode
121 - external switch mode for S2	1 - 2-state switch mode.
125 - dimming rate in seconds	3

Operation of S1 input: S1 input directly controls the module output:

- Single click -> sets last memorized value of the dimmer / turns the dimmer off,
- Press and hold -> to increase or decrease the dimmer value.

Operation of S2 input: S2 input is associated with the ZWAVE_DIN obejct, it does not control the module output. The exact operation can be found in the description of the ZWAVE_DIN object.

How to add / remove: Adding / removing the device is done by pressing button on the Nano Dimmer during Inclusion / Exclusion (called on the CLU).

Note!

After CLU reboot (sending configuration), wait 10 seconds before the first attempt to turn on the Nano Dimmer module.

21.2. Objects

A. ZWAVE_DIMMER

Object that allows you to control the level of light intensity and read the current state of the device.

Name	Description
Value	Specifies the current output value
MinValue	Minimum value which Value can adopt
MaxValue	Maximum value which Value can adopt
RampTime	Delay value when changing illumination (in ms)

Name	Description	
SetValue	Sets output value	
SetMinValue	Setting the minimum value which can be adopted by an output. Attempting to set a lower value will generate an error	
SetMaxValue	Setting the maximum value which can be addopted by an output. Attempting to set a higher value will generate an error	
SetRampTime	Determinates the time of output value increment (in ms)	
Switch	Changes the output value from 0 to 1 or from 1 to 0. The first parameter is the time of change: 0 - switches output to continous mode number - switches output for a specified time by a parameter(in milliseconds) The second parameter is the ramp (time of value increments which is optional. If this parameter is not specified, the default ramp is used	
SwitchOn	Sets output value to 1. The first parameter is the time of switching (how long it is to be switched for). The second parameter is the ramp (time of value increments) which is optional	
SwitchOff	Sets output value to o. The first parameter is the time of switching (how long it is to be switched for). The second parameter is the ramp (time of value increments) which is optional	
Hold	Executes the function of illuminating/ dimming	
HoldUp	Executes the function of illuminating	
HoldDown	Executes the function of dimming	

EVENTS

Name	Description
OnValueChange	Event resulting from changing the output state
OnSwitchOn	Event occuring when the output value is changed from 0 to a higher value than 0
OnSwitchOff	Event occuring when 0 is set at the output
OnValueRise	Event occuring when the set value is higher than the current value
OnValueLower	Event occuring when the set value is lower than the current value

B. ZWAVE_DIN

The operation of the object is determined by the setting of the configuration parameter 121 of the Nano Dimmer module, which defines the operating mode for the S2 input:

- for the 2 state switch mode:
 - High state of input -> the embedded feature Value takes the value 1,
 - Low state of input -> the embedded feature Value takes the value 0.
- for the **Momentary push button mode**:
 - Singel click -> the embedded feature Value takes the value 1,
 - Single click again -> the embedded feature Value takes the value 0.

Note!

Based on the descriptions of changes (presented above) to an embedded Value feature of ZWAVE_DIN object, the configuration in the ZWAVE_DIN -> ZWAVE_DIMMER binding should be adjusted accordingly, in order to achieve the desired functionality (on / off, dimming). If you want to perform a standard configuration in the Grenton system to control the DIMMER object, an adequate input of DIN or TouchPanel module should be used.

FEATURES

Name	Description
HoldDelay	Time in milliseconds after which, when pressing and holding a button, the OnHold event occurs
HoldInterval	Cyclical interval in milliseconds after which, when pressing and holding a button, the OnHold event occurs
Value	Returns input state as 0 or 1

METHODS

Name	Description
SetHoldDelay	Sets HoldDelay value
SetHoldInterval	Sets HoldInterval Value

Name	Description
OnValueChange	Occurs when a change in the input state takes place (regardless of the value)
OnSwitchOn	Occurs when the high state is set at input
OnSwitchOff	Occurs when the low state is set at input
OnShortPress	Occurs after pressing the button for 500 - 2000ms
OnLongPress	Occurs after pressing the button for at least 2000ms
OnHold	Occurs for the first time after HoldDelay time and then cyclically every HoldInterval value
OnClick	Occurs after pressing the button for less than 500 ms

C. ZWAVE_CONFIG

The object displays information about communication parameters with the module in the Z-Wave network. It enables to set advanced configuration parameters of a given module.

Note!

The change of configuration parameters is possible only after setting parameter 252 to 0 (Unlock), by default set to 1 (Lock).

Name	Description
NodeID	The number of the module (node) in the Z-Wave network (transmitted for each Z-Wave module after adding it to the controller)
Banned	 Information on blocking Z-Wave communication with the module: - communication with the module is not blocked, - blocked communication with the module (module banned). The blocking occurs when 3 consecutive attempts to communicate with the module fail (increment of the Failcount attribute by 3). A query is sent to the banned module every 1 minute - if the CLU receives a response, then the blocking will be removed and it is possible to try again to send the order to the
	module
FailCount	The number of unsuccessful attempts to communicate with the Z-Wave module. In case of failure of communication with the module (no response, confirmation, etc.), the feature is incremented by 1, then the attempt to repeat is twice (in 10s intervals). In case of failure, communication with the module is blocked ($Banned = 1$)
Register	The register number (parameter) of the configuration that has been read / set recently using the available methods
Value	The value of the configuration register (parameter)

Name	Description
RemoveBan	It removes the blocking of communication with the Z-Wave module (in the case when the feature Banned = 1). Calling the method enables resending the command to the module. Note! RemoveBan it is not synonymous with the correct communication with the module again - it allows re-sending an order / query to the module! In the event of failure, the entire blocking process is restarted!
ClearFailCount	Clears the number of unsuccessful communication attempts
Set	Sets the value of a given configuration register (parameter): Register (register or parameter number), Value (the value of the register or parameter), Size (size of the sent register or parameter value - in bytes)
Get	Gets the value of a given configuration (parameter) register
SetDefault	Sets the default value for a given configuration (parameter) register

EVENTS

Name	Description
OnBanned	An event triggered when the device is banned

22. Aeotec Nano Shutter

Module version: ZW141-C

22.1. General information

Note!

The module service is available from CLU version 5.06.03 (*build 2043*).

Aeotec Nano Shutter support includes the ability to control the module outputs (up / down / stop). The device can be controlled by the methods of the ZWAVE_ROLLER_SHUTTER object or by means of external switches connected to the Nano Shutter inputs. Their configuration (operation mode) is possible by changing the appropriate parameters specified individually in the module manual.

After Inclusion the module to the CLU Z-Wave, basic parameters configuring the operation of switches are set:

Parameter	Default Value
35 - moving time from up to down in seconds	11
120 - external switch mode for S1	1 - 2-state switch mode
121 - external switch mode for S2	3 - momentary push button mode

Operation of S1 input: S1 input directly controls the module outputs:

- High state of input -> shutter up (OUT1 on) if previously down / shutter down (OUT2 on) if previously up,
- Low state of input -> shutter stopped, outputs off.

Operation of S2 input: S2 input directly controls the module outputs:

 Single click -> shutter up (OUT1 on) if previously down / shutter stopped, outputs off / shutter down (OUT2 on) if previously up.

How to add / remove: Adding the device is done by pressing button on the Nano Shutter during Inclusion, removing is done by pressing button 6 times during Exclusion (called on the CLU).

Note!

After CLU reboot (sending configuration), wait 10 seconds before the first attempt to turn on the Nano Shutter module.

22.2. **Objects**

A. ZWAVE_ROLLER_SHUTTER

Object enabling the roller shutter control (up / down / stop). The condition of the roller shutter is determined on the basis of the called methods.

Note!

The object does not take over the information about the real state of the device controlled by external switches connected to inputs S1, S2.

Note!

For the correct operation of the object, the MaxTime feature and the 35 configuration parameter of the Nano Shutter module should be set to the same value.

FEATURES

Name	Description
OUT1	State of OUT1 relay (moving upwards)
OUT2	State of OUT2 relay (moving downwards)
State	Output state: o - no movement, 1 - moving upwards, 2 - moving downwards
MaxTime	Default Time parameter value. 0 if not specified

METHODS

Name	Description
Up	Roller shuter up or STOP if moving. Parameter Time: <pre>number</pre> - output is active for specified timer • output is active for the time specified in MaxTime
Down	Roller shutter down or STOP if moving. Parameter Time: <pre>number</pre> - output is active for specified timer • output is active for the time specified in MaxTime
Start	Roller shutter up if the preceding motion was down or roller shutter down if the preceding motion was up. Parameter Time: number output is active for specified timer output is active for the time specified in MaxTime
Stop	STOP if moving
Hold	Hold with direction change
HoldUp	Hold always up
HoldDown	Hold always down

EVENTS

Name	Description
OnChange	Result from a change in the state of any of the outputs
OnUp	Occurs when changing the Stop state to the Up state
OnDown	Occurs when changing the Stop state to the Down state
OnStart	Occurs when Start is requested
OnStop	Occurs when Stop is requested

B. ZWAVE_CONFIG

The object displays information about communication parameters with the module in the Z-Wave network. It enables to set advanced configuration parameters of a given module.

Note!

The change of configuration parameters is possible only after setting parameter 252 to 0 (Unlock), by default set to 1 (Lock).

Name	Description
NodeID	The number of the module (node) in the Z-Wave network (transmitted for each Z-Wave module after adding it to the controller)
Banned	 Information on blocking Z-Wave communication with the module: - communication with the module is not blocked, - blocked communication with the module (module banned). The blocking occurs when 3 consecutive attempts to communicate with the module fail (increment of the FailCount attribute by 3). A query is sent to the banned module every 1 minute - if the CLU receives a response, then the blocking will be removed and it is possible to try again to send the order to the module
FailCount	The number of unsuccessful attempts to communicate with the Z-Wave module. In case of failure of communication with the module (no response, confirmation, etc.), the feature is incremented by 1, then the attempt to repeat is twice (in 10s intervals). In case of failure, communication with the module is blocked ($Banned = 1$)
Register	The register number (parameter) of the configuration that has been read / set recently using the available methods
Value	The value of the configuration register (parameter)

Name	Description
RemoveBan	It removes the blocking of communication with the Z-Wave module (in the case when the feature Banned = 1). Calling the method enables resending the command to the module. Note! RemoveBan it is not synonymous with the correct communication with the module again - it allows re-sending an order / query to the module! In the event of failure, the entire blocking process is restarted!
ClearFailCount	Clears the number of unsuccessful communication attempts
Set	Sets the value of a given configuration register (parameter): Register (register or parameter number), Value (the value of the register or parameter), Size (size of the sent register or parameter value - in bytes)
Get	Gets the value of a given configuration (parameter) register
SetDefault	Sets the default value for a given configuration (parameter) register

EVENTS

Name	Description
OnBanned	An event triggered when the device is banned

Module version: ZW141-C

23.1. General information

Note!

The module service is available from CLU version 5.08.01.

Aeotec Nano Shutter support includes the ability to control the module outputs (up / down / stop). The device can be controlled by the methods of the ZWAVE_ROLLER_SHUTTER object or by means of external switches connected to the Nano Shutter inputs. Their configuration (operation mode) is possible by changing the appropriate parameters specified individually in the module manual.

Note!

There may be numerous delays and anomalies in the execution of commands by the modules, especially when they are in the range of other Z-WAVE devices or devices using the radio frequency of 868.42 MHz such as gate remote controls.

After Inclusion the module to the CLU Z-Wave, basic parameters configuring the operation of switches are set:

Parameter	Default Value
35 - moving time from up to down in hundredths of a seconds	15000
120 - external switch mode for S1	1 - 2-state switch mode
121 - external switch mode for S2	3 - momentary push button mode

Operation of S1 input: S1 input directly controls the module outputs:

- High state of input -> shutter up (OUT1 on) if previously down / shutter down (OUT2 on) if previously up,
- Low state of input -> shutter stopped, outputs off.

Operation of S2 input: S2 input directly controls the module outputs:

• Single click -> shutter up (OUT1 on) if previously down / shutter stopped, outputs off / shutter down (OUT2 on) if previously up.

How to add / remove: Adding the device is done by pressing button on the Nano Shutter during Inclusion, removing is done by pressing button 6 times during Exclusion (called on the CLU).

Note!

After CLU reboot (sending configuration), wait 10 seconds before the first attempt to turn on the Nano Shutter module.

23.2. **Objects**

A. ZWAVE_ROLLER_SHUTTER

Object enabling the roller shutter control (up / down / stop). The condition of the roller shutter is determined on the basis of the called methods.

Note!

The object does not take over the information about the real state of the device controlled by external switches connected to inputs S1, S2 or button on the module housing.

FEATURES

Name	Description
OUT1	State of OUT1 relay (moving upwards)
OUT2	State of OUT2 relay (moving downwards)
State	Output state: o - no movement, 1 - moving upwards, 2 - moving downwards
Position	Percentage value of the shutter opening:
MoveTime	The time in milliseconds it takes to fully open / close the blind

METHODS

Name	Description
Up	Roller shuter up or STOP if moving.
Down	Roller shutter down or STOP if moving.
Start	Roller shutter up if the preceding motion was down or roller shutter down if the preceding motion was up.
Stop	STOP if moving
Hold	Hold with direction change
HoldUp	Hold always up
HoldDown	Hold always down

EVENTS

Name	Description
OnChange	Result from a change in the state of any of the outputs
OnUp	Occurs when changing the Stop state to the Up state
OnDown	Occurs when changing the Stop state to the Down state
OnStart	Occurs when Start is requested
OnStop	Occurs when Stop is requested

B. ZWAVE_CONFIG

The object displays information about communication parameters with the module in the Z-Wave network. It enables to set advanced configuration parameters of a given module.

Note!

The change of configuration parameters is possible only after setting parameter 252 to 0 (Unlock), by default set to 1 (Lock).

FEATURES

Name	Description
NodeID	The number of the module (node) in the Z-Wave network (transmitted for each Z-Wave module after adding it to the controller)
Banned	 Information on blocking Z-Wave communication with the module: o - communication with the module is not blocked, 1 - blocked communication with the module (module banned). The blocking occurs when 3 consecutive attempts to communicate with the module fail (increment of the FailCount attribute by 3). A query is sent to the banned module every 1 minute - if the CLU receives a response, then the blocking will be removed and it is possible to try again to send the order to the module
FailCount	The number of unsuccessful attempts to communicate with the Z-Wave module. In case of failure of communication with the module (no response, confirmation, etc.), the feature is incremented by 1, then the attempt to repeat is twice (in 10s intervals). In case of failure, communication with the module is blocked ($Banned = 1$)
Register	The register number (parameter) of the configuration that has been read / set recently using the available methods
Value	The value of the configuration register (parameter)

METHODS

Name	Description
RemoveBan	It removes the blocking of communication with the Z-Wave module (in the case when the feature Banned = 1). Calling the method enables resending the command to the module. Note! RemoveBan it is not synonymous with the correct communication with the module again - it allows re-sending an order / query to the module! In the event of failure, the entire blocking process is restarted!
ClearFailCount	Clears the number of unsuccessful communication attempts
Set	Sets the value of a given configuration register (parameter): Register (register or parameter number), Value (the value of the register or parameter), Size (size of the sent register or parameter value - in bytes)
Get	Gets the value of a given configuration (parameter) register
SetDefault	Sets the default value for a given configuration (parameter) register

EVENTS

Name	Description
OnBanned	An event triggered when the device is banned

24. Aeotec Smart Switch 7

Module version: ZW175-C16

Note!

The module service is available from CLU version 05.11.01 (build 2302A).

24.1. General information

Aeotec Smart Switch 7 support includes the ability to control the socket using the Grenton system. The module can be controlled by the methods of the ZWAVE_DOUT object or by the button located on the module.

How to add / remove: To add the Aeotec Smart Switch 7 module, hold the add button until the diode turns blue. When the button is released, the LED will flash blue. At this point, make two short presses. All activities should be performed during Inclusion called on CLU. To remove a module, hold down the button on the module until it turns blue. When released, the LED will flash blue. During this time, then make two short presses. These activities should be performed during the Exclusion invoked on the CLU.

Note!

In order to unlock the module when it is blocked due to exceeding the Overload value, the SetProtectionState(Off) method should be used.

24.2. Objects

A. ZWAVE_DOUT

Object enabling the socket control.

FEATURES

Name	Description
Value	Returns: 1 for output set at on; 0 for output set at off state
Overload	Device power value beyond which the device is blocked and the OnOverload event is generated at this time
ProtectionState	Device lock status: 0 - off 2 - on
Power	Returns power in watts
PowerConsumption	Returns power consumption in kilowatt-hour

METHODS

Name	Description
SetValue	Sets output state to 1 or 0
Switch	Changes the output value from 0 to 1 or from 1 to 0. The first parameter is the time of change: 0 - switches output to continuous mode spec number - switches output for a time specified by a parameter (in milliseconds)
SwitchOn	Sets output value to 1
SwitchOff	Sets output value to 0
SetOverload	Sets the power value beyond which the OnOverload event is generated
SetProtectionState	Sets device lock status

EVENTS

Name	Description
OnValueChange	Occurs when a change in the state takes place (regardless of the value)
OnSwitchOn	Occurs when On(1) is set at output
OnSwitchOff	Occurs when Off(0) is set at output
OnOverload	Occurs when a device is blocked due to exceeding the Overload value

B. ZWAVE_CONFIG

The object displays information about communication parameters with the module in the Z-Wave network. It enables to set advanced configuration parameters of a given module.

FEATURES

Name	Description
Register	Register (parameter) number
Value	Register (parameter) value
NodeID	Module's number (node) in the Z-Wave network
Banned	Returns information about communication with module: o - communication with the module is not blocked, 1 - blocked communication with the module (module banned)
FailCount	The number of failed communication attempts with the Z-Wave module

METHODS

Name	Description
Set	Sets the value of the register (parameter)
Get	Gets the value of a given register (parameter)
SetDefault	Sets the default value for register (parameter)
RemoveBan	Removes the blockade of communication with the Z-Wave module
ClearFailCount	Cleans the number of failed communication attempts

EVENTS

Name	Description
OnBanned	Occurs when Z-Wave device is banned

25. Aeotec Multisensor 6

Module version: ZW100-C

25.1. General information

The Aeotec Multisensor 6 Z-Wave module allows you to read: temperature, light level, humidity, UV rays, battery level and has a tamper alarm. In addition, it gives the ability to set/read the time of waking up the module.

Attention!

There may be numerous delays and anomalies in the execution of commands by modules, especially those that are within the operating range of other Z-WAVE devices or devices using the 868.42 MHz radio frequency, such as remote controls for gates.

How to add / remove: In order to add a module, short press the action button in the Aeotec Multisensor 6 Z-Wave module during Inclusion called on the CLU. To remove the module, short press the action button during Exclusion.

The Aeotec Multisensor 6 Z-Wave module can be powered by a battery or through a suitable USB adapter. The manufacturer recommends using USB power during setup. Configuration for battery power must be done after waking up the module. In order to wake up the module, hold down the button on the module for 3 seconds. Wake-up mode persists for 10 minutes.

25.2. **Objects**

A. BINARY_SENSOR

The object allows you to read the status of the motion sensor.

FEATURES

Name	Description
Value	Returns the input status: 0 - no violation, 1 - violation

EVENTS

Name	Description
OnValueChange	Occurs when a change in the input state takes place (regardless of the value)
OnSwitchOn	Occurs when the high state is set at input
OnSwitchOff	Occurs when the low state is set at input

B. ANALOG_SENSOR

The object allows you to read the temperature (ANALOG_SENSOR_01), illuminance measured in lux (ANALOG_SENSOR_02), humidity (ANALOG_SENSOR_03), UV rays (ANALOG_SENSOR_04).

FEATURES

Name	Description
Value	Current sensor value
MinValue	Value below which OnOutOfRange event is occured
MaxValue	Value above which OnOutOfRange event is occured

METHODS

Name	Description
SetMinValue	Sets MinValue
SetMaxValue	Sets MaxValue

EVENTS

Name	Description
OnValueChange	Event occurring when sensor Value changes
OnValueRise	Event occurring when the set value is higher than the current value
OnValueLower	Event occurring when the set value is lower than the current value
OnOutOfRange	Event occurring when setting a value which is higher than the maximum value or lower than the minimum value
OnInRange	Event occurring when setting a value which is lower than the maximum value or higher than the minimum value

C. ZWAVE_TAMPER_ALARM

The object displays information about the tamper alarm status.

FEATURES

Name	Description
AlarmDetected	Alarm detection status: • - no tamper detected, • - tamper detected

METHODS

Name	Description
ClearAlarm	Cancels active alarm

EVENTS

Name	Description
OnChange	Occurs after changing the alarm state in AlarmDetected
OnAlarmDetected	Occurs after changing AlarmDetected from 0 to 1
OnAlarmCleared	Occurs after changing AlarmDetected from 1 to 0

D. ZWAVE_WAKEUP

The object allows you to set and read the battery wake-up time of the Z-Wave module. The default value set by the CLU is 3600s (60 minutes). The minimum value is 240s (4 minutes); maximum 7200s (2 hours).

Name	Description
Interval	Z-Wave module awakening period from sleep mode
LastWakeUp	Time from the last Z-Wave module awakening

Name	Description
SetInterval	Sets Z-Wave module awakening time from sleep mode

EVENTS

Name	Description
OnWakeUp	Event occurring after detecting Z-Wave module waking up from sleep mode

E.ZWAVE_BATTERY

The object allows you to read the battery status. The reading is carried out cyclically, every set time, for the Interval feature of the **ZWAVE_WAKEUP** object (default 3600s).

FEATURES

Name	Description
BatteryLevel	Z-Wave module battery level (in %)
WarningLevel	Z-Wave module battery level below which the warning event is occurring

METHODS

Name	Description
SetWarningLevel	Sets Z-Wave battery level below which the warning event is occurring

EVENTS

Name	Description
OnChange	Event occurring after Z-Wave module battery level change
OnLowBattery	Event occurring after Z-Wave module battery level drop below the WarningLevel
OnBatteryGood	Event occurring when the Z-Wave module battery level increase above the WarningLevel

F. ZWAVE_CONFIG

The object displays information about parameters and communication with the module in the Z-Wave network. It allows setting advanced configuration parameters of a given module (specified individually in the manual).

Name	Description
NodeID	The number of the module (node) in the Z-Wave network (transmitted for each Z-Wave module after adding it to the controller)
Banned	Information on blocking Z-Wave communication with the module: communication with the module is not blocked, communication with the module is blocked (banned module). The blocking occurs when 3 consecutive attempts to communicate with the module fail (increment of the FailCount attribute by 3). A query is sent to the banned module every 1 minute - if the CLU receives a response, then the blocking will be removed and it is possible to try again to send the order to the module.
FailCount	The blocking occurs when 3 consecutive attempts to communicate with the module fail (increment of the FailCount attribute by 3). A query is sent to the banned module every 1 minute - if the CLU receives a response, then the blocking will be removed and it is possible to try again to send the order to the module.
Register	The register number (parameter) of the configuration that has been read / set recently using the available methods
Value	The value of the configuration register (parameter)

XVIII. myGrenton mobile application

1. Installation and first launch of the myGrenton application

1.1. Installation

A. Android

The current version of the application is available in the Play Store for phones or tablets with the **Android system (version 5.0 or higher)**. After opening the application, a welcome window with information about the application and the possibility of adding a new interface will appear.



B. iOS

The current version of the application is available in the App Store for phones or tablets with the **iOS system (12 or higher)**. After opening the application, a welcome window with the possibility of adding a new interface will appear.

Settings ADD INTERFACE Scan QR code > Enter manually > Enter URL > Launch DEMO interface APPLICATION Connection status: Offline License > Version 1.9.0 (221000)

Note!

Minimum version of CLU **05.06.04** is required for correct operation of the application. For selected widgets, the minimum CLU and Object Manager versions required for correct operation are given in their descriptions.

Note!

The application may ask, among others for permission to take photos and videos, full access to the network, display network connections, prevent the phone from going to sleep, receive data from the Internet. For correct working of the application, you must agree to the above conditions.

1.2. First start-up, demonstration interface

The myGrenton application allows you to experience the application interface, widget capabilities and key functionalities without connecting to the actual Grenton system using the DEMO interface.

Adding a DEMO interface is possible from the first run view of the application or subsequent ones (Settings view), only if the user has not added an interface connected to the real system. The interface includes several sample pages with fully functional widgets.

Note!

The DEMO interface is available for myGrenton application version 1.5.0 (Android) / 1.9.0 (iOS) or higher.


Androi	id		iOS	
Ŧ	БЕМО	*	DE	MO interface
♠	Home		a	Home
â	Home	loor	•	Living room
*	Living room	or	· · ·	
	Kitchen			Kitchen
#	Bedroom	nds	#	Bedroom
	Office			
	Guidge			Office
		21.0°	F	Garage
) hPa		

63



The DEMO interface will be automatically deleted after adding an new interface. It is possible to delete DEMO interface in the standard way - in the interface management window.

2. Creating the interface

To create an interface to the myGrenton application, click on the 'Add myGrenton interface' icon in the Main Menu of the Object Manager:



Then a window will appear with the option to change the interface name:



After accepting the name, an empty interface will be created:

🖲 *My house 🖾		
		Header HEADER
X		Value VALUE
Page		- 🍎 - On/Off ON_OFF
		Scene SCENE
		Open Close SCENE_DOUBLE
		Dimmmer DIMMER
Drag object here	\oplus	LED lighting
		Thermostat THERMOSTAT
		Roller shutter ROLLER_SHUTTER

2.1. Adding a page to the interface

To add another interface page, click on the + icon next to the phone graphic. Up to 30 pages can be created.

2.2. Deleting a page from the interface

To remove a page from the interface, click on the x icon, which is located in the upper right corner of the phone and confirm the removal of the page.

2.3. Copying the interface

To copy an interface, right-click on the interface and select "Create copy of myGrenton interface" from the menu:

₩ X*	400110030_ZWAVE_DINZ 400110056_ZWAVE_DINZ		
n la	Open	Ctrl+Alt+O	1
	Delete	Ctrl+D (Del)	Ш
✓ ● *myG ● *M	Create copy of myGrenton interface		
💿 Visual B	luilder		

Then choose a name for the new interface:

Create copy of myGrenton interface		×
Enter the name of the interface:		
My house1		
	ОК	Cancel

3. Widgets

To control the system using myGrenton application from the level of the phone or tablet, widgets are used. Each of them offers a different functionality. Widgets can be added to the interface in 2 ways:

1. Dragging a specific object from the list of objects in the Object Manager (then the created widget will have a predefined template)

Object label	Object type	Widget type
142994462_ONEW_SENSOR1	ONEW_SENSOR	VALUE
191000008_DOUT1	DOUT	ON_OFF
281000004_LEDRGB1	LEDRGB	LED
310000109_DIMM1	DIMM	DIMMER
451000069_ROLLER_SHUTTER1	ROLLER_SHUTTER	ROLLER_SHUTTER

2. Dragging a specific widget from the tab on the right side and then completing its desired parameters.



Note!

The maximum number of widgets per page is 30.

3.1. Header (HEADER)

Used to display a string. All alphabetic, numeric and special characters are supported.



To change the header, click the word Header in the phone field. It is also possible to change the Label field in the properties window, which appears after double-clicking on the widget with the left mouse button.

🔋 "My house 🛛							- 0
	×						Header HEADER Value
	Page		0	Properties		×	
	Header name		Name	Val	lue		- 💡 - On/Off
	HEADER		Туре	HEADER			ON_OFF
			▼ Text	Handar nama		_	Scene
			Laber	reader name			SCENE
							Open Close
							Dimmmer DIMMER
Ð		Ð					LED lighting
							F Thermostat THERMOSTAT
							Roller shutter
					Cle	ose	
					Registered me	obile devices: 0	80M of 96M

3.2. Value (VALUE)

Note!

From the version of Object Manager 1.6.0, the VALUE widget and the possibility of using it as a pre-defined template will not be available. It is replaced with the VALUE_V2 widget.

VALUE widgets included in projects created on previous versions of Object Manager will still be properly supported and displayed in the myGrenton application.

The widget returns the property values of the object. This widget has three units to choose from: unknown, percent and degree. In addition, it is possible to describe the widget in the Label field and also to change the icon in the Icon field in the properties window, which appears after double-clicking on the widget with the left mouse button.



Filled VALUE widget:

My house	×					- 0
	x					Header HEADER
	Page		O	Properties	×	VALUE
Ð	Page Header name HEADER I Gight sensor value VALUE	Ð	Vame Type Value Label Kon Unit Min Max State	Propertues Value VALUE Upth sensor value detault UNKNOWN 00 10 CLU->v250004877_PANELSENSLIGHTI->Value	Close	VALUE VALUE VALUE VOPORT SCENE SCENE SCENE Close SCENE DIMMER

3.3. Value v2 (VALUE_V2)

Note!

The VALUE_V2 widget is available for Object Manager version 1.6.0 or higher, and for myGrenton application version 1.4.0 or higher (Android) and version 1.8.0 or higher (iOS).

The widget is dedicated to display the value of a user feature or an embedded feature of a given object. This widget has three units to choose from: unknown, percent and degree. The selected unit is displayed next to the value. In addition, you should choose the type:

- STRING text,
- FLOAT floating point, for this type of value it is possible to define the number of displayed decimal places (property Precision),
- INTEGER only integer values are displayed.



Filled VALUE_V2 widget:



3.4. Value Double (VALUE_DOUBLE)

Note!

The VALUE_DOUBLE widget is available for Object Manager version 1.6.0 or higher, for myGrenton application version 1.4.0 (Android) / 1.8.0 (iOS) or higher.

This is the Value v2 double-version widget. The widget is dedicated to display the value of a user features or an embedded features of a given object. This widget has three units to choose from: unknown, percent and degree. The selected unit is displayed next to the value. In addition, you should choose the type:

- STRING text,
- FLOAT floating point, for this type of value it is possible to define the number of displayed decimal places (property Precision),
- INTEGER only integer values are displayed.



Filled VALUE_DOUBLE widget:

🖲 *My house 🖾			- 0
	Properties	x	Header HEADER
^	Name	Value	Value
1 Dec.	Туре	VALUE DOUBLE	VALUE_V2
Page	▼ Left component*		
Room temp Kitchen temp.	Label*	Room temp.	value value
VALUE DOUBLE	lcon*	value-double	VALUE_DOUBLE
	Unit*	DEGREE	- Ó- On/Off
	Value type*	FLOAT	ON OFF
	Precision*	2	
	Value*	CLU->x1400834559_ONEW_SENSOR_01->Value	-🍎- On/🍎- On/Off
	Right component*		ON_OFF_DOUBLE
	Label*	Kitchen temp.	
	lcon*	value-double	Scene
	Unit*	DEGREE	SCENE
	Value type*	FLOAT	State and the second second
(+) (+) Precision*	2	Open Close
č	Value*	CLU->x1400834559_ONEW_SENSOR_01->Value	SCENE_DOUBLE
			Dimmmer
			DIMMER
			LED lighting
			LED
			€ Thermostat
			THERMOSTAT
		Close	
			Roller shutter
			ROLLER_SHUTTER
			Roller shutter
			ROLLER SHUTTER V3
			Camera
			CAMERA
		Network interface: e	th2 (192.168.0.111) 216M of 501M

3.5. On/Off (ON_OFF)

The widget is used to control the executive elements. When dragging the widget from the tab on the right side of the screen, it must be completed with the values in the State, Action on, Action off fields. Widget dedicated mainly to control relay outputs, however it can be used, among others, for switching LED lighting, starting virtual objects.



For the digital output objects, pre-defined templates for the ON_OFF widget are defined. To add the ON_OFF widget with the desired digital output object, drag the DOUT object from the list of objects to the interface page:



Filled ON_OFF widget:

🖲 *My hou	ise 🖾					- 8
	×		O Ph	operties	×	Header HEADER Value
Ð	Page Header name HEADIR ULUE Light sensor value VALUE Light sensor value ON_OFF	Ð	Pro Name Type • Bistable button Label Icon Indication State Action on Action off	Value OR_OFF Living room lamp bulb ON_OFF CLU->x20100275_DOUT1->SetValue(1) CLU->x20100275_DOUT1->SetValue(1) CLU->x20100275_DOUT1->SetValue(1)	Ciose	VALUE VALUE VALUE VALUE VALUE Vor, ON, OFF Scene SCENE Open Close SCENE DUIMMER DIMMER VED Lighting LED VED Lighting VED ROMERSAUT ROLLER_SHUTTER

3.6. On/Off Double (ON_OFF_DOUBLE)

Note!

The ON_OFF_DOUBLE widget is available for Object Manager version 1.4.0 or higher, and for myGrenton application version 1.2.3 or higher (Android) and version 1.6.0 or higher (iOS).

This is the On/Off double-version widget. By dragging the widget from the tab to the right of the screen, it must be supplemented with values in the fields <code>State</code>, <code>Action on</code>, <code>Action off</code> for both buttons.

■ *My house 😒						- 8
×	(-				Header HEADER
		O Properties			×	VALUE
Page		1	Name	Value		1.1
- On/Off - On/Off		Туре		ON_OFF_DOUBLE		-💡- On/Off
		Button 1	0			ON_OFF
		Label		On/Off		
		lcon		bulb		
		Indication ON		ON		ON_OFF_DOUBLE
		Indication OFF		OFF		Scene
		State	0			SCENE
		Action on				A state of the second second
		Action off				Open Close
		* Button 2	•	0-10#		SCENE_DOUBLE
		Label		bulb		
(+)	(Indication ON		ON		Dimmmer
U		Indication OFF		OFF		DIMMER
		State	0			
		Action on	0			TED lighting
		Action off	0			LED
						Thermostat THERMOSTAT
						Roller shutter
					Close	Roller shutter
						Camera CAMERA
					Network interface: wlan2 (192	168.100.5) 278M of 465M

Filled ON_OFF_DOUBLE widget:

🖲 "My house 🔀					- 0
My house 22 Page On/Off ON_OFF_DOUBLE On/Off		Properties Name Type Button 1 Label Icon Indication ON Indication OFF State Action on Action off	Value ON_OFF_DOUBLE On/Off bulb ON OFF CLU221001380->x191000162_DOUT1->Value CLU221001380->x191000162_DOUT1->SwitchOn(0) CLU221001380->x191000162_DOUT1->SwitchOn(0)		Header HEADER WALUE WALU
€	Ģ	 Button 2 Label Icon Indication ON Indication OFF State Action on Action off 	On/Off bulb ON OFF CLU221001380->x191000162_DOUT2->Value CLU221001380->x191000162_DOUT2->SwitchOn(0) CLU221001380->x191000162_DOUT2->SwitchOff(0)		Open Close ScENE DOUBLE Immmer DiMMER Immer LED Ithermostat THERMOSTAT Immer Roller shutter Roller, SHUTTER
			Close		Roller shutter Roller_SHUTTER_V2 Camera CAMERA
			Network interface: wlan2	(192.1	68.100.5) 237M of 439M

3.7. Scene (SCENE)

The widget is dedicated to calling created scripts.

My house	8					
						Header HEADER
	×		O Pr	operties	×	Value
	Page		Name	Value		VALUE
	Header name		Type Background image	SCENE holiday (blue)		On/Off ON_OFF
	HEADER		▼ Monostable button	0		Scene
	Light sensor value		Action click	e e e e e e e e e e e e e e e e e e e		SCENE
	Living room lamp					Open Close SCENE_DOUBLE
	Scene					Dimmmer DIMMER
Ð	SCENE 🖗 🛛	Ð				LED lighting
						Thermostat THERMOSTAT
						Roller shutter
					ciose	
					Posistered mobile devices 0	10114 - (10114
					registered mobile devices: 0	102W 0T 152M

For scripts, ready-made templates for the SCENE widget are defined. To add a SCENE widget with the desired digital output object, drag the script from the list of objects to the interface page:





house 🕄				
				Header HEADER
×	0	Properties	×	Value
Page	Name	Value		. La
Header name	Type Background image	SCENE holiday (blue)		On/Off ON_OFF
Light sensor value	 Monostable button Label Action click 	TURN OFF everything CLU->Turn_off_everything()		Scene SCENE
VALUE				Open Close
ON_OFF TURN OFF everything				Dimmmer
SCENE	\oplus			LED lighting
				Thermostat
				Roller shutter
			Close	
			Registered mobile devices: 0	204M of 264N

3.8. Scene Double (SCENE_DOUBLE)

The widget is used to call scripts (object methods). In contrast to the widget SCENE has 2 buttons for actions.

My house 😫				- 0
			Hea HEA	ader ADER
×	0	Properties	×	Value
Page	Name	Value	VAL	LUE
Header name	Type Background image	SCENE_DOUBLE gate_2 (indigo)		- On/Off
HEADER	▼ Monostable button	•		orr
Light sensor value	Action click	0 9	Sci	ene
VALUE	 Monostable button Label 	Close		Class
- 🤆 - Living room lamp	Action click	•	sce	NE_DOUBLE
TURN OFF everything				Dimmmer
CP	\oplus			LED lighting
			ТНІ	Thermostat ERMOSTAT
			RO	Roller shutter
			Close	
			Registered mobile devices: 0	219M of 264M

Filled SCENE_DOUBLE widget:

Myhouse 22	0	Properties	Header HEADER VALUE
Header name HEADER ULUE ULUE VUUE VUUE VUUE VUUR VUU	Name Type Background image • Monostable button Label Action click • Monostable button Label Action click	Value SCENE_DOUBLE gate_2 (indigo) Cinema mode CLU->Start_cimena_mode() Turn off CLU->Stop_cinema_mode()	Weight of the state of th
			Registered mobile devices 0 2184 of 36444

3.9. Dimmer (DIMMER)

Note!

From the version of Object Manager 1.7.0, the DIMMER widget and the possibility of using it as a pre-defined template will not be available. It is replaced with the DIMMER_V2 widget.

DIMMER widgets included in projects created on previous versions of Object Manager will still be properly supported and displayed in the myGrenton application.

Widget dedicated for DIMMER and LEDRGB modules. When dragging the widget from the tab on the right side of the screen, it should be filled in with the values in the State, Action on, Action off, Unit, Min, Max, Action slide fields. This widget has a slider, which allows it to be controlled in a given range.

*My house	8						
	×		0	Prop	artiar	×	Header HEADER
	Page		•	мор	erties		VALUE
Ð		Ð	Type © Bistable button Label Icon Indication State Action on Action off ♥ Status Unit Min Max State ♥ Silder Label Unit Min Max State Action slide	Name	Value DIMMER Dimmmer dimmer ON_OFF PERCENT 0.0 1.0 Brightness PERCENT 0.0 1.0	Close	ChyOff ON_Off Scene Scene Scene Cose Scene Cose Scene Dimmer DIMMER Cose Dimmer DIMMER LED LED Lighting LED C Thermostat THEEMOSTAT Roller shutter ROLLER_SHUTTER
						Registered mobile devices: 0	185M of 264M

For the DIMM object, pre-defined templates for the DIMMER widget are defined. To add a DIMMER widget with a pre-made template, drag a DIMM from the list of objects to the interface page:

C Home 🗇 Trash 😐 🗆	I *My house 23					- 0
* * * • * • * * * * * * * * * * * * * *						Header HEADER
4 x270000452_BUTTON3 4 x270000452_BUTTON4		0	Widget generating	×		Value
M x27000452_PANEL1 x27000452_PANELSENSLIGHT1 x270000452_PANELSENSLIGHT1	Page	Object label x320001024_DIMM1	Object type DIMM	Widget type		VALUE
	Header name HEADER					- On/Off ON_OFF
ek: x330000132_AnalogIN1 ek: x330000132_DIN1 ek: x330000132_DIN2 ek: x230000132_DIN2	Light sensor value					Scene SCENE
ele x330000132_DIN4 ele x330000132_DIN5 ele x330000132_DIN5	Viving room lamp					Open Close
	TURN OFF everything					Dimmmer DIMMER
 	Cinema mode Turn					LED lighting
	SCENE_DOUBLE					Thermostat
x4262592002_ZWAVE_BATTERY1 x4262592002_ZWAVE_CONFIG1				OK Cancel		
eb. x4262592002_ZWAVE_WAKEUP1 eb. x4262592003_BINARY_SENSOR1 eb. x4262592003_ZWAVE_BATTERY1 eb. x4262592003_ZWAVE_CONFIG1		_				ROLLER_SHUTTER
ek: x4262592003_ZWAVE_WAKEUP1 ek: x461000377_AnalogIN1 ek: x461000377_AnalogIN2 ek: x461000377_AnalogIN2						
oli x461000377_AnalogIN4 oli x461000377_AnalogIN5 oli x461000377_AnalogIN5						
w461000377_AnalogIN7 ★ x461000377_AnalogOUT1 ★ x461000377_AnalogOUT2 w461000377_AnalogOUT2						
AnalogOUT3 AnalogOUT4 AnalogOUT4 AnalogOUT4						
V Ten Greaten					Resistered mobile devices: 0	10014-63644

Filled DIMMER widget:

🔋 *My house	8					- 8
	×		o	Properties	×	Header HEADER
	Page			reported		VALUE
	Header name		Type	DIMMER		On/Off ON_OFF
	HEADER		Label	Bedroom lamp		
	Light sensor value		Icon Indication State	lamp ON_OFF CLU->x320001024_DIMM1->Value		Scene SCENE Open Close
	Cliving room lamp ON_OFF		Action off	CLU->x320001024_DIMM1->SetValue(1) CLU->x320001024_DIMM1->SetValue(0)		SCENE_DOUBLE
æ	TURN OFF everything	æ	Unit Min Max	PERCENT 0.0 1.0		Dimmmer DIMMER
	Cinema mode Turn off SCENE DOUBLE		State v Slider Label	CLU->x320001024_DIMM1->Value Brightness		LED
	A Bedroom lamp		Unit	PERCENT		THERMOSTAT
	DIMMER		Min Max State Action slide	0.0 1.0 CLU->>320001024_DIMM1->Value CLU->>320001024_DIMM1->SetValue(\$value\$)		Roller shutter
					Close	
		-			Registered mobile devices: 0	251M of 366M

The DIMMER widget has a ready template also for the LEDRGB object:

C Home 🗂 Trash 🙂 🗖	🖲 *My	house 🔅				
* 227000452_AnalogIN1 * 127000452_BUTTON1 * 127000452_BUTTON1 * 127000452_BUTTON2						Header HEADER
12/0000452_BUTTON3			0	Widget generating	~	Value
N x270000452_PANEL1			Object label	Object type	Widget type	VALUE
x270000452_PANELSENSLIGHT1 x270000452_PANELSENSTEMP1		Page	x281000507_LEDRGB1	LEDRGB	DIMMER -	
* x281000507_AnalogIN1		Header name			IFD	
★ x281000507_LEDRGB1		HEADER			DIMMER	ON_OFF
* x320001024_DIMM1						Scene
N x330000132_DIN1		Light sensor value				ANNE SE TONON
★ x330000132_DIN2		VALUE				SCENE
×330000132_DIN4						Open Close
₩ x330000132_DIN5						SCENE DOUBLE
# x33000132_DIN6 # x33000132_DIN7		ON_OFF				Sector
14 x330000132_DIN8						Dimmmer
x330000132_DOUT1		TURN OFF everything				DIMMER
A x33000132_DOUT2	-	SCENE				
★ x330000132_DOUT4	(+)	Cinema mode Turn				🐣 LED lighting
↑ x330000132_DOUT5 ↓ x230000122_DOUT6	\sim	Cinema mode				LED
★ x330000132_DOUT7		SCENE_DOUBLE =>				0
★ x330000132_DOUT8		A Bedroom Jamp				5 Thermostat
wk x4262592002_BINARY_SENSOR1 wk x4262592002_ZWAVE_BATTERY1		DIMMER			OK Cancel	THERMOSTAT
x4262592002_ZWAVE_CONFIG1		Diminer				
v4262592002_ZWAVE_WAKEUP1 v4262592003_BINARY_SENSOP1						
*4262592003_ZWAVE_BATTERY1						ROLLER_SHUTTER
★ x4262592003_ZWAVE_CONFIG1						
w x4262592003_ZWAVE_WAKEUP1 w x461000377_AnalogIN1						
* x461000377_AnalogIN2						
A x461000377_AnalogIN3						
Notice and the second s						
₩ x461000377_AnalogIN6						
x4b1000377_AnalogIN7 x4b1000377_AnalogOUT1						
★ x461000377_AnalogOUT2						
★ x461000377_AnalogOUT3						
APD 1000377_AnalogOUT4 GATEHTTP						
· E muficentan V						

Widget created:

*My house	22					- 0
	×					Header HEADER
			0	Properties	×	VALUE
	Page		Name	Value		× 0.101
	Header name HEADER		Type	DIMMER		ON_OFF
	Light sensor value		Label	Bedroom LED dimmer		Scene
	VALUE		Indication	ON_OFF		SCENE
	- ' Living room lamp		State Action on Action off	CLU->x281000507_LEDRGB1->Value CLU->x281000507_LEDRGB1->SetValue(1) CLU->x281000507_LEDRGB1->SetValue(0)		Open Close SCENE_DOUBLE
	TURN OFF everything		▼ Status Unit	PERCENT		Dimmmer DIMMER
Ð	Cinema mode Turn off	Ð	Min Max State	0.0 1.0 CLU->x281000507_LEDRGB1->Value		LED lighting
	SCENE_DOUBLE		▼ Slider Label	Brightness		🕞 Thermostat
	DIMMER		Min	0.0		THERMOSTAT
	Bedroom LED		Max State	1.0 CLU->x281000507_LEDRGB1->Value		Roller shutter ROLLER_SHUTTER
			Action slide	CLO->X28100000/_LEDKG81-> SetValue(Svalue)	•)	
					Close	
					Registered mobile devices: 0	260M of 266M

3.10. Dimmer v2 (DIMMER_V2)

Note!

The DIMMER_V2 widget is available for Object Manager version 1.7.0 or higher, and for myGrenton application version 1.5.0 or higher (Android) and version 1.9.0 or higher (iOS).

Widget dedicated for DIMMER and LEDRGBW modules, enables smooth lighting control. The DIMMER_V2 widget contains:

- value the current output value expressed as a percentage, displayed in the right part of the widget (calculated on the basis of the set Min, Max properties),
- actions on / off actions triggered when clicking on the widget to activate / deactivate the output,
- output control slider works in percentage mode, the output value is set on the basis of the given range (Min, Max properties) and precision (the Precision property determines the number of decimal places of the set value).



For DIMM, LEDRGB, LEDRGBW objects, pre-defined templates for the DIMMER_V2 widget are defined. To add a DIMMER_V2 widget with a pre-made template, drag an object from the list of objects to the interface page:

€ ⁰ ₀ House	*My house	8						
🛧 🖈 🗊 🗊 🖈 🆶								l III.
Filter objects								neader
✓ 🚱 Object Manager								HEADER
CL0221000332				A 107 da an			× l	
• Indication				widget generating			~	Value
+ stational onew service of					011			VALUE_V2
x191000129 DOUT 01		Page		Object label	Object type	widget type		
★ x191000129 DOUT 02				x320000441_DIMM_01	Object - DIMM	DIMMER_V2	-	Value Value
de x191000139 PowerSupply/oltage 01								- Toroc
x201000011 DOUT 01								VALUE_DOUBLE
x201000011 DOUT 02								
x201000011 DOUT 03								- On/Off
x201000011_DOUT_04								an orr
x201000011_PowerSupplyVoltage_01								UN_OFF
x201001991_DOUT_01								1 min
x201001991_DOUT_02								
x201001991_DOUT_03								ON OFF DOUBLE
★ x201001991_DOUT_04								
x201001991_PowerSupplyVoltage_01								Scene
x281000024_LEDRGB_01								and the same in the
x281000024_PowerSupplyVoltage_01								SCENE
* x320000441_0IMM_01								and a second sec
* x33000283_0IN_01	A							Open Close
220000283_DIN_02	U		Drag of					CONT DOUDLE
4 x330000283 DIN 04								SCENE_DOUBLE
🚸 x330000283 DIN 05								A -1
★ x330000283 DIN 06								Dimmmer
4 x330000283_DIN_07						01		DIMMER_V2
4 x330000283_DIN_08						OK		
x330000283_DOUT_01			-					LED lighting
x330000283_DOUT_02								
x330000283_DOUT_03								LED
★ x330000283_DOUT_04								
A x330000283_DOUT_05								Thermostat
A x330000283_DOUT_06								THERMOSTAT
* x330000283_DOUT_0/								
m x330000283_0001_06								
w v3000020_Power30ppiyvoitage_01								Roller snutter
4 x340000089 DIN 02								ROLLER_SHUTTER
★ x340000089 DOUT 01								
★ x340000089_DOUT_02								Roller shutter
x340000089_PowerSupplyVoltage_01								
x380100539_ZWAVE_CONFIG_01								ROLLER_SHUTTER_V3
* x380100539_ZWAVE_DIN_01	1							
* x380100539_ZWAVE_DIN_02								Camera
* x380100539_ZWAVE_DIN_03								CAMERA
.1								Someno v

Filled DIMMER_V2 widget:



Widget appearance in the myGrenton application:



3.11. LED Lighting (LED)

Widget dedicated to LED lighting. It has one bistable on/off switch and 3 sliders: Color control slider, Saturation control slider, Brightness control slider.

y house 🛛					-
					Header HEADER
×	0	Prop	erties	×	Value
Page		Name	Value		VALUE
Header name	Type Bistable button	•	LED	ŝ	On/Off ON_OFF
HEADER	Label		LED lighting rgb		Scene
Light sensor value	Indication	•	ON_OFF		SCENE
-🍟 - Living room lamp	Action on Action off	0			Open Close
	▼ Slider hue Label		Hue		Dimmmer
	Unit Min		UNKNOWN 0.0		DIMMER
Cinema mode Turn off	Max State	•	360.0		LED lighting
Bedroom Jamp	Action slide Slider saturation	•			F Thermostat
DIMMER	Label Unit		Saturation UNKNOWN		THERMOSTAT
Bedroom LED	Min Max		0.0		Roller shutter ROLLER_SHUTTER
	State Action slide	9			
LED O	 Slider brightness 			~	
				Close	
	7				
				Registered mobile devices: 0	269M of 366M

For LED lighting, ready-made templates for the LED widget are defined. To add a LED widget with a ready template, drag the LEDRGB object from the list of objects to the interface page:

🕼 Home 🍈 Trash 👘 🗇	*My house					6
						Header HEADER
(e) x27000452_BUTTON2 (e) x27000452_BUTTON3 (e) x27000452_BUTTON4 (e) x27000452_BUTTON4		0	Widget generating	×		Value
x270000452_PANELSENSLIGHT1	Page	Object label	Object type	Widget type		
nk, x27000452,PANELSENSTEMP1 nk, x281000507,AnalogIN1 nk, x281000507,LEDRGB1 nk, x220001024,DIMM11	Header name HEADER	x281000307_LEDW381	LEDINGB	LED ¥		- · · On/Off ON_OFF
ek x330000132_AnalogIN1 ek x330000132_DIN1 ek x33000132_DIN2 ek x33000132_DIN2	Light sensor value					Scene SCENE
<pre>/dv x330000132_DIN4 /dv x330000132_DIN5 /dv x330000132_DIN6 /dv x330000132_DIN6</pre>	Living room lamp					Open Close SCENE_DOUBLE
	TURN OFF everything					Dimmmer DIMMER
 ♠ x30000132_DOUT3 ♠ x30000132_DOUT4 ♠ x30000132_DOUT5 ♠ x30000132_DOUT6 	Cinema mode Turn					LED lighting
★ x30000132_DOUT7 ★ x330000132_DOUT8 ★ x4262592002_EINARY_SENSOR1 ★ x4262592002_ZWAVE_BATTERY1	Bedroom lamp			OK Cancel		Thermostat THERMOSTAT
 262592002_ZWAVE_CONFIG1 ***4262592002_ZWAVE_WAKEUP1 *4262592003_ZWAVE_WAKEUP1 ****4262592003_ZWAVE_BATTERY1 	Bedroom LED DIMMER					Roller shutter

de x461000377_AnalogIN3 de x461000377_AnalogIN4 de x461000377_AnalogIN5		_				
ek x46100377_AnalogIN6 ek x46100377_AnalogIN7 ch x46100377_AnalogOUT1 ch x46100377_AnalogOUT2						
Ten Constan					Resistand mobile devices: 0	2253.4 -4 264

Filled LED widget:

My house 😒			Header HEADER
×	0	Properties	× Value
Page	Name	Value	VALUE
Hander name	Type	LED	
HEADER	Label	Bedroom LED	ON_OFF
Light sensor value VALUE	kon Indication State Action on Action off V Slider hue Label Unit Min Max State Action slide V Slider startation	rgb ON_OFF CLU->x281000507_LEDRG81->SetValue CLU->x281000507_LEDRG81->SetValue(1) CLU->x281000507_LEDRG81->SetValue(0) Hue UNNNOWN 0.0 360.0 CLU->x281000507_LEDRG81->Hue CLU->x281000507_LEDRG81->Hue CLU->x281000507_LEDRG81->Hue CLU->x281000507_LEDRG81->Hue CLU->x281000507_LEDRG81->Hue CLU->x281000507_LEDRG81->Hue CLU->x281000507_LEDRG81->Hue CLU->x281000507_LEDRG81->Hue CLU->x281000507_LEDRG81->Hue CLU->x281000507_LEDRG81->Hue CLU->x281000507_LEDRG81->Hue CLU->x281000507_LEDRG81->Hue CLU->x281000507_LEDRG81->Hue CLU->X2810050507_LEDRG81->Hue CLU->X2810050507_LEDRG81->Hue CLU->X2810050507_LEDRG81->Hue CLU->X2810050507_LEDRG81->Hue CLU->X2810050507_LEDRG81->Hue CLU->X2810050507_LEDRG81->Hue CLU->X2810050507_LEDRG81->Hue CLU->X2810050507_LEDRG81->Hue CLU->X2810050507_LEDRG81->Hue CLU->X2810050507_LEDRG81->Hue CLU->X2810050507_LEDRG81->Hue CLU->X2810050507_LEDRG81->Hue CLU->X2810050507_LEDRG81->Hue CLU->X2810050507_LEDRG81->Hue CLU->X2810050507_LEDRG81->Hue CLU->X2810050507_LEDRG81->Hue CLU->X2810050507_LEDRG81->HU	Scene SCRE Open ScENE_DOUBLE Close Scene_DOUBLE Dimmmer DIMMER LED LED lighting LED LED Thermostat
DIMMER Bedroom LED DIMMER Bedroom LED LED	Unit Min Max State Action slide ¥ Slider brightness	UNINOWN 0.0 1.0 CLU->x281000507_LEDRGB1->Saturation CLU->x281000507_LEDRGB1->SetSaturation(\$value\$)	Roller shutter ROLLER_SHUTTER

3.12. Thermostat (THERMOSTAT)

Note!

Widget is supported for thermostats created in **CLU 2.0!**

Widget dedicated for virtual objects of the thermostat type. In the case when we draw from the list of objects already defined thermostat to the interface, the created widget is completed on the basis of given thermostat input and output features.

<complex-block><complex-block></complex-block></complex-block>	● *My house 🛛				- 8
Action set • Mode State • Mode State • Mode State • Competitive from the sensor State • Competitive from the sensor • Competitive fr	My house 22 My house 22 Page Header name HEADER Utight sensor value VALUE	▼ State of thermostat Label kon State	Properties Value THERMOSTAT Thermostat temperature	×	Header HEADER VALUE VALUE VALUE VALUE VALUE Scene Scene
LED Thermostat THERMOSTAT •	Cinema mode Cress Cinema mode Cinema Cinema Cinem	Action set Action set Action set Action set Temperature from the sensor State Target temperature State Action set Output state State State Action set Action s			Open Close SCANE DOUBLE Dimmmer DIMMER Comparison Dimmer DIMMER Comparison
Revisered mobile devices () Topos a data a	LED Thermostat THERMOSTAT	Action set ▼ Minimum temperature State Action set ▼ Maximum temperature	0	Close Resistant mobile device: 0	ROLLER SHUTTER

For thermostats, ready-made templates for the THERMOSTAT widget are defined. To add a THERMOSTAT widget with a ready template, drag the virtual thermostat from the list of objects to the interface page:

Ki Home 🕤 Trash 🔍 🗈	I *My house	22				- 8
A & D = S +						
A 🚱 Object Manager						Header
4 - + + + CIU						HEADER
Scripts						
+ Add script			×			
Start_cimena_mode			0	Widget generating		Value
Stop_cinema_mode			-			VALUE
Turn_off_everything		Page	Object label	Object type	Widget type	
*Thermostat1			Thermoster 1	THERMOSTAT		
★ x201000275_AnalogIN1		Header name	merniostaci	THERMOSTAT	THERMOSTAT +	
★ x201000275_DOUT1		UFADER				ON_OFF
★ x201000275_DOUT2		HEADER				
★ x201000275_DOUT3						Scene
★ x201000275_DOUT4		Light sensor value				CONC. TO MARKE
A x250004877_PANEL1		VALUE				SCENE
A x250004877_PANELSENSLIGHT1						C / The second second
X250004077_PANELSENSTEMPT		A la incomentante				Open Close
A 220004077_PANEL_BUTTONIO						SCENE_DOUBLE
250004877 PANEL_BUTTON11		ON_OFF				
4 v250004877 PANEL BUTTON12						C Dimmmor
250004877 PANEL BUTTON13		TURN OFF everything				Uninner (
* x250004877 PANEL BUTTON14		and the second second				DIMMER
★ x250004877 PANEL BUTTON15		SCENE EX				
★ x250004877_PANEL_BUTTON16	(+)	State of the second second				🙅 LED lighting
★ x250004877_PANEL_BUTTON2	U	Cinema mode Turn	•			100
★ x250004877_PANEL_BUTTON3		SCENE DOUBLE				LED
★ x250004877_PANEL_BUTTON4						0
★ x250004877_PANEL_BUTTON5		A Deducar lana				5 Thermostat
№ x250004877_PANEL_BUTTON6		🚔 Bedroom lamp				THERMOSTAT
x250004877_PANEL_BUTTON7		DIMMER			OK Cancel	
x250004877_PANEL_BUTTON8						Roller shutter
A x25000487/_PANEL_BUTTON9		😣 Bedroom LED				
M X20004077_PANEL_PAGE1		100				ROLLER_SHUTTER
V ACCOUNT FANEL PAGES		LED				
J v250004977 DANEL DAGEA						
de x270000452 AnalonIN1						
*x270000452 BUTTON1						
▶ x270000452_BUTTON2						
★ x270000452_BUTTON3						
x270000452_BUTTON4						
№ x270000452_PANEL1						
★ x270000452_PANELSENSLIGHT1						
No. x270000452_PANELSENSTEMP1						
AnalogIN1 x281000507_AnalogIN1						
x281000507_LEDRGB1						
x320001024_DIMM1						
1 x330000132_AnalogIN1						
at any more read						

Filled THERMOSTAT widget:

Header
× Value VALUE
- On/Off ON_OFF
Scene
SCENE
Open
open
SCÈNE_DOUBLE
Dimmmer
DIMMER
DIMMER
😣 LED lightin
LED
👫 Thermostat
THERMOSTAT
Roller shutt
ROLLER_SHUTTER
U III
~
Close

A. Schedule configuration in the application

Note!

The new schedule configuration is available for myGrenton application version 1.2.3 or higher (Android) and version 1.6.0 or higher (iOS).

In the myGrenton application, you can edit the thermostat schedule. To do this, click on the widget temperature field:



Then select the schedule mode and the EDIT SCHEDULE option:



The window will display the schedule downloaded from the CLU. You can edit this schedule or add new schedules for each day of the week:

5			Android	
T-Mobile 奈	13:21	@ 🏾 37% 🔲	11:27 ^{6 kB/s} t	© ♥⊿ 🕯 6
ancel		Save	← Schedu	ıle
			Weekdays	
Weekdays	END	TEMPEDATURE	00:00 - 06:00	20.0°
00:00	09:00	20.0°	06:00 - 22:00	21.0°
09:00	20:00	22.0°	22:00 - 24:00	20.0°
20:00	24:00	20.0°	Edit	
Edit			Weekend	
			00:00 - 06:00	20.0°
Weekend			06:00 - 22:00	22.0°
start 00:00	end 09:00	TEMPERATURE	22:00 - 24:00	20.0°
09:00	20:00	22.0°	Edit	
20:00	24:00	20.0°		
Edit				
			Add new scł	nedule

Adding a new schedule

After selecting Add Schedule For Other Days (iOS) or Add new schedule (Android), the adding schedule window will open:

iOS		Android	
11 T-Mobile 奈 13:51		11:27 ^{0 kB/s} t	ഀ ♥⊿ 🕯 66%
Cancel	Save	← Edit schede	ule 🗸
Days Active	s s	Select days	F S S
Days Needs To Be Selected		00:00 - 06:00	20.0°
At least one day needs to be selected i section in the schedule	n order to place	06:00 - 22:00	20.0°
Intervals		22:00 - 24:00	20.0°
START END 00:00 09:00	temperature 20.0°	Add new inter	val
09:00 20:00	22.0°		
20:00 24:00	20.0°		
Add New Interval		Set default inte	rvals
		Delete sectio	on

Then:

- Mark the desired days of the week (at least one day must be selected),
- Set the temperature for specific time intervals (after opening the window, default time intervals are displayed),
- Accept the changes by clicking on Save.

The application for unselected days of the week will automatically create a new schedule or add them to the existing one to correctly complete the values for the whole week.

Delete / edit a section of the schedule

After selecting Edit for the selected section of the schedule, the editing window will open, where you can edit the selected days of the week, time intervals or delete the section:



To delete a schedule section, click on Remove Section. After deleting the schedule, the application will automatically create a new schedule for the missing days of the week or add them to the existing one to correctly complete the values for the whole week.

With the option Set Default Intervals, you can replace the current time intervals with the default ones.

Adding new time periods

After selecting Add New Interval, the window for adding a time interval will open:

S		Android		
T-Mobile 🗢 13:52		11:28	2 kB/s ↑ 10 kB/s ↑	© ♥⊿ 🕯 66%
Cancel	Save	÷	Add interval	~
		Hours		
Start	09:00	Start		06:00
End	20:00	End		22:00
Temperature	22.0°		21 45	
20.5°			22 : 00	
21.0° 21.5°			23 15	
22.0°			Cancol	OK
22.5°		Values	Cancer	UK
23.0° 23.5°		Temperat	ure	21.0

Then:

- Enter the start time of the interval,
- Enter the end time of the interval,
- Set the desired temperature,
- Accept the changes by clicking on Save.

The application will automatically add intervals for unaccounted hours to correctly fill in the values for the whole day.

Note! The Add New Interval option allows you to add up to 6 time periods.

Delete / edit time period

To edit an existing period, click on the time period (iOS / Android) or make a left-swipe gesture on the time period, and then click on the Edit option (available only for iOS).

To delete a time period, perform a left-swipe gesture on the time period, and then click Delete.

iOS			Android		
📶 T-Mobile 奈	13:52	@ 85%	11:27	0 kB/s t 0 kB/s t ↓	© ♥⊿ 🕯 66%
Cancel		Save	÷	Edit schedule	~
			Select days		
Days Activ	/e		МТ	W T F	ss
Μ		F S S	Intervals		
			00:00 - 06:	00	20.0°
Intervals			22:00	21.0°	Ē
00:00	09:00	20.0°	22:00 - 24:	00	20.0°
:00	22.0°	Edit Delete		Add new interval	
20:00	24:00	20.0°			
Add New Ir	nterval				
			S	et default intervals	
	Set Default Inte	rvals		Delete section	

3.13. Roller Shutter (ROLLER_SHUTTER)

The widget is used to control the blinds. The application displays the current status of the blinds (STOPPED, CLOSED, OPEN).

*My hous	e X				
					Header HEADER
	×	0	Properties	×	Value
	Page	N	ame	Value	VALUE
	Header name	Type Type Type	ROLLER_SHUTTER		- · · · On/Off ON_OFF
	Light sensor value	Label	Roller shutter blinds		Scene
	VALUE	Indication	ON_OFF		SCENE
	- Civing room lamp	Action click	0		Open Close
	TURN OFF everything				Dimmmer
Ð	Cinema mode Turn off	Ð			LED lighting
	Sedroom lamp				Thermostat THERMOSTAT
	Bedroom LED				Roller shutter
	Bedroom thermostat				
	Roller shutter			Close	
				Registered mobile devices: 0	69M of 102M

For blind controllers, pre-defined templates for the ROLLER_SHUTTER widget are defined. To add the ROLLER_SHUTTER widget with a ready template, drag the ROLLER_SHUTTER object from the list of objects to the phone:

🕼 Home 😁 Trash	- 8	🖲 *My hou	use 🔀					
det d	^		Page	×			×	Header HEADER Value VALUE
* x180002878_DIN7			Header name	o	Widget generating			
4 x180002878_DIN8			HEADER	Object label	Object type	Widget type		ON_OFF
* 190000850_D0011			henoen	x450004246_ROLLER_SH1	ROLLER_SH	ROLLER SHUTTER	~	Second in the
x20002118_DOUT1 x20002118_DOUT2 x20002118_DOUT2 x20002118_DOUT3			Light sensor value					SCENE
★ x200002118_DOUT4 ★ x210001703_DIMM1 ★ x260000524_AnalogIN1 ★ x260000524_BILITION1			- Civing room lamp ON_OFF					Open Close SCENE_DOUBLE
★ x260000524_BUTTON2								Dimmmer
★ x260000524_BUTTON3			TURN OFF everything					DIMMER
ek x260000524_BUTTON5 ek x260000524_BUTTON5 ek x260000524_BUTTON6 ek x260000524_BUTTON8		Ð	SCENE					LED lighting
			Bedroom lamp					Thermostat THERMOSTAT
x31000009_DIMM1 x31000009_DIMM2								Roller shutter
★ x450004246_ROLLER_SH1			Bedroom LED					ROLLER SHUTTER
n x460000949_AnalogIN1			LED			OK	ancel	
+ +460000984_Analog102 + +460000984_Analog103 + +460000984_Analog103 + +460000984_Analog1017 - +460000984_Analog1017 - +460000984_Analog1017 - +460000984_Analog1017 - +460000984_Analog1017 - +46000014_Analog1017 - +67000021_Analog101 - +67000021_Analog101 - +670000021_Analog101 - +670000021_Analog101 - +670000001_Analog101 - +670000001_Analog101 - +670000001_Analog101 - +670000001_Analog101 - +670000001_Analog101 - +670000001_Analog101 - +670000000_Analog101 - +67000000_Analog101 - +67000000_Analog101 - +67000000_Analog101 - +67000000_Analog101 - +67000000_Analog101 - +67000000_Analog101 - +67000000_Analog101 </td <td></td> <td></td> <td>Bedroom thermost.</td> <td>at</td> <td></td> <td></td> <td></td> <td></td>			Bedroom thermost.	at				

Filled ROLLER_SHUTTER widget:

*My house	8					
	×			Proventing	×	Header HEADER
			0	Properties		VALUE
	Page		Name	Value		
	Header name HEADER		Type	ROLLER_SHUTTER		ON_OFF
			Label	Bedroom blinds		and a star
	Light sensor value		lcon Indication	blinds ON_OFF		SCENE
	- Living room lamp		State Action click	CLU->x450004246_ROLLER_SH1->State CLU->x450004246_ROLLER_SH1->Start	0)	Open Close
	TURN OFF everything					Dimmmer DIMMER
Ð	Cinema mode Turn off	Ð				LED lighting
	Bedroom lamp					Thermostat THERMOSTAT
	Bedroom LED					Roller shutter
	Bedroom thermostat THERMOSTAT					
	Bedroom blinds ROLLER_SHUTTER				Close	
					Registered mobile devices: 0	146M of 204M

3.14. Roller Shutter v2 (ROLLER_SHUTTER_V2)

Note!

The ROLLER_SHUTTER_V2 widget is available for Object Manager version 1.4.0 or higher, CLU version 5.7.1 or higher, Roller Shutter x1 DIN / Roller Shutter x3 DIN / Roller Shutter FM module in version 2.1.1 or higher and for myGrenton application version 1.2.3 (Android) / 1.6.0 (iOS) or higher.

Note!

From the version of Object Manager 1.6.0, the ROLLER_SHUTTER_V2 widget and the possibility of using it as a pre-defined template will not be available. It is replaced with the ROLLER_SHUTTER_V3 widget.

ROLLER_SHUTTER_V2 widgets included in projects created on previous versions of Object Manager will still be properly supported and displayed in the myGrenton application.

Widget dedicated to advanced control of blinds and slats. The ROLLER SHUTTER_V2 widget supports:

- Buttons enabling the actions of OPENING / CLOSING / STOP the roller shutter,
- Percentage of shutter opening level,
- Sliders for controlling and displaying the shutter and slat opening level.



For blind controllers, pre-defined templates for the ROLLER_SHUTTER_V2 widget are defined. To add the ROLLER_SHUTTER_V2 widget with a ready template, drag the ROLLER_SHUTTER object from the list of objects to the phone:



Filled ROLLER_SHUTTER_V2 widget:

I My home 🛙			
			Header HEADER
×			Value
Page	O Properties	×	VALUE
	Name	Value	- Ó- On/Off
x451002574_ROLLER_SHUTTER1	 Button raise/stop/lower 		ON OFF
ROLLER_SHUTTER_V2	Label	x451002574_ROLLER_SHUTTER1	
	lcon	blinds	- Ó- On/Off - Ó- On/Off
	State	CLU221001380->x451002574_ROLLER_SHUTTER1->State	ON_OFF_DOUBLE
	Action click	CLU221001380->x451002574_ROLLER_SHUTTER1->Start(0)	
	 Raise button 		Scene
	Action click	CLU221001380->x451002574_ROLLER_SHUTTER1->MoveUp(0)	SCENE
	▼ Lower button		and a second
	Action click	CLU221001380->x451002574_ROLLER_SHUTTER1->MoveDown(0)	Open Close
	 Slider open level 		SCENE_DOUBLE
	Label	Open level	
(+) (+)	Unit	PERCENT	Dimmmer
•	Min	0.0	DIMMER
	Max	100.0	
	State	CLU221001380->x451002574_ROLLER_SHUTTER1->Position	LED lighting
	Action slide	CLU221001380->x451002574_ROLLER_SHUTTER1->SetPosition(\$val	LED
	▼ Slider slats level		•
	Label	Slats level	thermostat
	Unit	DEGREE	THERMOSTAT
	Min	0.0	
	Max	90.0	Roller shutter
	State	CLU221001380->x451002574_ROLLER_SHUTTER1->LamelPosition	ROLLER_SHUTTER
	Action slide	CLU221001380->x451002574_ROLLER_SHUTTER1->SetLamelPositio	
		Close	ROLLER_SHUTTER_V2
	L		Camara
			Canera
			CAMERA
L		Manual Interference	

Widget appearance in myGrenton application:





3.15. Roller Shutter v3 (ROLLER_SHUTTER_V3)

Note!

The ROLLER_SHUTTER_V3 widget is available for Object Manager version 1.6.0 or higher, CLU version 5.7.1 or higher, Roller Shutter x1 DIN / Roller Shutter x3 DIN / Roller Shutter FM module in version 2.1.1 or higher and for myGrenton application version 1.4.0 (Android) / 1.8.0 (iOS) or higher.

Widget dedicated to advanced control of blinds and slats. The ROLLER SHUTTER_V3 widget supports:

- Buttons enabling the actions of OPENING / CLOSING / STOP the roller shutter,
- Percentage of shutter opening level,
- Sliders for controlling and displaying the shutter and slat opening level,
- Display of the state of Calibration / Locked.



For blind controllers, pre-defined templates for the ROLLER_SHUTTER_V3 widget are defined. To add the ROLLER_SHUTTER_V3 widget with a ready template, drag the ROLLER_SHUTTER object from the list of objects to the phone:

	My hou:	e 🛙						•
🔹 🧟 🗊 🔂 🎰								Open Close
 A \$44000335_01N_01 A \$40000355_01N_02 A \$40000355_00UT_01 A \$40000355_00UT_01 A \$40000355_00UT_02 				×				Dimmmer DIMMER
 ************************************		Page						LED lighting
* x380100512_ZWAVE_DIN_04				😡 Widget generating			×	
x39010687_ZWAVE_CONFIG_01 x390110687_ZWAVE_DIN_01 x390110687_ZWAVE_DIN_02				Object label	Object type	Widget type		THERMOSTAT
★ x390110687_ZWAVE_DOUT_01 ★ x390110687_ZWAVE_DOUT_02 ★ x400110056_ZWAVE_CONFIG_01				x451002574_ROLLER_SHUTTER_01	Object - ROLLER, SHUTTER	ROLLER_SHUTTER_V3	~	Roller shutter
A ×40110056_ZWAVE_DIN_02 ×400110056_ZWAVE_ROLLER_SHUTTER_01 ×42100113_DIN_01								Roller shutter
ek, x421000113_UIN_02 ek, x421000113_EERG8W_01 ek, x42100013_PowerSupplyVoltage_01 ek, x441000509_DIN_01	Ð		Drag object here					Camera CAMERA
wk 100599_DIN_02 wk x44100559_PowerSupplyVoltage_01 wh x44100559_ROLLER_SHUTTER_01 wk x451002574_PowerSupplyVoltage_01	11							Text TEXT
								Scheduler SCHEDULER
ele x46100050_AnalogIN_04 ele x46100050_AnalogIN_05 ele x46100050_AnalogIN_05 ele x46100050_AnalogIN_05						OK Cancel		Event scheduler
							-	Multisensor MULTISENSOR
								TV remote control
								Audio remote cont
W *conied							Network into	erface: eth2 (192,168,0,111) 25884 of 500M

Filled ROLLER_SHUTTER_V3 widget:

Widget appearance in myGrenton application:

09:32			
< My ho	use		
Page			
	Bedroom blinds Open	~	•
	Bedroom blinds 50% Open	$\hat{\mathbf{v}}$	•
	Bedroom blinds Closed	\sim	• <u> </u>
Redu	room blinds		
Position			50%
Slat Position			90°
			-0

3.16. Camera (CAMERA)

Note!

The CAMERA widget is available for Object Manager version 1.3.5-204201 or higher, and for myGrenton application version 1.2.2 or higher (Android) and version 1.5.1 or higher (iOS).

Widget is used to display streaming video from IP camera. After dragging the widget from the tab on the right side of the screen, it should be completed with the value in the URL field (RTSP stream address for IP camera).


Filled CAMERA widget:

🖲 *My house 😒			- B
			Header HEADER
×	Properties		× Value
Page	Name	Value	VALUE
	Type ▼ Camera stream	CAMERA	-🍎 - On/Off
	Label	Camera 1	ON_OFF
CAMERA	lcon	camera	Scond in the
	URL	rtsp://admin:password@91.91.184.148:1234/cam/realmo	nitor?channel
			Open Close SCENE DOUBLE
			Dimmmer DIMMER
 ⊕)		LED lighting
			F Thermostat THERMOSTAT
			Roller shutter
			Camera CAMERA
			Close
		1	Vetwork interface: wlan0 (192.168.100.7) 130M of 181M

A. Camera configuration

The condition for the proper operation of the widget is to use the video stream with the RTSP protocol and the MJPG codec. Detailed information on camera configuration can be found in the documentation.

Note!

It is recommended to use Dahua or Hikvision cameras. A configuration example is shown based on the settings for the models:

- Dahua IP CAMERA Model: IPC-HFW2531S-S-0280B-S2
- Hikvision NETWORK CAMERA Model: DS-2CD1043G0-I

Example of how to get RTSP stream for Hikvision camera:

1. RTSP without authentication

```
rtsp: // < device IP address > : < RTSP port > / Streaming / channels / <
channel number > < stream number > / ?transportmode=unicast
```

NOTE: < stream number > represents main stream (01) or sub stream (02)

Example:

```
rtsp://173.200.91.70:10554/Streaming/channels/101/?transportmode=unicast - get
main stream for channel 1
```

```
rtsp://173.200.91.70:10554/Streaming/channels/102/?transportmode=unicast - get
substream
```

2. RTSP with authentication

```
rtsp: // < username > : < password > @ < device IP address >: < RTSP port > /
Streaming / channels / < channel number > < stream number > / ?
transportmode=unicast
```

Example:

```
rtsp://admin:password@173.200.91.70:10554/Streaming/channels/101/?
```

transportmode=unicast - get main stream for channel 1

rtsp://admin:password@173.200.91.70:10554/Streaming/channels/102/?

transportmode=unicast - get substream

Example of how to get RTSP stream for Dahua camera:

1. RTSP without authentication

```
rtsp: // < device IP address > : < RTSP port > / cam / realmonitor ? channel =
< channel number > & subtype = < stream number >
```

Example:

```
rtsp://173.200.91.70:10554/cam/realmonitor?channel=1&subtype=1 - get main stream
```

2. RTSP with authentication

```
rtsp: // < username > : < password > @ < device IP address > : < RTSP port > /
cam / realmonitor ? channel = < channel number > & subtype = < stream number >
```

Example:

```
rtsp://admin:password@173.200.91.70:10554/cam/realmonitor?channel=1&subtype=1 -
get main stream
```

B. Camera widget in the app

The stream from the camera is displayed after pressing the widget in the application. To close the preview, press the cross in the upper left corner of the screen or use the system back button. The thumbnail image from the camera is updated each time the stream from the camera is displayed.



Camera stream preview view:



3.17. Text (TEXT)

Note!

The TEXT widget is available for Object Manager version 1.5.0 or higher and for myGrenton application version 1.3.0 (Android) / 1.7.0 (iOS) or higher.

The widget is dedicated to display the value of a user feature or an embedded feature of a given object. The widget has a Icon visibility property that allows you to display or hide the widget icon in the application.



Filled TEXT widget:



The widget supports basic HTML language tags:

-

 </br>
- Bold font,
- <i> Italic font,
- Highlight in the color of the interface theme.

It is possible to nest tags.

Examples of the use of tags:

- Create user features of the String type, e.g:
 - string_br Initial value: Inserts
a single line break ,
 - string_b Initial value: Bold font ,
 - string_i Initial value: <i>Italic font</i>,

- string_em Initial value: Highlight in the color of the interface
 theme.
- string_nested Initial value: <i>Nest tags</i>.
- Add the myGrenton interface containing configured TEXT widgets for the created user features.
- Send the interface to your mobile device.

Widget appearance in the myGrenton application:

III T-Mobile 奈	09:55	🕑 🖉 97% 🔲 '
< My house		
Page		
Inserts a single line b	preak	
Bold font		
Italic font		
Highlight in t interface the	he color of the me	
Nest tags		

3.18. Scheduler (SCHEDULER)

Note!

The SCHEDULER widget is available for Object Manager version 1.5.0 or higher and for myGrenton application version 1.3.0 (Android) / 1.7.0 (iOS) or higher.

Widget dedicated for virtual objects of the scheduler type.



For scheduler, ready-made templates for the SCHEDULER widget are defined. To add a SCHEDULER widget with a ready template, drag the virtual scheduler from the list of objects to the interface page:



Filled SCHEDULER widget:



In the myGrenton application, you can edit the schedule. To do this, click on the widget value field:



Schedule configuration has been described for the THERMOSTAT widget <u>look up XVIII.3.9.A.</u>. Slight differences are due to the different characteristics of the virtual scheduler object.

3.19. Event Scheduler (EVENT_SCHEDULER)

Note!

The EVENT_SCHEDULER widget is available for Object Manager version 1.6.0 or higher, CLU version 5.9.1 or higher, for myGrenton application version 1.4.0 (Android) / 1.8.0 (iOS) or higher.

Widget dedicated for virtual objects of the event scheduler type.



For event scheduler, ready-made templates for the EVENT_SCHEDULER widget are defined. To add a EVENT_SCHEDULER widget with a ready template, drag the virtual event scheduler from the list of objects to the interface page:

C ⁰ ₀ Test07	🖲 Myhouse 🖾						
🛧 ৸ 🗊 🗉 😽							ON_OFF_DOUBLE
Filter objects	Page		×				Scene SCENE Open Close SCENE_DOUBLE
A x181000775_DIN_04			Widget generating		×	1	Dimmmer
* x181000775_DIN_06			Object label	Object type	Widget type		DIMMER
			Morning_event	Virtual object - EventScheduler	EVENT_SCHEDULER •		LED lighting
★ x191000162_DOUT_02 ★ x191000162_PowerSupplyVoltage_01 ★ x201000275_DOUT_01 ★ x201000275_DOUT_01							Thermostat THERMOSTAT
 ★ x201000275_DOUT_03 ★ x201000275_DOUT_04 ★ x201000275_PowerSupply/oltage_01 ★ x20100027_DeverSupply/oltage_01 	æ						Roller shutter
		Drag object here					Roller shutter
Associates_Unit_uz Associates_Unit_uz Associates_Unit_uz Associates_Unit_uz Associates_Unit_uz Associates_Unit_uz							Camera CAMERA
ele x33000395_DIN_06 ele x33000395_DIN_07 ele x33000395_DIN_08 et x33000395_DIN_08					OK Cancel		Text TEXT
 ↑ x30000395_DOUT_02 ↑ x330000395_DOUT_03 ↑ x330000395_DOUT_04 ↑ x330000395_DOUT_05 		L					Scheduler SCHEDULER
 ♠ x330000395,DOUT_06 ♠ x330000395,DOUT_07 ♠ x330000395,DOUT_08 ➡ x330000395,PowerSupplyVoltage_01 							Event scheduler EVENT_SCHEDULER
							Multisensor MULTISENSOR
A x340000535_PowerSupplyVoltage_01						Natural interface ath2 (10)	TV remote control

Filled EVENT_SCHEDULER widget:



A. Event scheduler configuration in the application

In the myGrenton application, you can edit the rules of the event scheduler. To do this, click on the widget value field:



The window will display the rules downloaded from the CLU. You can edit these rules or add new ones for each day of the week:

•



Adding a new rule

After selecting Add New Rule, the adding rule window will open:



Then:

- Mark the desired days of the week (at least one day must be selected),
- Set the trigger time,
- Accept the changes by clicking on Save.

Activate / deactivate the rule

To activate / deactivate a rule, click on the slider in the right part of the rule:



Delete / edit rule

To edit an existing rule, click on the rule (Android) or make a left-swipe gesture on the rule, and then click on the Edit option (available only for iOS).

To delete a rule, perform a left-swipe gesture on the rule, and then click Delete.



3.20. Multisensor (MULTISENSOR)

Note!

The TV_REMOTE_CONTROL widget is available for Object Manager version 1.6.0 or higher, CLU version 5.9.1 or higher, Multisensor IR module in version 1.2.6 or higher, for myGrenton application version 1.4.0 (Android) / 1.8.0 (iOS) or higher.

Widget dedicated to displaying the parameters of the GRENTON MULTISENSOR IR device. It allows you to display environmental parameters such as: temperature, humidity, CO2, VOC (Volatile Organic Compounds), air pressure, sound intensity and light intensity. The widget has a Label Visibility property that allows you to display or hide the widget label in the application. The order of displayed parameters can be changed in the myGrenton application.

∎ *My house ⊗					-
	×				Open Close
	^	O Properties		×	Dimmmer DIMMER
Page		Name	Value		
Multisensor		Туре	MULTISENSOR	âl	LED lighting
MULTISENSOR		Label	Multisensor		
		Icon	multisensor		📑 Thermostat
		Label visible"	true		THERMOSTAT
		Threshold			_
		Sensitivity			Roller shutter
		Minimum value			ROLLER_SHUTTER
		Maximum value			Delle shuter
		Value*	0		Roller snutter
		▼ Light sensor*			ROLLER_SHUTTER_V3
\frown		Threshold		U	Camera
\pm	Ð	Sensitivity			CAMERA
		Minimum value			
		Maximum value			Text
		Value*	•		TEXT
		Humidity sensor*			
		Threshold			Scheduler
		Sensitivity			SCHEDULER
		Minimum value			Europe and and a data
		Value*	•		cvent scheduler
		▼ Pressure sensor*	•		EVENT_SCHEDULER
				~	Multisensor
				Close	MULTISENSOR
		L			
					TV remote control
					TV_REMOTE_CONTROL
					(Audio remote con
					AUDIO_REMOTE_CONTRO
				Network interfaces ath 2 (1	02 169 0 111)

For MULTISENSOR object, pre-defined templates for the MULTISENSOR widget are defined. To add the MULTISENSOR widget with a ready template, drag the MULTISENSOR object from the list of objects to the phone:

Contraction Contra	*My hor	use 🖾						
👻 ಿ 💷 🗊 🎍 🏫 Filter objects								Open Close
✓ ③ Object Manager Scripts (from every CLUs) ✓ ♣ Scripts (from every CLUs) ✓ ♣ (CLU221001090 SOI MULTISENSOR 0x560000015 (http://d - ftb://2 - ft/)				• Widget generating	1	1	×	Dimmmer DIMMER
 MULTISENSOR 0x560000156 (Ht0x2d - ft0x02 - f MULTISENSOR 0x560000179 (Ht0x2d - ft0x02 - f x560000179_AIR_CO2_SENSOR_01 ml x560000179_AIR_VOC_SENSOR_01 		Page		Object label MULTISENSOR	Object type Module - MULTISENSOR	Widget type MULTISENSOR +		LED lighting
								Thermostat THERMOSTAT
*********************************								Roller shutter
 Twy nouse Visual Builder 								Roller shutter
	Ð		Drag object here					Camera CAMERA
						OK Cancel		Text TEXT
				_				Scheduler SCHEDULER
								Event scheduler
								Multisensor MULTISENSOR
								TV remote control
۲								(Audio remote co

Filled MULTISENSOR widget:



Widget appearance in the myGrenton application, versions with visible and hidden label:





3.21. TV Remote Control (TV_REMOTE_CONTROL)

Note!

The TV_REMOTE_CONTROL widget is available for Object Manager version 1.6.0 or higher, for myGrenton application version 1.4.0 (Android) / 1.8.0 (iOS) or higher.

The widget is modeled on the appearance of the TV Remote Control. It allows you to work with devices integrated with the Grenton system and replace the traditional remote control. The control is carried out by means of actions assigned to the selected buttons. The Tv Remote Control widget contains:

- initialization action action triggered when clicking on the widget on the myGrenton application (any action can be assigned),
- buttons to control the activation / deactivation of the device,
- buttons for changing the channel (program) and changing the device volume,
- buttons to control playback (pause, run, forward, rewind),
- function buttons (menu, VOD, return, etc.).

Operation in the Remote TV widget is one-way, it is not possible to read the device status.

*My house 13				- 8
				Open Close
×	O Properties		×	Dimmmer
Page	Name	Value		DIMMER
	Туре	TV_REMOTE_CONTROL		LED lighting
H TV remote control	Label*	TV remote control		LED
TV_REMOTE_CONTROL	VOD Label*	VOD remote control		OF The second second
	▼ Object	Vob remote control		Thermostat
	Init action			THERMOSTAT
	Off			Roller shutter
	On			ROLLER_SHUTTER
	Up			
	Down			Roller shutter
	Left			ROLLER_SHUTTER_V3
	OK			Camera
$\mathbf{\Phi}$	Mute			CAMERA
	Guide			
	Volume UP			Text
	Volume DOWN			TEXT
	Back			Cabadular
	Menu			SCHEDULER
	VOD		U	SCHEDOLEK
	Previous channel			Event scheduler
	Fast rewind			EVENT_SCHEDULER
	·			Multisensor
		Close		MULTISENSOR
				TV remote control
				TV_REMOTE_CONTROL
				(Audio remote cont
				AUDIO REMOTE CONTROL
			Network interface: wlan4 (192,16	8.88.249) 113M of 464M





TV remote control



3.22. Audio Remote Control (AUDIO_REMOTE_CONTROL)

Note!

The AUDIO_REMOTE_CONTROL widget is available for Object Manager version 1.6.0 or higher, for myGrenton application version 1.4.0 (Android) / 1.8.0 (iOS) or higher.

Widget dedicated to controlling audio systems. It allows you to work with devices integrated with the Grenton system. The control is carried out by means of actions assigned to the selected buttons. The AUDIO_REMOTE_CONTROL widget contains:

- initialization action action triggered when clicking on the widget on the myGrenton application (any action can be assigned),
- buttons to control the activation / deactivation of the device,
- buttons for changing the device volume,
- buttons to control playback (pause, run, next, previous),
- artist and title display fields.

Operation in the Remote Audio widget is one-way, it is not possible to read the device status. It is possible to retrieve information from the selected feature (e.g. user's feature) and display it in the Artist and / or Title field.







Audio remote control

OFF	
Track title Artist	
+ VOL -	

3.22. Contact Sensor (CONTACT_SENSOR)

Note!

The CONTACT_SENSOR widget is available for Object Manager version 1.7.0 or higher, for myGrenton application version 1.5.0 (Android) / 1.9.0 (iOS) or higher.

Widget dedicated to displaying On / Off states based on the value of objects, features. The CONTACT_SENSOR widget contains:

- support for On / Off states based on the value of objects, features (0/1 or true/false), the widget status is properly displayed,
- indications it is possible to set any name of On / Off states through the properties Indication ON, Indication OFF,
- optional click action action triggered when clicking on the widget (any action can be assigned).



For DIN objects, pre-defined templates for the CONTACT_SENSOR widget are defined. To add a CONTACT_SENSOR widget with a pre-made template, drag an object from the list of objects to the interface page:









3.23. Contact Sensor Double (CONTACT_SENSOR_DOUBLE)

Note!

The CONTACT_SENSOR_DOUBLE widget is available for Object Manager version 1.7.0 or higher, for myGrenton application version 1.5.0 (Android) / 1.9.0 (iOS) or higher.

This is the Contact Sensor double-version widget. Widget dedicated to displaying On / Off states based on the value of objects, features. The CONTACT_SENSOR_DOUBLE widget contains:

- support for On / Off states based on the value of objects, features (0/1 or true/false), the widget status is properly displayed,
- indications it is possible to set any name of On / Off states through the properties Indication ON, Indication OFF,
- optional click action action triggered when clicking on the widget (any action can be assigned).



Filled CONTACT_SENSOR_DOUBLE widget:





3.24. Slider (SLIDER)

Note!

The SLIDER widget is available for Object Manager version 1.7.0 or higher, for myGrenton application version 1.5.0 (Android) / 1.9.0 (iOS) or higher.

Widget dedicated to smooth value control. The SLIDER widget contains:

- unit units to choose from: UNKNOWN, PERCENT, DEGREE,
- value current output value displayed in the right part of the widget. For the PERCENT unit, calculated on the basis of the Min, Max properties set, for the UNKNOWN, DEGREE units, the value is displayed with the number of decimal places specified in the Precision property,
- slider value set on the basis of the given range (Min, Max properties) and precision (the Precision property determines the number of decimal places of the set value),
- optional click action action triggered when clicking on the widget (any action can be assigned).



Filled SLIDER widget:





3.25. Air conditioning (COOL_MASTER)

Note!

The COOL_MASTER widget is available for Object Manager version 1.8.0 or higher, for myGrenton application version 1.6.1 (Android) / 1.10.0 (iOS) or higher.

Widget dedicated to work with the CoolMaster virtual object. It is used to control the air conditioning. Allows turn on/off the air conditioner, control such parameters as: set temperature TargetTemp, Mode operating mode, FanSpeed fan speed, LouverPositon level of the air flow regulating slot and displays the current ambient temperature AmbientTemp.

Image: My house ≅					- 0
					ROLLER_SHUTTER
×					Roller shutter ROLLER_SHUTTER_V3
Page		O Properties		×	👦 Camera
Air conditioning		Name	Value		CAMERA
COOL_MASTER ()		Туре	COOL_MASTER	<u>^</u>	- Text
		Label*	Air conditioning		TEXT
		lcon*	ac		H
		Minimum temperature*	10.0		Scheduler
		Maximum temperature*	30.0		SCHEDULER
		▼ Object*			Event scheduler
		CoolMasterNet ID			EVENT_SCHEDULER
		Air conditioners IDs			Multisensor
(\mathbf{H})	(Ŧ)	Supported modes*	0		MULTISENSOR
Ũ	\sim	Supported fan speeds*	0		
		Supported louver positions*	0		IV remote control
		Status*	0		
		State*	0		 Audio remote cont
		Operating mode*	0		AUDIO_REMOTE_CONTROL
		Target temperature*	0		Contact sensor
		Fan speed*	0		CONTACT SENSOR
		Louver position*	0		
		Ambient temperature*	0	~	Cont Cont
				Close	Slider SLIDER
					Air conditioning COOL_MASTER
			Network	k interface: eth2 (192,168,20.1	105) 194M of 378M

For thermostats, ready-made templates for the COOL_MASTER widget are defined. To add a COOL_MASTER widget with a ready template, drag the virtual object CoolMaster from the list of objects to the interface page:











3.26. Personalization of the widget

A. Change the name

The widget name can be quickly changed by clicking on the current widget name. To confirm the change, press *Enter* on the keyboard. To cancel, press *Esc* on the keyboard.

Page1	<
- · · · Living room ON_OFF	
246	
Turn off all	

B. Change icon / background picture

The widget icon can be quickly changed by clicking on the icon next to the widget name. Then a window with available icons will appear.

		×			
Page	😡 Choose widget	icon			×
On/Off ON_OFF	Filter results		00		î .
Scene	-Q- bulb	abacus	ac	ac_1	ac_2
	ac_3	ac_4	+ add	air	airplane
	airship	alarm_pa	album_ci	appreciat	apron
		_		(DK Cancel

The background image of the Scene or Open / Close widget can be quickly changed by clicking on the edit icon under the widget name. Additionally, it is possible to choose the shade of the picture from the available 15 colors.

	Choose scene background	
On/Off N_OFF	Filter results	Tint: blue
icene CENE 🍫	holiday	alarm
	alarm_1	alarm_2
	blinds_1	blinds_2
		OK Cance

Note!

If an icon or background image is not supported in a given version of myGrenton, it will be replaced with the default icon / background image.

Icon/background filtering

In the selection window, it is possible to filter icons or backgrounds based on the entered phrase.



Page	Choose scene background	×
Scene	home	Tint: blue 💌
SCONE 🦻	home_1	home_2
		OK Cancel

Note!

Icon filtering functionality is available for Object Manager version 1.8.0 or higher.

3.27. Widget removal

To delete a widget, select it and press the Delete key or right-click and select the Delete option from the context menu. On the device with the macOS operating system installed, use the combination of Fn + Backspace characters.

3.28. Copying widgets

To copy a widget, select it and press the key combination Ctrl+C (then Ctrl+V in the destination) or choose the Copy option from the context menu (then RMB and Paste in the destination).

It is possible to select more widgets to copy. This can be done by selecting while holding down the Ctrl key, or by selecting a range while holding down the Shift key.

Widgets can be copied to all pages of the interface, also to pages of other interfaces within one project.

```
Note!
If the widgets are copied to another project, they will have to be reconfigured.
```

3.29. Run the SCENE widget using Shortcuts.

A. Using shortcuts in myGrenton iOS

Note!

This functionality is available for myGrenton application version 1.11.0 iOS or higher.

Note!

This functionality is available for mobile devices with iOS 16 higher.

The Shortcuts application allows you to create a shortcut for the Run Scene action, which is the equivalent of the SCENE widget from the myGrenton application.
Run Scene Xdd as Favourite Run scene Scene Name myGrenton scene name 12:36 Run Scene Image: Scene Name Scene Name Next Action Yariables Next Action Scene Name 1 Scene Name 2 Scene Name 2 Scene Name 3 Scene Name 3 Scene Name 4	12:07		🗢 🔲 ,
Add as Favourite Add to Shortout Runs cene name 12:36 Image: Secone Name Image: Secone Name <	🚹 Run Sce	ene	×
Runs myGrenton scene name myGrenton scene name 12:36 Run Scene Run Scene Choose Kext Action Kext Action Kext Action Scene Name 1 Scene Name 1 Scene Name 1 Scene Name 1 Scene Name 1 Scene Name 1 Scene Name 2 Scene Name 2 Scene Name 3 Scene Name 3 Scene Name 4	Add as Favou	rite Add	+ to Shortcut
Scene Name myGrenton scene name	Runs myGrento	n scene	
12:36 Choose Cho	Scene Name myGrenton scen	ne name	
 Run Scene S Scene Name Variables Next Action Scene Name 1 Scene Name 2 Scene Name 3 Set Va Scene Name 4 	12:36	Run Scene 🗸	🗢 🗩
Scene NameChooseNext Action> VariablesIfScene Name 1ChoosScene Name 2Scene Name 3Scene Name 3Scene Name 4	🖸 Run Sce	ene 📀	
Next Action > Variables If Scene Name 1 Choos Scene Name 2 Scene Name 3 Scene Name 4	Scene Name		Choose
IfScene Name 1ChoosScene Name 2Set VaScene Name 3Scene Name 4	Next Action	Variables	
 Choos Scene Name 2 Scene Name 3 Scene Name 4 	Y If	Scene Name 1	
Scene Name 3 Scene Name 4	Choos	Scene Name 2	
Scene Name 4	🗴 Set Va	Scene Name 3	
		Scene Name 4	



Adding the SCENE widget in a shortcut is only possible for the interface with Cloud access checked (in the Interface Settings, the "Use cloud" switch is turned on). SCENE widgets are available from all interfaces in the myGrenton application, both active and inactive.

Shortcuts are launched only by the Cloud, regardless of the current connection type of the myGrenton application to the system.

Running a scene is also possible using Siri. Suggested phrases for invoking the myGrenton scene with Siri:

- "Run scene with myGrenton",
- "Invoke scene with myGrenton",
- "Run (Scene Name name of the SCENE widget from the myGrenton application) with myGrenton",
- "Invoke (Scene Name name of the SCENE widget from the myGrenton application) with myGrenton".

More information on how shortcuts work, their functionality and how to call them in Siri can be found in the documentation of the Shortcuts application.

Note!

If communication is lost as a result of an unstable connection, the shortcut will make another attempt to establish a connection and call the scene. It is not recommended to run scenes operating on the principle of switching to the opposite state.

The functionality should not be treated as a replacement for the myGrenton application.

B. Using shortcuts in myGrenton Android

Note!

This functionality is available for myGrenton application version 1.7.0-232901 Android or higher.

Note!

This functionality is available for devices in which the desktop manager (launcher) supports application shortcuts.

To use the shortcut, launch the SCENE widget in the previously uploaded interface. Next, exit the application and hold down the myGrenton application icon until the context menu appears. The shortcut associated with the SCENE widget will appear in the list. To add it to the desktop, hold down the shortcut and move it to the desired location on the desktop.





After clicking on the added shortcut on the desktop, if the application has a correct connection with the CLU, the method will be called and the message *Success*! will be displayed, which will disappear after about 1 second. If the shortcut is not invoked correctly, the message *Failure*! will appear on the screen.





Running a shortcut is also possible using Google Assistant. To set a given shortcut, use the Shortcuts option in the Google Assistant settings. Then, find the myGrenton application on the list and add a shortcut with your own or default name using the + button.

11:27		"□" ▼ □ 24%	ĥ
← Sh	ortcuts		
	Explore	Your shortcuts	
All shor	tcuts for your apps	3	
	myGrenton	>	
0	Chrome	>	
C	Phone by Google	>	
	Play Store	>	
31	Google Calendar	>	
	Messages	>	
	YouTube	>	
	< ●		
11:28		"⊡" 🕈 🖣 24%	^ 0
÷		:	
î	myGrenton		
	All	Your shortcuts	
Shortcu	ıts you might like		
"Kitcł Kitche	n en Lamp" In Lamp	Ð	
"Led Led Li	Lighting″ ghting	Ð	

	◀			
11:28 ←			•D• •	0 24%
A	myGrent	on		
	All		Your shortci	
Shortcı	uts you might	like		
"Kitc Kitche	hen Lamp" en Lamp			
		•		
Sh	ortcut crea	ated. Ne	ext time ju	ust
		say,		
	Hey Googl	e, Kitch	nen Lamp	
		Undo		
	•			

After performing the above steps and saying the name of the shortcut to the assistant, the method assigned to the SCENE widget will be invoked.

4. Personalization of the interface

You can customize the appearance of the interface to your preferences. To personalize the interface, click the MyGrenton interface settings icon in the toolbar:



After clicking the icon, a window with the interface settings will appear:



4.1. Change the name of the interface

To change the name of the interface, click on the current name displayed at the top of the window. To confirm the change, press *Enter* on the keyboard. To cancel, press *Esc* on the keyboard.



4.2. Change the interface icon

To change the interface icon, click on the icon image next to the interface name. A window with available icons will appear.



In the window, it is possible to filter icons based on the entered phrase.

	俞		郃	딦
home_1	home_10	home_2	home_3	home_31
副	Â			
home_32	home_4	home_5	home_6	home_7
home_8	home_9			

Icon filtering functionality is available for Object Manager version 1.8.0 or higher.

4.3. Change the color of the interface

It is also possible to change the color of the interface theme. There are 15 different theme colors available from the drop-down list.

0	Interface settings	×
Name / icon	Hy house	
Interface theme	green	
Less Keldereder	grenton red	Change
Logo - light mode:	orange	Revert to default
lana dada sa da	yellow lime	Change
Logo - dark mode:	green steel	Revert to default
Block access through the cloud	turquoise	
	blue indigo	CLU Serial Number
Push notification objects	No object	S
		Close

4.4. Blocking access through the cloud

The option Block access through the cloud blocks the possibility of connecting the application to the system via the cloud. Then it will be possible to use the application only in the local connection mode.



A. Android application behavior

After blocking access by the cloud and sending the configuration to the device, the connection mode with CLU for this interface will be set to local connection (otherwise, the connection mode via the cloud is set by default).

10:14		\bigcirc	₩ \$	<u>¢</u> 88%
×	Connection type			
lf thi us	s interface wasn't configured to ing Grenton Cloud, only local co supported.	cor onn	nmuni ection	cate is
ι	_ocal connection		~	•
(Cloud connection			
	•			

When changing the connection mode to connection via the cloud, connection with CLU will be impossible. A message will be displayed that there is no connection to the system.



B. IOS application behavior

After blocking access by the cloud and sending the configuration to the device, it will not be possible to select the Use cloud option in this interface in the application.



5. Sending the interface to the device

It is possible to send it to a mobile device in 2 ways:

5.1. Sending myGrenton interface to your phone using a QR code or manually

To send the interface to the phone, click the Send the myGrenton interface to your phone icon in the toolbar:



The window displayed allows you to send the interface by scanning the QR code or by providing interface parameters:



Launch the myGrenton application on your mobile device, select the 'Add new interface' option from the menu and scan the QR code displayed on the left side of this text.

If you can not scan the QR code, select the manual interface loading mode in the myGrenton application and enter the following data:

IP address:	192.168.100.3
Port:	9998
Token:	566 710

Note!

- The computer with the Object Manager application and the mobile device with the myGrenton application must be connected to the same LAN.
- The dialog box must remain open until the transmission of the communication is complete.

Close

Note!

The computer with the Object Manager application and the mobile device with the myGrenton application must be connected to the same LAN.

The dialog window must remain open until the interface transfer is completed.

On the phone, select the option to scan the QR code or manual entry. If data is provided manually, the data displayed in the Object Manager window must be completed.

In the application for Android devices, after providing the correct data, select the option Load interface:

X	
	·
Enter data to load	Interface
These data are necessary to load Object Manager Appli	interface created ir cation.
IP Address	
192.168.1.2	
e.g. 192.168.1.2	
Port	
9998	
Token	
123456	
	6 / 6
LOAD INTERFAC	E

In the application for iOS devices, select the Download option:



After correctly uploading the application will automatically launch the loaded interface.

5.2. Sharing myGrenton interface via the cloud



After clicking the icon Share myGrenton interface in the cloud the window for sharing the interface to the Grenton cloud will appear:

Share interface	1		×
Link:	Get link		
Expiration date:	9/10/2019		
		Clo	se

It is possible to set the expiration date of the link with the interface. After clicking Get link a link to the page with the generated interface appears

Share interface			×
Link:	https://share.mygrenton.com/	Copy to clipboard	Deactivate
Expiration date:	9/10/2019		
			Close

If the user has made changes to the interface, it is possible to update the shared interface:

😡 Share interface		×
Link:	Update link Deactivate	
Expiration date:	9/10/2019	
		Close

After entering the shared link, a page will appear with two options for adding a new interface:

- 1. By opening the generated link in the browser of the Android phone (the myGrenton application will automatically open and add a new interface to it) or by entering the link in the myGrenton application on the iOS phone.
- 2. By scanning the created QR code in the myGrenton application.

myGrenton Interface Sharing Link



Don't have the app? Download it below.



App Store and the Apple logo are trademarks of Apple Inc. Google Play and the Google Play logo are trademarks of Google LLC.

Note!

Sending an interface that contains widgets not supported in a given version of the application will execute correctly, unsupported widgets will be skipped and will not be visible.

Functionality available with myGrenton application version 1.5.0 (Android) / 1.9.0 (iOS) or higher.

6. Application and interface settings

6.1. Application settings

A. Android

In the settings, we have the option of adding a new interface and changing the order of interfaces. The Help button redirects you to the technical support page where you can find useful information about the Grenton system. Licenses takes the user to a new page where all the licenses used are listed. The Version field displays the version of the application being used.

14:13		\bigcirc	∖ ⊾‡\$	92%
←	Settings			
Interfac	es			
878	My house Visible in menu			
Add ne	w interface			
Reorde	r interfaces			
Applica	tion			
Help				
License	25			
Versior 1.1.9	1			

B. iOS

In the settings, we can add an interface by scanning the QR code, manually entering data or entering the URL address of the interface shared via the cloud. Here we can also see the current status of the connection to the system and the version of the current myGrenton application. The License button opens the page where the licenses are shown.

ıll 奈	11:09	100%
Setting	gs	
INTERFACE LIST		
Hy ho Active	use	
Click to manage int	erface	
ADD INTERFACE		
Scan QR code		>
Enter manually		>
Enter URL		>
APPLICATION		
Connection stat	tus:	Offline
License		>
Version		1.3.0 (20.12.1)

6.2. Interface Settings

A. Android

By clicking the interface you go to the interface settings. After entering the settings, you can customize its appearance. It is possible to change the interface name, change the icon, choose the type of connection, select the light or dark mode, display a card with a logo on the home page, set permissions to display push notifications and also remove the interface.

15:14	🛈 🛜 📶 🛢 42%					
← My house						
Interface						
Rename interface						
Change icon						
Connection type Choose the connection method to the system						
Dark theme						
Display brand card						
Push notifications						
Remove this interface permane	ently					
•						

B. iOS

By clicking the interface you go to the interface settings. There is an option to activate the interface. In the settings we can also choose the type of connection, enable push notifications or remove the interface.



Note!

Required minimum CLU version for cloud support: 05.03.06

Note!

To connect correctly via the cloud, a CLU connection is required. To do this, set the parameter UseCloud == true and then send the configuration to CLU. Correct connection to the cloud will be signaled by the cloudConnection == true parameter.

CLU properties					
Name: CLU221000002			Serial number:	221000002	
IP: 192.168.3.7			FW:	503	
Control New Keents	Embedded features	User features			
Feature name	Current value	Initial value	Unit	Range	
Uptime	152		s		
Log	nil				
State	1			0,1,2,3,4,5,6,7,8	
IsLocalPower	true		bool		
Date	2019-09-03				
Time	12:46:47				
Day	3			[1-31]	
Month	9			[1-12]	
Year	2019				
DayOfWeek	2			[0-6]	
Hour	12		h	[0-23]	
Minute	46		m	[0-59]	
UnixTime	1567514807		s		
FirmwareVersion	05.03.09				
UseCloud	true	True 🗸	bool		
cloudConnection	true		bool		
🗹 Auto refresh 🔇					O Refresh
				OK	Cancel

Note!

If the CLU has connected to the cloud, the interface sent to the mobile application on the Android device will use the remote connection by default. To switch to local communication, select the local system connection type. For devices running on iOS, the UseCloud parameter is turned off by default.

	14:29	Ũ	89% 🖡 <
	× Connect	tion type	
	If this interface was using Grenton Cl	n't configured to cc oud, only local con supported.	ommunicate nection is
	Local connect	ion	
	Cloud connect	ion	~
	•		•

XIX. Grenton 2.0 Logic Distribution

Note!

The functionality is available only for modules from the Grenton 2.0 series!

The Grenton version 2.0 system has the functionality of distributed logic and connections. Thanks to this, it is possible for the modules to communicate directly with each other in order to trigger actions between the inputs and the outputs without using the CLU central module. In the absence of communication of the executive modules with the CLU unit or in the event of a CLU failure, the system can still function in the set configuration. The functionality is available for modules that have the Distributed Logic mode enabled. Ultimately, all Grenton 2.0 devices will support this functionality.

Distributed Logic setting is available for the following modules:

- GRENTON DIGITAL IN 6+3, DIN, TF-Bus (INP-209-D-01)
- GRENTON RELAY 4HP, DIN, TF-Bus (REL-204-D-01)
- GRENTON RELAY 2HP, DIN, TF-Bus (REL-202-D-01)
- GRENTON DIMMER MOSFET, DIN, TF-Bus (DIM-211-D-01)
- GRENTON I/O MODULE 8/8, DIN, TF-Bus (INO-288-D-01)
- GRENTON I/O MODULE 2/2, Flush, TF-Bus, 1-wire (INO-222-T-01)
- GRENTON ROLLER SHUTTER, DIN, TF-Bus (RSH-201-D-01)
- GRENTON ROLLER SHUTTER x3, DIN, TF-Bus (RSH-203-D-01)
- GRENTON ROLLER SHUTTER, Flush, TF-Bus (RSH-201-T-01)
- GRENTON LED RGBW, Flush, TF-Bus (RGB-042-T-16)
- GRENTON TOUCH PANEL 8B, TF-Bus (TPA-208-T-0X)
- GRENTON TOUCH PANEL 4B, TF-Bus (TPA-204-T-0X)
- GRENTON SMART PANEL 4B, OLED, TF-Bus (SPS-204-T-01)

1. Configuration of the Distributed Logic mode

Note!

The modules on the first connection to the bus have Logic Distributed Mode enabled - value 1 of the DistributedLogicGroup (Default Mode) feature - the inputs can control the outputs, as described below. After performing CLU Discovery and sending the configuration, the mode turns off.

Note!

The Smart Panel module on the first connection to the bus have Logic Distributed Mode enabled - value 1 of the DistributedLogicGroup_1 - DistributedLogicGroup_4 (Default Mode) feature - assigned to four physical buttons - the inputs can control the outputs, as described below. After performing CLU Discovery and sending the configuration, the mode turns off.

A. Mode configuration for IN / OUT modules

0					×		
Object	properties						
Name:	k201000275_DOUT1		Device type:		~		
ld:	CLU221001090->DOU1265		Serial number: 201000275		1		
Туре:	DOUT						
Control 🔃 User schemes 📡 Events 🛞 Embedded features 🏢 Statistics							
Feature	name	Current value	Initial value	Unit	Range		
Value		0	Off ~	bool	0,1		
Statisti	cState	0	Off ~	number	0,1		
Voltage	Туре	0	AC ~		0,1,2		
Voltage	Value	230	230	V	[0-230]		
Power		0		W	[0-3000]		
Overlo	ad	3000	3000	W	[0-3000]		
Distrib	utedLogicGroup	0	0]	[0-10000]		
Auto	Auto refresh ህ						
				Ok	Cancel		

The configuration of Distributed Logic is the same as for any other system functionality through the OM application, and is defined for each IN / OUT object of a given module. The DistributedLogicGroup feature is used for this. The default value of DistributedLogicGroup is O, which means that the mode is off.

If the connection of modules with CLU is lost and an event is detected for an input object (IN object of a given module), a message is sent to each output object (OUT object of a given module) that has the same value of the DistributedLogicGroup feature. As a result of receiving a message, the appropriate action assigned to the received event is triggered on the output object.

B. Mode configuration for Smart Panel module

0							×
Object properties							
Name: k250001991_PANEL_PAGE1			Device type:			\sim	
ld:	Id: CLU221002493->PAN8660		Serial number: 250	001991		1	
Туре:	PANEL_PAGE]			
🔗 Co	ontrol 당 User schemes 🏹 Eve	ents 🔶 Embedded features	Sta	tistics			
Feature	e name	Current value	Initia	l value	Unit	Range	^
PageTy	ype	1	Butte	ons ~		0,1,2,3	
PageN	lame	-			-	[0-15]	
Object	t_1_ld	1	1		-	[0-23]	
Object	t_1_Name	-			-	[0-15]	
Object	t_1_CustomIcon	-				[0-9]	
Distrib	outedLogicGroup_1	1	1			[0-10000]	
Object	t_2_ld	2	2		-	[0-23]	
Object	t_2_Name	-			-	[0-15]	
Object	t_2_CustomIcon	-				[0-9]	
Distrib	outedLogicGroup_2	2	2			[0-10000]	~
🗹 Aut	o refresh ህ					O Re	fresh
						OK Cance	4

For Smart Panel module, the binding on the input takes place in the PANEL_PAGEx object. Before that, PANEL_PAGEx objects must be linked with the appropriate PANEL_BUTTONx objects by setting the appropriate values in the Object_x_Id field. If there is no connection to the CLU, in Distributed Logic mode all 16 buttons can work with the change of pages using gestures.

Note!

Distributed Logic is only possible in the Buttons mode of the PANEL_PAGEx object.

1.1. Operation of Distributed Logic between DIN and output objects

Events and triggered actions are set statically and cannot be changed.

Available actions while running in the Distributed Logic Mode:

A. DIN and DOUT objects

- Switching on the DIN input object (SwitchOn) -> Switching on the given DOUT output.
- Switching off the DIN input object (SwitchOff) -> Switching off the given DOUT output.
- Short change of state of an input object DIN (Click) -> Change of state to the opposite of the given DOUT output.

B. DIN and DIMM objects

- Switching on the DIN input object (SwitchOn) -> Switching on the given DIMM output.
- Switching off the DIN input object (SwitchOff) -> Switching off the given DIMM output.

Note!

 Short change of state of an input object DIN (Click) -> Change of state to the opposite of the given DIMM output.

C. DIN and LEDRGBW objects

- Switching on the DIN input object (SwitchOn) -> Switching on the given LEDRGBW channel.
- Switching off the DIN input object (SwitchOff) -> Switching off the given LEDRGBW channel.
- Short change of state of an input object DIN (Click) -> Change of state to the opposite of the given RGBW LED channel.

D. DIN and ROLLER_SHUTTER objects

- Switching on the DIN input object (SwitchOn) -> Switching on the UP or DOWN ROLLER_SHUTTER output, depending on the previous direction.
- Switching off the DIN input object (SwitchOff) -> Switching off the given connected output (UP or DOWN).
- Short change of state of an input object DIN (Click) -> Change of state to opposite ROLLER_SHUTTER:
 - if the relays (UP / DOWN) are turned off switching on the UP or DOWN relay, depending on the previous direction,
 - if the UP or DOWN relay is on the relay is turned off.

Note!

Switching the UP or DOWN relay means switching the relay on without switching off after the MaxTime time has elapsed. The relays should be turned off with a given Roller Shutter control input in the Distributed Logic mode.

1.2. Operation of Distributed Logic between BUTTON and output objects

Note!

Events and triggered actions are set statically and cannot be changed.

Available actions while running in the Distributed Logic mode:

A. BUTTON and DOUT objects

- Press the button (SwitchOn) -> Switching on the given DOUT output.
- Release the button (SwitchOff) -> Switching off the given DOUT output.
- Short button press (Click) -> Change of state to the opposite of the given DOUT output.

B. BUTTON and DIMM objects

- Press the button (SwitchOn) -> Switching on the given DIMM output.
- Release the button (SwitchOff) -> Switching off the given DIMM output.
- Short button press (Click) -> Change of state to the opposite of the given DIMM output.

C. BUTTON and LEDRGBW objects

- Press the button (SwitchOn)-> Switching on the given LEDRGBW channel.
- Release the button (SwitchOff)-> Switching off the given LEDRGBW channel.
- Short button press (Click) -> Change of state to the opposite of the given RGBW LED channel.

D. BUTTON and ROLLER_SHUTTER objects

- Press the button (SwitchOn) -> Switching on the UP or DOWN ROLLER_SHUTTER output, depending on the previous direction.
- Release the button (SwitchOff) -> Switching off the given connected output (UP or DOWN).
- Short button press (Click) -> Change of state to opposite ROLLER_SHUTTER:
 - if the relays (UP / DOWN) are turned off switching on the UP or DOWN relay, depending on the previous direction,
 - if the UP or DOWN relay is on the relay is turned off.

Note!

Switching the relay UP or DOWN means switching on the relay without switching off after the MaxTime time has elapsed. The relays should be turned off with a given control input of the ROLLER_SHUTTER object in the Distributed Logic mode.

1.3. Operation of Distributed Logic between PANEL_PAGE with PANEL_BUTTON and output objects

Note!

Events and triggered actions are set statically and cannot be changed.

Available actions while running in the Distributed Logic mode:

A. PANEL_PAGE with PANEL_BUTTON object set and DOUT objects

- Press the button (SwitchOn) -> Switching on the given DOUT output.
- Release the button (SwitchOff) -> Switching off the given DOUT output.
- Short button press (Click) -> Change of state to the opposite of the given DOUT output.

B. PANEL_PAGE with PANEL_BUTTON object set and DIMM objects

- Press the button (SwitchOn) -> Switching on the given DIMM output.
- Release the button (SwitchOff) -> Switching off the given DIMM output.
- Short button press (Click) -> Change of state to the opposite of the given DIMM output.

C. PANEL_PAGE with PANEL_BUTTON object set and LEDRGBW objects

- Press the button (SwitchOn)-> Switching on the given LEDRGBW channel.
- Release the button (SwitchOff)-> Switching off the given LEDRGBW channel.
- Short button press (Click) -> Change of state to the opposite of the given RGBW LED channel.

D. PANEL_PAGE with PANEL_BUTTON object set and ROLLER_SHUTTER objects

- Press the button (SwitchOn) -> Switching on the UP or DOWN ROLLER_SHUTTER output, depending on the previous direction.
- Release the button (SwitchOff) -> Switching off the given connected output (UP or DOWN).
- Short button press (Click) -> Change of state to opposite ROLLER_SHUTTER:
 - if the relays (UP / DOWN) are turned off switching on the UP or DOWN relay, depending on the previous direction,
 - if the UP or DOWN relay is on the relay is turned off.

Note!

Switching the relay UP or DOWN means switching on the relay without switching off after the MaxTime time has elapsed. The relays should be turned off with a given control input of the ROLLER_SHUTTER object in the Distributed Logic mode.

2. Default Mode

If the value of the DistributedLogicGroup feature is set to 1 for a given object, it works in the **Default Mode**. This is a special operating mode set by default for each object:

Note!

The events and triggered actions are statically set and cannot be changed.

2.1. Default Mode for input modules and output modules

- input module (DIGITAL IN 6+3 DIN) controls all output modules (RELAY 4HP DIN, RELAY 2HP DIN, DIMMER MOSFET DIN, ROLLER SHUTTER DIN, ROLLER SHUTTER DIN) in TFBUS network, which are also in Default Mode, for example:
 - DIGITAL IN1 --> RELAY 4HP OUT1 | RELAY 2HP OUT1 | DIMMER MOSFET DIMM1 | ROLLER_SHUTTER1.
 - DIGITAL IN2 --> RELAY 4HP OUT2 | RELAY 2HP OUT2 | ROLLER_SHUTTER2.
 - DIGITAL IN3 --> RELAY 4HP OUT3 | ROLLER_SHUTTER3.
 - DIGITAL IN4 --> RELAY 4HP OUT4.
- Touch Panel module (TOUCH PANEL 4B, TOUCH PANEL 8B) controls all output modules (RELAY 4HP DIN, RELAY 2HP DIN, DIMMER MOSFET DIN, ROLLER SHUTTER DIN) in TFBUS network, which are also in Default Mode, for example:
 - TOUCH PANEL BUTTON1 --> RELAY 4HP OUT1 | RELAY 2HP OUT1 | DIMMER MOSFET DIMM1 | ROLLER_SHUTTER1.
 - TOUCH PANEL BUTTON2 --> RELAY 4HP OUT2 | RELAY 2HP OUT2 | ROLLER_SHUTTER2.
 - TOUCH PANEL BUTTON3 --> RELAY 4HP OUT3 | ROLLER_SHUTTER3.
 - TOUCH PANEL BUTTON4 --> RELAY 4HP OUT4.
- Smart Panel module controls all output modules (RELAY 4HP DIN, RELAY 2HP DIN, DIMMER MOSFET, ROLLER SHUTTER DIN) in TFBUS network, which are also in Default Mode, for example:
 - SMART PANEL PANEL_PAGE1 feature DistributedLogicGroup_1 --> RELAY 4HP OUT1 | RELAY
 2HP OUT1 | DIMMER MOSFET DIMM1 | ROLLER_SHUTTER1.
 - SMART PANEL PANEL_PAGE1 feature DistributedLogicGroup_2 --> RELAY 4HP OUT2 | RELAY 2HP OUT2 | ROLLER_SHUTTER2.
 - SMART PANEL PANEL_PAGE1 feature DistributedLogicGroup_3 --> RELAY 4HP OUT3 | ROLLER_SHUTTER3.
 - SMART PANEL PANEL_PAGE1 feature DistributedLogicGroup_4 --> RELAY 4HP OUT4.

Note!

Switching the relay UP or DOWN means switching on the relay without switching off after the MaxTime time has elapsed. The relays should be turned off with a given control input of the ROLLER_SHUTTER object in the Distributed Logic mode.

Note!

For a Smart Panel module running in the Distributed Logic Default Mode, the behavior described above is identical for any PANEL_PAGE object (PANEL_PAGE1 - PANEL_PAGE4).

2.2. Default Mode for modules with their own inputs / outputs

- module with inputs and outputs (I/O MODULE DIN 8, I/O MODULE FM, ROLLER SHUTTER FM) controls its own channels with the appropriate number (IN1-> OUT1, IN2-> OUT2, etc.) for example:
 - I/O MODULE FM IN1 -> I/O MODULE FM OUT1 | ROLLER SHUTTER.
 - I/O MODULE FM IN2 -> I/O MODULE FM OUT2.
 - ROLLER SHUTTER FM IN1 --> ROLLER_SHUTTER1.
- LED RGBW FM module controls its own channels (Red, Green):
 - LED RGBW FM IN1 --> LED RGBW FM R-channel.
 - LED RGBW FM IN2 --> LED RGBW FM G-channel.

3. Restoring communication between the CLU and the module

When communication between the CLU and modules is restored, the value of the Value property of the given objects is updated to the actual value of the I / O (changed to the value changed during Logic Distributed Mode operation) and the modules perform actions in accordance with the CLU's programmed logic.

- 4. Depending on what type of device is in use, its configuration may differ from the one provided in the manual. 🡱
- 5. In addition to the connection settings in the same section, you can check the box that determines the use of the hands-free mode after receiving a call $\underline{2}$

6. Where X and Y are the CLU names. $\stackrel{ullet}{\leftarrow}$

^{1.} Depending on the type of router used, its interface may differ from the general port configuration instruction. \underline{e}

^{2.} This is the default port for the camera stream <code>rtsp.</code> $\stackrel{\frown}{\leftarrow}$

^{3.} Its IP address can be found in the list of currently connected devices in the router's interface. $\stackrel{O}{=}$