

Datasheet Relay X2+ WiFi

WRE-222-W-01

Grenton Relay X2 WiFi module allows you to control up to two outputs (max. 350 VA) and two digital inputs (230 V_{ac}). The X2+ version provides real power measurements for each output channel. It contains the Common Logic Unit (CLU) with WiFi wireless communication controller, executes the function of processing logic and storing the configuration.



1. Parameters - CLU WiFi

| Features: | |
|-------------------------|---|
| Uptime | Working time since last reset (in seconds) |
| ClientReportInterval | Reporting period for changes in properties |
| Date | Returns the current date |
| Time | Returns the current time (hh:mm:ss) |
| LocalTime | Returns the current time |
| TimeZone | Local time zone |
| UnixTime | Returns the current Unix time |
| FirmwareVersion | WiFi module firmware version |
| UseCloud | Specifies whether WiFi module connects to the Cloud |
| CloudConnection | Specifies whether WiFi module is connected to the Cloud |
| NTPTimeout | NTP Timeout |
| UseNTP | Specifies whether WiFi module uses NTP |
| PrimaryDNS | Preferred DNS server |
| SecondaryDNS | Alternate (secondary) DNS server |
| RSSI | Received signal strength indicator |
| Methods: | |
| SetDateTime | Sets date and time |
| StartConsole | Starts Lua console |
| StartConsoleOnReboot | Starts Lua console on next boot |
| FactoryReset | Factory reset of module |
| SetClientReportInterval | Sets the reporting period for changes in properties |
| SetPrimaryDNS | Sets the PrimaryDNS property |
| SetSecondaryDNS | Sets the SecondaryDNS property |
| Events: | |
| OnHit | Event occurs once during the device initialization |
| Virtual Objects: | |
| Timer | Timer operating in Interval or Countdown modes. Detailed interface description in the Grenton 2.0 System Manual - chapter XIII.5 Virtual Object - Timer |

2. Parameters - DOUT (output)

| Features: | |
|-----------------------|--|
| Value | The output state (0 - Off, 1 - On) |
| Overload | The value of power that it generates OnOverloadOn event when exceeded |
| OverloadTime | Minimal duration of the power overload needed for OnOverload event generation |
| LoadThreshold | The value of power that it generates OnPowerConsumptionOn event when exceeded |
| VoltageType | Type of voltage (0 - AC, 1 - DC) |
| DCVoltage | Declared DC voltage supplying the load |
| ACVoltage | Actual AC voltage in the power network |
| Current | Current flowing through the load (for AC: I _{rms}) |
| Load | Actual load power consumption |
| AverageLoad | Average Load since power up or ResetPowerStatistics() function call |
| MaximumLoad | Maximum Load since power up or ResetPowerStatistics() function call |
| PowerOnTime | Total time of the output ON state since power up or ResetPowerStatistics() function call |
| PowerConsumption | Total power consumption since power up or ResetPowerStatistics() function call |
| State | Returns the output state (0 - POWER_OFF, 1 - POWER_ON, 2 - LOADED, 3 - OVERLOADED, 4 - ANTI_BURN_OFF) |
| Methods: | |
| SetValue | Sets the output state to 1 or 0 |
| SetOverload | Sets Overload property |
| SetOverloadTime | Sets OverloadTime property |
| SetLoadThreshold | Sets LoadThreshold property |
| Switch | Changes the output state to the opposite |
| SwitchOn | Sets the output value to On (1). The Time parameter specifies for how long [ms] the state change takes place, value 0 keeps the change for ever |
| SwitchOff | Sets the output value to Off (0). The Time parameter specifies for how long [ms] the state change takes place, value 0 keeps the change for ever |
| ResetPowerStatistics | Resets power measurement statistics |
| Events: | |
| OnValueChanged | Occurs when a change in the output state takes place (regardless of the value) |
| OnSwitchOn | Occurs when On (1) is set to the output |
| OnSwitchOff | Occurs when Off (0) is set to the output |
| OnPowerConsumptionOn | Occurs when the value of Load property becomes higher than LoadThreshold |
| OnPowerConsumptionOff | Occurs when the value of Load property becomes lower than LoadThreshold |
| OnOverloadOn | Occurs when the value of Load property becomes higher than Overload |
| OnOverloadOff | Occurs when the value of Load property becomes lower than Overload |
| OnAntiBurnRelayOff | Occurs when switching off the relay after significantly exceeding safe Current value |
| OnUpdate | Occurs when parameters (Current, Load, ...) are updated on all outputs. Calls every 250 ms. |


3. Parameters - DIN (digital input)

| Features: | |
|-----------------|---|
| Value | Returns the input state as 0 or 1 |
| Inertion | Specifies the entry time constant. The value step is 20 ms |
| HoldDelay | Time in milliseconds after which, when pressing and holding a button, the OnHold event occurs |
| HoldInterval | Cyclical interval in milliseconds after which, when pressing and holding a button, the OnHold event occurs |
| Coupling | Returns the percentage of coupling between wires. Less than 30%, there is little coupling between wires when input physically Off |
| Methods: | |
| SetInertion | Sets the input inertion time |
| SetHoldDelay | Sets HoldDelay property |
| SetHoldInterval | Sets HoldInterval property |
| Events: | |
| OnValueChanged | Occurs when a change in the input state takes place (regardless of the value) |
| OnSwitchOn | Occurs when the high state is set at the input |
| OnSwitchOff | Occurs when the low state is set at the input |
| OnShortPress | Occurs after pressing the button for 500 - 2000ms |
| OnLongPress | Occurs after pressing the button for at least 2000ms |
| OnHold | Occurs for the first time after HoldDelay time and then cyclically every HoldInterval value |
| OnClick | Occurs after pressing the button for less than 500 ms |

4. Technical data

| | |
|-------------------------------|--|
| Device power supply | 110-265V _{ac} 50/60Hz |
| Maximum power consumption | 1.8W |
| Standby power consumption | 1.0W |
| Maximum load voltage | 250V _{ac} or 24 V _{dc} |
| Maximum channel load AC1 | 1.5A / 250V _{ac} / per channel |
| Maximum channel load DC1 | 1A / 24V _{dc} / per channel |
| Maximal breaking capacity AC1 | 350VA / per channel |
| Relay type | NO |
| Maximum wire cross section | 2.5mm ² |
| WiFi frequency band | 2.4GHz |
| Weight | 40g |
| Fixing | flush mounted |
| Dimensions (H/W/D) | 37/46/22mm |
| Operating temperature range | 0 to +45°C |

5. Wiring diagram

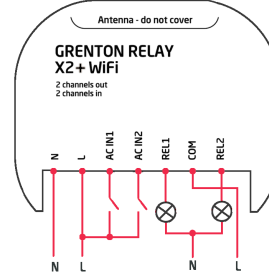

- The device without a target configuration loaded via Object Manager tool, has the minimal embedded configuration. The inputs are connected to the outputs, which allows for local loads control.

- The maximum recommended length of cables connected to the AC IN1 or AC IN2 inputs is 25 m. This value results from the capacitive-inductive coupling of a typical conductor between its lines. Additionally, the Coupling property was introduced in the DIN object that reveals the true coupling. Too much coupling can cause false input state detection.

| | |
|--------|--|
| N | "Neutral" signal |
| L | "Line" signal |
| AC IN1 | first channel input (230V _{ac}) |
| AC IN2 | second channel input (230V _{ac}) |
| REL1 | first channel output |
| COM | common power supply for REL1 and REL2 |
| REL2 | second channel output |

6. Wireless communication configuration

The brand new device on power up starts with the AP (access point) SSID: CLU36xxxxxxx [reset] with the factory password (PIN) "00000000". After connection setup with the AP please connect to the device http server using web browser and http://192.168.4.1 link. Next please set up a PIN and a WiFi network parameters, the WiFi network the device is meant to be connected to. The PIN is the new AP password and the

"Secret Key" used by the Object Manager tool during the discovery process as well. In case of connection failure with the previously configured WiFi network, the Relay X2+ WiFi starts with the AP SSID: CLU36xxxxxxx after 2 minutes of unsuccessful retries. After 10 minutes from the power on the AP is deactivated and the Relay X2+ WiFi only keeps trying to connect to the configured WiFi network.

WiFi Setup

PIN:

SSID:

Password:

7. Device configuration in the Grenton System

After connecting the device to the WiFi network, please process configuration using the Object Manager tool. Select the CLU Discovery action in the upper left corner. Then set the "Beginning of IP address" not less than x.x.x.5. After discovering the device,

the Object Manager asks for a "Secret Key", it is the PIN mentioned earlier. Further configuration is the same as in the case of the CLU Z-Wave with devices connected via the TF-Bus.

CLU discovery

Network interface:

Network mask:

Gate:

Begin of IP range:

End of IP range:

Note: If your network IP address is assigned an by the DHCP server, read to the instruction manual how to properly set the range of IP in this case.

8. Restoring Factory Settings

Restoring Factory Settings activates sequence of 5 pulses ended with 2-second break given to one of the inputs. Duration of the 5 pulses must be less than 5 seconds. The time window while

the factory reset can be done is from 5 to 30 seconds from the power on.

9. Warnings and Cautionary Statements



ATTENTION!

- Before proceeding with the assembly, read the installation schematics and full instructions available at www.grenton.com. Failure to follow the guidelines contained in the instructions and other requirements of due care valid as a result of the nature of the equipment (device) may be dangerous to life / health, damage the device or installation to which it is connected, damage

other property or violate other applicable regulations. The manufacturer of the device, Grenton Sp. z o.o. does not bear any responsibility for the damage (property and non-property related) resulting from the assembly and / or use of the equipment not in accordance with the instructions and / or due diligence in handling the equipment (device).

- Device power supply, permissible load or other characteristic parameters have to be in accordance with the device specification, described in particular in the "Technical data" section.
- The product is not intended for children and animals.
- If you have technical questions or comments about the device operation, contact Grenton Technical Support.
- Answers to frequently asked questions can be found at: www.support.grenton.com.



- Danger to life caused by electric current!
- The components of the installation (individual devices) are designed to work in a home electrical installation or directly in its

vicinity. Incorrect connection or use may cause a fire or electric shock.

- All work related to the installation of the device, in particular works involving interference in the electrical installation, may be performed only by a person with appropriate qualifications or licences.
- When installing the device, make sure that the power supply voltage is disconnected from the circuit in which the device is connected or near which the assembly takes place.



10. CE Marking

The manufacturer declares that the device is in full compliance with the requirements of EU legislation that includes the directives of a new approach appropriate for this equipment. In particular, Grenton Sp. z o. o. declares that the device fulfills the requirements on safety, specified by law, and that it conforms

to the national regulations that implement the appropriate directives: The Radio Equipment Directive (RED - 2014/53/UE), the Low Voltage Directive (LVD 2014/35/UE) and the Directive on the limitation of the use of specific substances in electrical and electronic equipment (RoHS II - 2011/65/UE).

11. Warranty

Warranty available at www.grenton.com/warranty.

12. Manufacturer Contact Details

Grenton Sp. z o.o.
ul. Na Wierzchowinach 3
30-222 Kraków, Poland
www.grenton.com