

Grenton I/O Module allows you to control up to 8 outputs (max.360VA) and 8 digital inputs.



1. Parameters - DOUT

Features:	
Value	Returns 1 for output set on and 0 for output set off state
DistributedLogicGroup	Distributed Logic group - broadcast group for distributed logic
Methods:	
SetValue	Sets output state to 1 or 0
Switch	Changes the output value from 0 to 1 or from 1 to 0. The first parameter is the time of change: 0 - switches output to continuous mode, number - switches output for a time specified by a parameter (in milliseconds)
SwitchOn	Sets output value to 1
SwitchOff	Sets output value to 0
Events:	
OnValueChange	Occurs when a change in the state takes place (regardless of the value)
OnSwitchOn	Occurs when On(1) is set at output
OnSwitchOff	Occurs when Off(0) is set at output

2. Parameters - DIN

Features:	
Inertion	Inertion
HoldDelay	Time in milliseconds after which, when pressing and holding a button, the OnHold event occurs
HoldInterval	Cyclical interval in milliseconds after which, when pressing and holding a button, the OnHold event occurs
Value	Returns input state as 0 or 1
DistributedLogicGroup	Distributed Logic group - broadcast group for distributed logic
StatisticState	Load measurement type: Off - turned off, Continuous - load measurement for the whole device's period operation, Pulse - load measurement counted at the moment of a high state appearing on the input
Load	The measured value multiplier. For StatisticState: Continuous - load measurement value in the unit of time, Pulse - load measurement value for the single impulse (e.g. 1kW)
Methods:	
SetInertion	Minimum interval in milliseconds which has to pass between presses of a button so that it is interpreted as a new pressing activity
SetHoldDelay	Sets HoldDelay value
SetHoldInterval	Sets HoldInterval value
Events:	
OnValueChange	Occurs when a change in the input state takes place (regardless of the value)
OnSwitchOn	Occurs when the high state is set at input
OnSwitchOff	Occurs when the low state is set at input
OnShortPress	Occurs after pressing the button for 500 - 2000ms
OnLongPress	Occurs after pressing the button for at least 2000ms
OnHold	Occurs for the first time after HoldDelay time and then cyclically every HoldInterval value
OnClick	Occurs after pressing the button for less than 500 ms


3. Parameters - PowerSupplyVoltage

Features:	
Value	Current output value taking into account the scalar
Value %	Current percentage input value of the maximum value (MaxValue characteristic)
Sensitivity	Minimum change of input state when the OnValueChange, OnValueLower or OnValueRise event is generated
MinValue	Minimum value of the Value characteristic after exceeding which the OnOutOfRange event is generated
MaxValue	Maximum value of the Value characteristic after exceeding which the OnOutOfRange event is generated
Methods:	
SetSensitivity	Sets input sensitivity value
SetMinValue	Sets MinValue
SetMaxValue	Sets MaxValue
Events:	
OnValueChange	Event resulting from changing input state
OnValueLower	Event occurs when a value lower than the value from the last reading appears at input
OnValueRise	Event occurs when a value higher than the value from the last reading appears at input
OnOutOfRange	Event resulting from exceeding the permissible range [MinValue ; MaxValue]
OnInRange	Event occurs when value returns to MinValue/MaxValue range

4. Technical data

Device power supply	24V _{dc}
Maximum power consumption	1.8W (200mW/ch)
Maximum device current	75mA (for 24V _{dc})
Rated load voltage	230V _{ac} or 24V _{dc}
Rated circuit load (2 channels) AC1:	3A/230V _{ac}
Rated load current per channel:	
AC1	1.5A / 230V _{ac}
AC1.5	0.4A / 230V _{ac}
DC1	1.5A / 24V _{dc}
DC1.3	0.22A / 24V _{dc}
Maximum breaking capacity AC1	360VA
Relay type	NO
Maximum wire cross section for outputs	2.5mm ²
Maximum wire cross section for inputs	1.5mm ²
Weight	148g
Size [DIN]	4
Fixing	electrical box, rail DIN-3 / TH 35 / TS 35
Dimensions (H/W/D)	58/71/90mm
Operating temperature range	0 to +45°C

5. Wiring Diagram

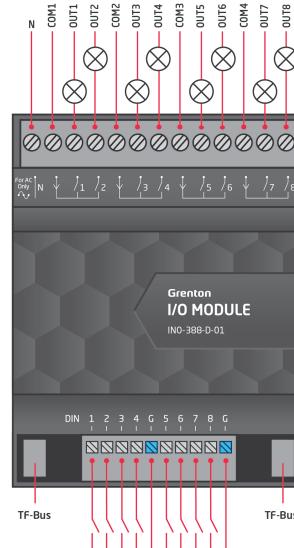

N	'Neutral' signal (for AC only)
COM1	power supply input for circuit 1
OUT1	first output channel in circuit 1
OUT2	second output channel in circuit 1
COM2	power supply input for circuit 2
OUT3	third output channel in circuit 2
OUT4	fourth output channel in circuit 2
COM3	power supply input for circuit 3
OUT5	fifth output channel in circuit 3
OUT6	sixth output channel in circuit 3
COM4	power supply input for circuit 4
OUT7	seventh output channel in circuit 4
OUT8	eight output channel in circuit 4
DIN 1-4	digital inputs 1-4
G	ground signal for digital inputs
DIN 5-8	digital inputs 5-8
G	ground signal for digital inputs

- Outputs are divided into four independent circuits. Each circuit has one 'COM' input and 2 outputs (channels).
- 'N' signal is necessary only for 230V_{ac} loads for switch condition optimization.
- The relays of the given circuit are powered from the 'COM' input.
- For capacitive loads it is recommended to use one receiver for one output.

6. Warnings and Cautionary Statements



ATTENTION!

- Before proceeding with the assembly, read the installation schematics and full instructions available at www.grenton.com. Failure to follow the guidelines contained in the instructions and other requirements of due care valid as a result of the nature of the equipment (device) may be dangerous to life / health, damage the device or installation to which it is connected, damage

other property or violate other applicable regulations. The manufacturer of the device, Grenton Sp. z o. o. does not bear any responsibility for the damage (property and non-property related) resulting from the assembly and / or use of the equipment not in accordance with the instructions and / or due diligence in handling the equipment (device).

- Device power supply, permissible load or other characteristic parameters have to be in accordance with the device specification, described in particular in the "Technical data" section.
- The product is not intended for children and animals.
- If you have technical questions or comments about the device operation, contact Grenton Technical Support.
- Answers to frequently asked questions can be found at: www.support.grenton.com.



DANGER!

- Danger to life caused by electric current!
- The components of the installation (individual devices) are designed to work in a home electrical installation or directly in its

vicinity. Incorrect connection or use may cause a fire or electric shock.

- All work related to the installation of the device, in particular works involving interference in the electrical installation, may be performed only by a person with appropriate qualifications or licenses.
- When installing the device, make sure that the power supply voltage is disconnected from the circuit in which the device is connected or near which the assembly takes place.

7. CE Marking

The manufacturer declares that the device is in full compliance with the requirements of EU legislation that includes the directives of a new approach appropriate for this equipment. In particular, Grenton Sp. z o. o. declares that the device fulfills the requirements on safety, specified by law, and that it conforms

to the national regulations that implement the appropriate directives: The Directive on the electromagnetic compatibility (EMC - 2014/30/UE) and the Directive on the limitation of the use of specific substances in electrical and electronic equipment (RoHS II - 2011/65/UE).



8. Warranty

Warranty available at www.grenton.com/warranty.

9. Manufacturer Contact Details

Grenton Sp. z o.o.
ul. Na Wierzchowinach 3
30-222 Kraków, Poland
www.grenton.com
grenton@grenton.com