


Datasheet Relay X2 Z-Wave

REL-203-Z-01

Grenton RELAY X2 Z-Wave allows you to control up to two outputs (max. 3600 VA), two digital inputs (low voltage) and one 1-wire interface.



6. Wiring diagram

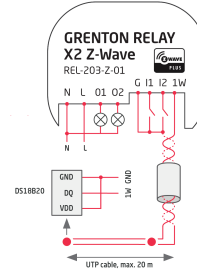

- The brand new device has Standalone Mode enabled. The inputs I1, I2 control the outputs O1, O2.
- Low voltage G, I1, I2, 1W lines galvanically separated from high voltage N, L lines.

1. Parameters - ZWAVE DOUT

Features:	
Value	Returns 1 for output set at On and 0 for output set at Off state
Methods:	
SetValue	Sets output state to 1 or 0
Switch	Changes the output value from 0 to 1 or from 1 to 0. The first parameter is the time of change: 0 - switches output to continuous mode, number - switches output for a time specified by a parameter (in milliseconds)
SwitchOn	Sets output value to 1
SwitchOff	Sets output value to 0
Events:	
OnChange	Occurs when a change in the state takes place (regardless of the value)
OnSwitchOn	Occurs when On(1) is set at output
OnSwitchOff	Occurs when Off(0) is set at output

2. Parameters - ZWAVE DIN

Features:	
HoldDelay	Time in milliseconds after which, when pressing and holding a button, the OnHold event occurs
HoldInterval	Cyclical interval in milliseconds after which, when pressing and holding a button, the OnHold event occurs
Value	Returns input state as 0 or 1
Standalone	Sets internal connection between input and specified output
Methods:	
SetHoldDelay	Sets HoldDelay value
SetHoldInterval	Sets HoldInterval value
Events:	
OnChange	Occurs when a change in the input state takes place (regardless of the value)
OnSwitchOn	Occurs when the high state is set at input
OnSwitchOff	Occurs when the low state is set at input
OnShortPress	Occurs after pressing the button for 500 - 2000ms
OnLongPress	Occurs after pressing the button for at least 2000ms
OnHold	Occurs for the first time after HoldDelay time and then cyclically every HoldInterval value
OnClick	Occurs after pressing the button for less than 500 ms

3. Parameters - ZWAVE 1-WIRE SENSOR

Features:	
Value	Input value
MinValue	Minimum value of the Value characteristic after exceeding which the OnOutOfRange event is generated
MaxValue	Maximum value of the Value characteristic after exceeding which the OnOutOfRange event is generated
Status	Sensor status: 0 - disconnected; 1 - connected
Events:	
OnChange	Event resulting from changing input state
OnRaise	Event resulting from exceeding the upper threshold of hysteresis
OnLower	Event resulting from exceeding the lower threshold of hysteresis
OnOutOfRange	Event resulting from exceeding any range
OnInRange	Event occurring when setting a value which is lower than the maximum value or higher than the minimum value
OnConnect	Event resulting from connection with sensor
OnDisconnect	Event resulting from disconnection with sensor

4. Parameters - ZWAVE CONFIG

Features:	
Register	Register (parameter) number
Value	Register (parameter) value
NodeID	Module's number (node) in the Z-Wave network
Banned	Returns information about communication with module: 0 - communication with the module is not blocked, 1 - blocked communication with the module (module banned)
FailCount	The number of failed communication attempts with the Z-Wave module
Repeaters	Number of devices intermedating communication between the CLUZ and a given module
RepeatersList	List of devices (NodeID) intermedating in communication between CLUZ and the module
Standalone	Setting the internal connection between the device's inputs and outputs
Methods:	
Set	Sets the value of the register (parameter)
Get	Gets the value of a given register (parameter)
SetDefault	Sets the default value for register (parameter)
RemoveBan	Removes the blockade of communication with the Z-Wave module
ClearFailCount	Cleans the number of failed communication attempts
UpdateNeighbours	Triggers the action of updating and rebuilding the Z-Wave network (number of neighbouring modules, method of communication with CLUZ) for a given module
Events:	
OnBanned	Occurs when Z-Wave device is banned

5. Technical data

Device power supply	100-265V _{ac} 50/60Hz
Maximum power consumption	0,8W
Maximum load voltage	265V _{ac}
Maximum current for resistive load AC1	16A / 265V _{ac} / summary, 16A / channel 1 (O1), 8A / channel 2 (O2)
Maximum power 1 phase motor (UL 508)	1,0Hp / 265V _{ac} / channel
Insulation Low-High (230V _{ac}) voltage	3kV
Relay type	NO
Maximum wire cross section	2,5mm ²
Z-wave frequency	EU: 868,4MHz
Weight	40g
Fixing	flush mounted
Dimensions (H/W/D)	37/46/22mm
Operating temperature range	0 to +45°C

¹less than 200ms transition

7. Module Inclusion

To add the device to the Z-Wave network:

1. Connect the module according to the diagram above.
2. Set your Z-Wave controller into inclusion mode.
3. Generate quickly¹ 6 pulses on I1 input. The status LED starts blinking with a period of 500ms.
4. The status LED turns OFF at the end of the Inclusion process.

If you are connecting this unit to a Z-Wave Controller that utilizes the S2 security protocol, you may be asked to enter the first 5 digits of Device Specific Key (DSK). You can find it on the label with QR code on the back of the unit.

The device supports SmartStart function. SmartStart enabled products can be added into a Z-Wave network by scanning the Z-Wave QR Code present on the product with a controller providing SmartStart inclusion. No further action is required and the SmartStart product will be added automatically within 10 minutes of being switched on in the network vicinity. The device provides DSK representation on the product, so you can add it manually to the controller.

8. Module Exclusion

To remove the device from the Z-Wave network:

1. Connect the module according to the diagram above.
2. Set your Z-Wave controller into exclusion mode.
3. Generate quickly¹ 6 pulses on I1 input. The status LED starts blinking with a period of 500ms.
4. The status LED turns off at the end of the Exclusion process.

9. Factory Reset

To restore factory configuration:

1. Connect the module according to the diagram above.
2. Generate quickly¹ 6 pulses on I2 input. The status LED turns on.
3. Generate quickly¹ 6 pulses on I1 input. The status LED turns off.

10. Standalone Mode

Standalone mode is the default operating mode of the module, in which the button (monostable or bistable) connected to the input I1 controls the device connected to the output O1, and the button connected to the input I2 controls the device connected to the output O2. This mode can be enabled / disabled using the Standalone feature of the ZWAVE_CONFIG object and further configured using the Standalone features of the ZWAVE_DIN object.

To manually enable / disable standalone mode:

1. Connect the module according to the diagram above.
2. Generate quickly¹ 6 pulses on I2 input. The status LED turns on.
3. Generate quickly¹ 4 pulses on I1 input. The status LED turns off.

11. Warnings and Cautionary Statements



ATTENTION!

- Before proceeding with the assembly, read the installation schematics and full instructions available at www.grenton.com. Failure to follow the guidelines contained in the instructions and other requirements of due care valid as a result of the nature of the equipment (device) may be dangerous to life / health, damage the device or installation to which it is connected, damage



DANGER!

- Danger to life caused by electric current!
- The components of the installation (individual devices) are designed to work in a home electrical installation or directly in its

vicinity. Incorrect connection or use may cause a fire or electric shock.

- All work related to the installation of the device, in particular works involving interference in the electrical installation, may be performed only by a person with appropriate qualifications or licenses.
- When installing the device, make sure that the power supply voltage is disconnected from the circuit in which the device is connected or near which the assembly takes place.

- Device power supply, permissible load or other characteristic parameters have to be in accordance with the device specification, described in particular in the "Technical data" section.
- The product is not intended for children and animals.
- If you have technical questions or comments about the device operation, contact Grenton Technical Support.
- Answers to frequently asked questions can be found at: www.support.grenton.com.

12. CE Marking

The manufacturer declares that the device is in full compliance with the requirements of EU legislation that includes the directives of a new approach appropriate for this equipment. In particular, Grenton Sp. z o.o. declares that the device fulfills the requirements on safety, specified by law, and that it conforms

to the national regulations that implement the appropriate directives: The Radio Equipment Directive (RED - 2014/53/EU), the Low Voltage Directive (LVD 2014/35/EU) and the Directive on the limitation of the use of specific substances in electrical and electronic equipment (RoHS II - 2011/65/EU).



13. Warranty

Warranty available at www.grenton.com/warranty.

14. Manufacturer Contact Details

Grenton Sp. z o.o.
ul. Na Wierzchowiach 3
30-222 Kraków, Poland
www.grenton.com